


Maytag GDE27CA 04 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

SECTION: SUPPORT ASSEMBLY, TIMER, TIMER DIAL & KNOB
 MODEL: DE-D627CA

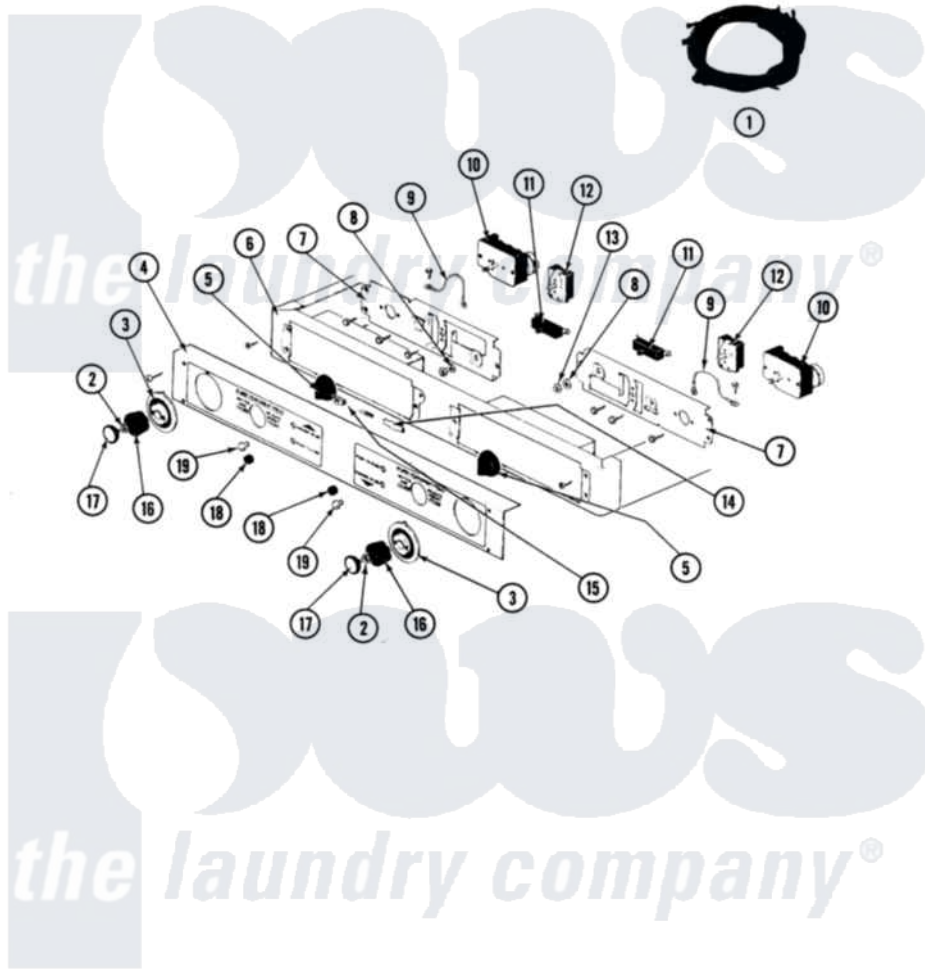

Issue Date: 10/90

12

Maytag [Commercial Maytag GDE27CA Dryer Parts](#) Parts Diagram 04 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	307489			Harness, Main
"	307490			Wire Harness-Canada
"	NLA		Not Available	WIRE HARNESS
002	312273			Nut, Control Knob
003	314725	33001500		Dial, Timer Indicator
004	314664	212277		Screw, No.8 X 1/2 Inch
"	NLA		Not Available	CONTROL PANEL
005	205663			Knob For Selector Switch
006	NLA		Not Available	SUPPORT ASSY
"	Y310632	1163839		Screw
007	910186	99002757		Screw
"	NLA		Not Available	CONTROLS MTG BRACKET
008	312751			Lockwasher, Start Switch
009	205810			Wire, Ground
"	211168	W10139210		Screw, 8-18 X 5/16
"	211252			Screw, Ground Wire

010	Y307296		Timer RPR
"	Y313588	488234	Screw 8-32 X 1/4
011	306940	W10149462	Switch, Push-To-Start
012	307253		Switch, Cycle Selector
"	Y313588	488234	Screw 8-32 X 1/4
013	Y312706	422617	Nut
014	Y201110	Not Available	CONNECTOR, WIRE (INDIC. LIGHT)
015	204075	Not Available	PILOT LAMP (DG MODELS ONLY)
016	314724		Knob For Timer
017	314723	W10133501	Cap, Knob
018	Y312702		Knurled Nut, Start Switch
019	215564		Lens, Indicator Light

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]