


Maytag GDG26CD 01 - FRONT VIEW - CD MODELS

SECTION: FRONT VIEW
MODEL: DE-D626CD

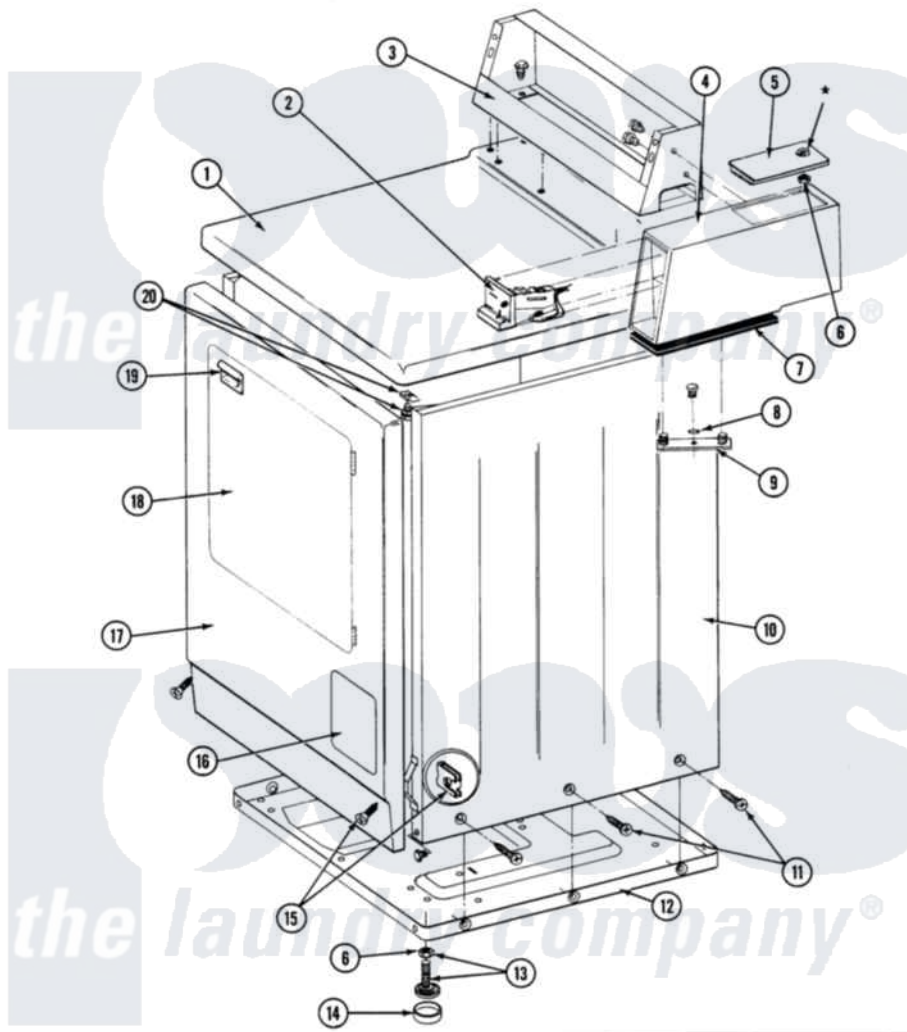

Issue Date: 11/90

2

Maytag [Commercial Maytag GDG26CD Dryer Parts](#) Parts Diagram 01 - FRONT VIEW - CD MODELS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	307105		Not Available	COVER, TOP ASSY. (WHT)
"	NLA		Not Available	(ALM)
002	NLA		Not Available	COIN DROP ASSY.
003	212276	W10116760		Screw
"	NLA		Not Available	CONTROL COVER (WHT)
004	207673	22001407		Case, Coin Slide
"	207673L	22001408		(ALM)
"	NLA		Not Available	(H. WHEAT)
005	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
006	Y052740	62739		Nut, Lock
007	214660			Gasket, Control Center
008	NLA		Not Available	WATER VALVE (WC MODELS 240-50)

009	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	NLA	Not Available	MTG. STRAP----NA
010	NLA	Not Available	CABINET (WHT)
"	Y310632	1163839	Screw
011	213007		Xfor Cabinet See Cabinet, Back
012	Y303361	Not Available	BASE ASSY. (UPPER & LOWER)
013	Y305086		Adjustable Leg And Nut
014	Y314137		Foot, Rubber
015	204439		Screw And Fstner Assembly
016	NLA	Not Available	ACCESS DOOR (WHT)
017	307998L		Front Panel----NA
"	NLA	Not Available	FRONT PANEL ASSY. (WHT)
018	308061	Not Available	DOOR ASSY. COMPLETE (WHT)
"	NLA	Not Available	(ALM)
019	314946		Handle White
"	314972		Handle Door ALM
"	NLA	Not Available	(H. WHEAT)
020	204445		Screw And Fastener Assembly

