


# Maytag GDG31CA 01 - FRONT VIEW-DOOR OPEN

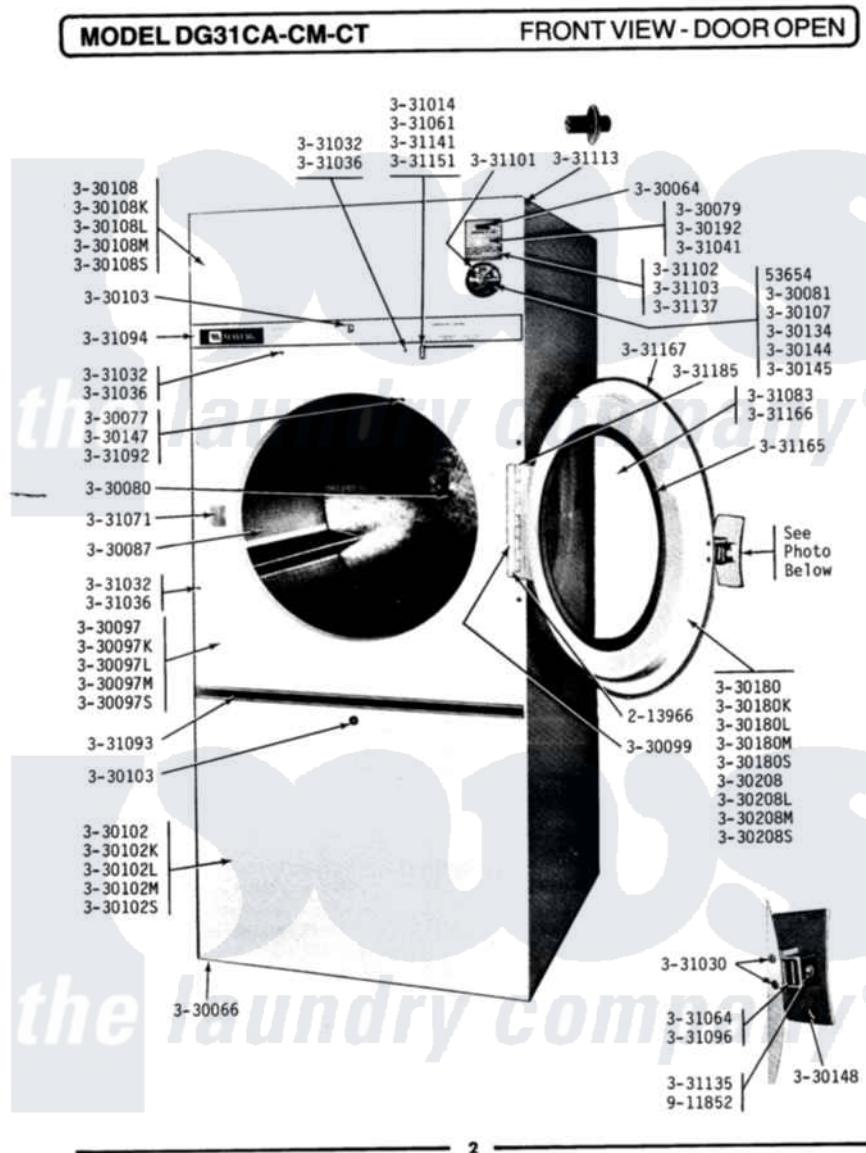

Maytag Commercial Maytag GDG31CA Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
	NI	NLA	Not Available	GULMITE WRENCH No.8
	"	NLA	Not Available	SCREW, No.5-40 X 3/8
003	213966	<a href="#">3400014</a>		Screw
004	<a href="#">Y330064</a>			Pilot Light
	NI	NLA	Not Available	LEVELING LEG
006	<a href="#">Y330077</a>			Door Switch
007	Y330079		Not Available	SWITCH, PUSH-TO-START
008	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
009	<a href="#">330081</a>			Timer - CA 60 Minutes
010	<a href="#">Y330087</a>			Drum Assembly Complete
	NI	NLA	Not Available	FRONT PANEL (WHT)
	"	NLA	Not Available	(ALM)
	"	NLA	Not Available	(H. WHEAT)
	"	NLA	Not Available	HINGE, DOOR
016	<a href="#">Y330102</a>			FRONT PANEL-WHITE
	NI	NLA	Not Available	(ALM)

"	NLA		Not Available	(H. WHEAT)
019	<a href="#">Y330103</a>			Lock
NI	NLA		Not Available	PART NOT USED
"	NLA		Not Available	FRONT PANEL (WHT)
022	330108L		Not Available	FRONT PANEL-ALMOND
023	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
NI	NLA		Not Available	PART NOT USED
"	NLA		Not Available	PART NOT USED
026	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
027	<a href="#">Y330147</a>			Part Not Used
NI	NLA		Not Available	HANDLE & PIN KIT
"	NLA		Not Available	DOOR (WHT)
"	NLA		Not Available	(ALM)
"	NLA		Not Available	(H. WHEAT)
032	Y330192		Not Available	SWITCH, PUSH TO START
NI	NLA		Not Available	DOOR (WHT)
"	NLA		Not Available	(ALM)
"	NLA		Not Available	(H. WHEAT)
036	331014	<a href="#">8281196</a>		Screw
NI	NLA		Not Available	SCREW, HANDLE
038	331032	<a href="#">61002031</a>		Screw, Handle
039	<a href="#">331036</a>			Washer-Front Panel Screws
040	<a href="#">331041</a>			Button-Push-To-Start Switch
041	<a href="#">331061</a>			Knob For Temperature Contro
042	331064		Not Available	MAGNET FOR DOOR HANDLE
043	331071		Not Available	STRIKE PLATE FOR DOOR
044	331083		Not Available	SUPPORT FOR DOOR GLASS
NI	NLA		Not Available	ACTUATOR, DOOR SWITCH
"	NLA		Not Available	TRIM STRIP, LOWER FRONT PANEL
"	NLA		Not Available	TRIM BAR, UPPER PANEL
"	NLA		Not Available	POLE BLOCK, DOOR MAGNET
049	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
NI	NLA		Not Available	INSTRUCTION PLATE
"	NLA		Not Available	PART NOT USED
"	NLA		Not Available	HINGE RIVET
"	NLA		Not Available	DOWEL PIN, HANDLE
"	NLA		Not Available	PART NOT USED
"	NLA		Not Available	SCREW-TEMP CONTROL LEVER
056	<a href="#">331151</a>			Lever-Temperature Control
057	<a href="#">331165</a>			Gasket For Door Glass
058	<a href="#">331166</a>			Glass For Door
059	<a href="#">331167</a>			Gasket For Door-Outer
060	<a href="#">331185</a>			Hinge Pin For Door
061	911852	<a href="#">486009</a>		Lockwasher