


Maytag GDG31CM 01 - FRONT VIEW-DOOR OPEN

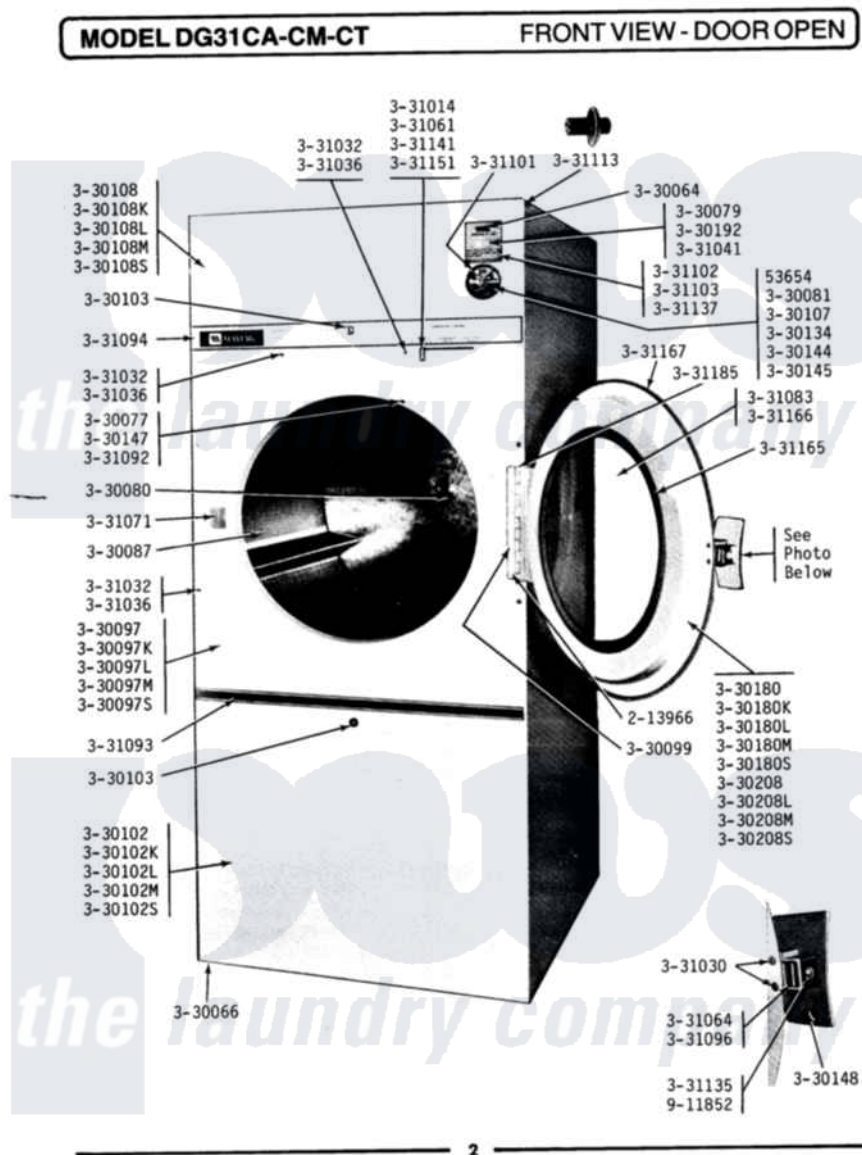

Maytag Commercial Maytag GDG31CM Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
NI	NLA		Not Available	GULMITE WRENCH No.8
"	NLA		Not Available	SCREW, No.5-40 X 3/8
003	213966	3400014		Screw
004	Y330064			Pilot Light
NI	NLA		Not Available	LEVELING LEG
006	Y330077			Door Switch
007	Y330079		Not Available	SWITCH, PUSH-TO-START
008	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
009	330081			Timer - CA 60 Minutes
010	Y330087			Drum Assembly Complete
NI	NLA		Not Available	FRONT PANEL-WHITE
"	NLA		Not Available	FRONT PANEL-ALMOND
"	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
"	NLA		Not Available	HINGE FOR DOOR
"	Y330102			FRONT PANEL-WHITE

"	NLA		Not Available	FRONT PANEL-ALMOND
"	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
"	Y330103			Lock
"	NLA		Not Available	TIMER ACCUMULATOR - CM
"	NLA		Not Available	FRONT PANEL-WHITE
"	330108L		Not Available	FRONT PANEL-ALMOND
022	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
NI	NLA		Not Available	PART NOT USED
"	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
"	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
026	Y330147			Part Not Used
NI	NLA		Not Available	HANDLE & PIN KIT
"	NLA		Not Available	DOOR-WHITE
"	NLA		Not Available	DOOR-ALMOND
"	NLA		Not Available	DOOR-HARVEST WHEAT
"	Y330192		Not Available	SWITCH, PUSH TO START
"	NLA		Not Available	DOOR-WHITE
"	NLA		Not Available	DOOR-ALMOND
"	NLA		Not Available	DOOR-HARVEST WHEAT
"	331014	8281196		Screw
"	NLA		Not Available	SCREW - HANDLE TO DOOR
"	331032	61002031		Screw, Handle
038	331036			Washer-Front Panel Screws
039	331041			Button-Push-To-Start Switch
040	331061			Knob For Temperature Contro
041	331064		Not Available	MAGNET FOR DOOR HANDLE
042	331071		Not Available	STRIKE PLATE FOR DOOR
043	331083		Not Available	SUPPORT FOR DOOR GLASS
NI	NLA		Not Available	ACTUATOR FOR DOOR SWITCH
"	NLA		Not Available	TRIM STRIP-LOWER FRONT PANE
"	NLA		Not Available	TRIM BAR FOR UPPER PANEL
"	NLA		Not Available	POLE BLOCK FOR DOOR MAGNET
"	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
"	NLA		Not Available	PART NOT USED
"	NLA		Not Available	INSTRUCTION PLATE - CM
"	NLA		Not Available	HINGE RIVET
"	NLA		Not Available	DOWEL PIN FOR HANDLE
"	NLA		Not Available	PART NOT USED
"	NLA		Not Available	SCREW-TEMP CONTROL LEVER
"	331151			Lever-Temperature Control
056	331165			Gasket For Door Glass
057	331166			Glass For Door
058	331167			Gasket For Door-Outer
059	331185			Hinge Pin For Door
060	911852	486009		Lockwasher