


# Maytag GDG31CT 01 - FRONT VIEW-DOOR OPEN

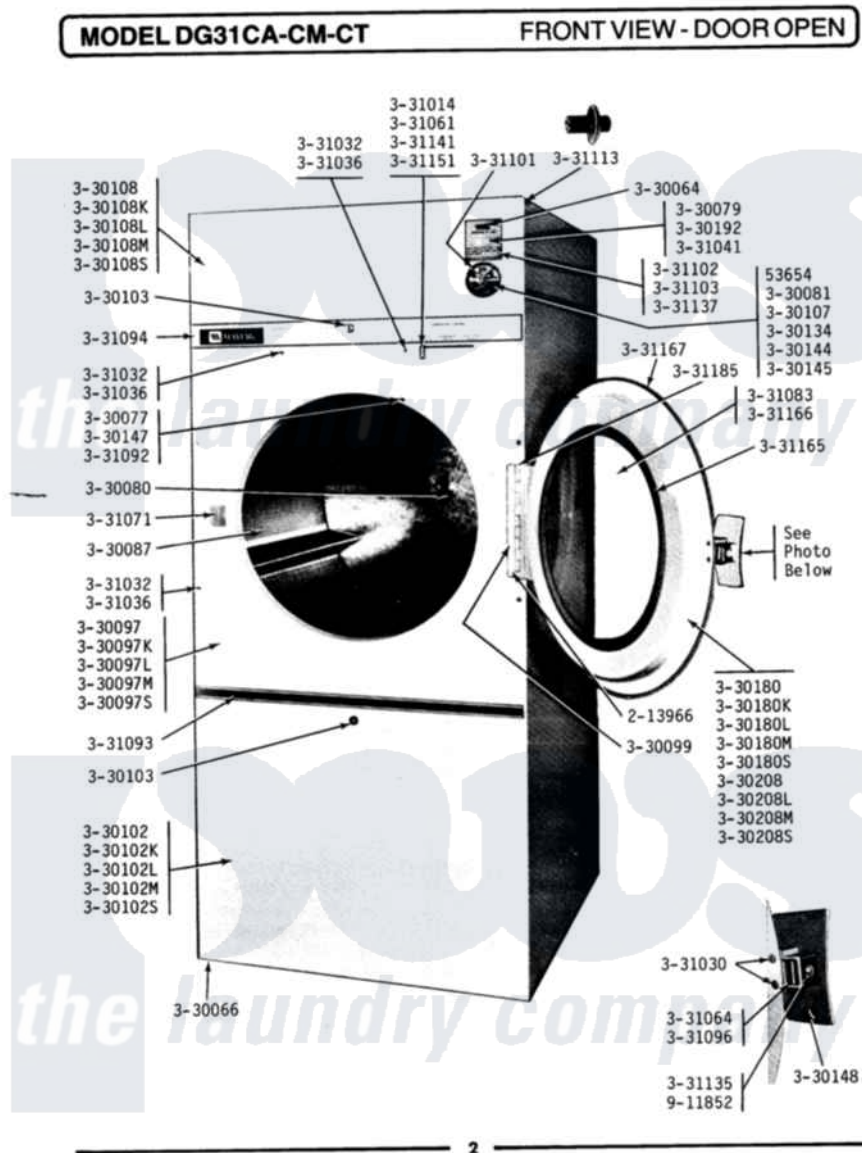

Maytag Commercial Maytag GDG31CT Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
NI	NLA		Not Available	GULMITE WRENCH No.8
"	NLA		Not Available	SCREW, No.5-40 X 3/8
003	213966	<a href="#">3400014</a>		Screw
004	<a href="#">Y330064</a>			Pilot Light
NI	NLA		Not Available	LEVELING LEG
006	<a href="#">Y330077</a>			Door Switch
007	Y330079		Not Available	SWITCH, PUSH-TO-START
008	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
009	<a href="#">330081</a>			Timer - CA 60 Minutes
010	<a href="#">Y330087</a>			Drum Assembly Complete
NI	NLA		Not Available	FRONT PANEL-WHITE
"	NLA		Not Available	FRONT PANEL-ALMOND
"	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
"	NLA		Not Available	HINGE FOR DOOR
"	<a href="#">Y330102</a>			FRONT PANEL-WHITE

"	NLA		Not Available	FRONT PANEL-ALMOND
"	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
"	<a href="#">Y330103</a>			Lock
"	NLA		Not Available	FRONT PANEL-WHITE
"	330108L		Not Available	FRONT PANEL-ALMOND
"	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
022	NLA		Not Available	TIMER W/KNOB AND PIN
NI	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
"	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
"	<a href="#">Y330147</a>			Part Not Used
026	NLA		Not Available	HANDLE & PIN KIT
NI	NLA		Not Available	DOOR-WHITE
"	NLA		Not Available	DOOR-ALMOND
"	NLA		Not Available	DOOR-HARVEST WHEAT
"	Y330192		Not Available	SWITCH, PUSH TO START
"	NLA		Not Available	DOOR-WHITE
"	NLA		Not Available	DOOR-ALMOND
"	NLA		Not Available	DOOR-HARVEST WHEAT
"	331014	<a href="#">8281196</a>		Screw
"	NLA		Not Available	SCREW - HANDLE TO DOOR
"	331032	<a href="#">61002031</a>		Screw, Handle
"	<a href="#">331036</a>			Washer-Front Panel Screws
038	<a href="#">331041</a>			Button-Push-To-Start Switch
039	<a href="#">331061</a>			Knob For Temperature Contro
040	331064		Not Available	MAGNET FOR DOOR HANDLE
041	331071		Not Available	STRIKE PLATE FOR DOOR
042	331083		Not Available	SUPPORT FOR DOOR GLASS
043	NLA		Not Available	ACTUATOR FOR DOOR SWITCH
NI	NLA		Not Available	TRIM STRIP-LOWER FRONT PANE
"	NLA		Not Available	TRIM BAR FOR UPPER PANEL
"	NLA		Not Available	POLE BLOCK FOR DOOR MAGNET
"	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
"	NLA		Not Available	HINGE RIVET
"	NLA		Not Available	DOWEL PIN FOR HANDLE
"	NLA		Not Available	INSTRUCTION PLATE-CT
"	NLA		Not Available	SCREW-TEMP CONTROL LEVER
"	<a href="#">331151</a>			Lever-Temperature Control
"	<a href="#">331165</a>			Gasket For Door Glass
"	<a href="#">331166</a>			Glass For Door
"	<a href="#">331167</a>			Gasket For Door-Outer
056	<a href="#">331185</a>			Hinge Pin For Door
057	911852	<a href="#">486009</a>		Lockwasher