


# Maytag GDG31CT 03 - TIMER ACCUMULATORS & TICKET CONTROL

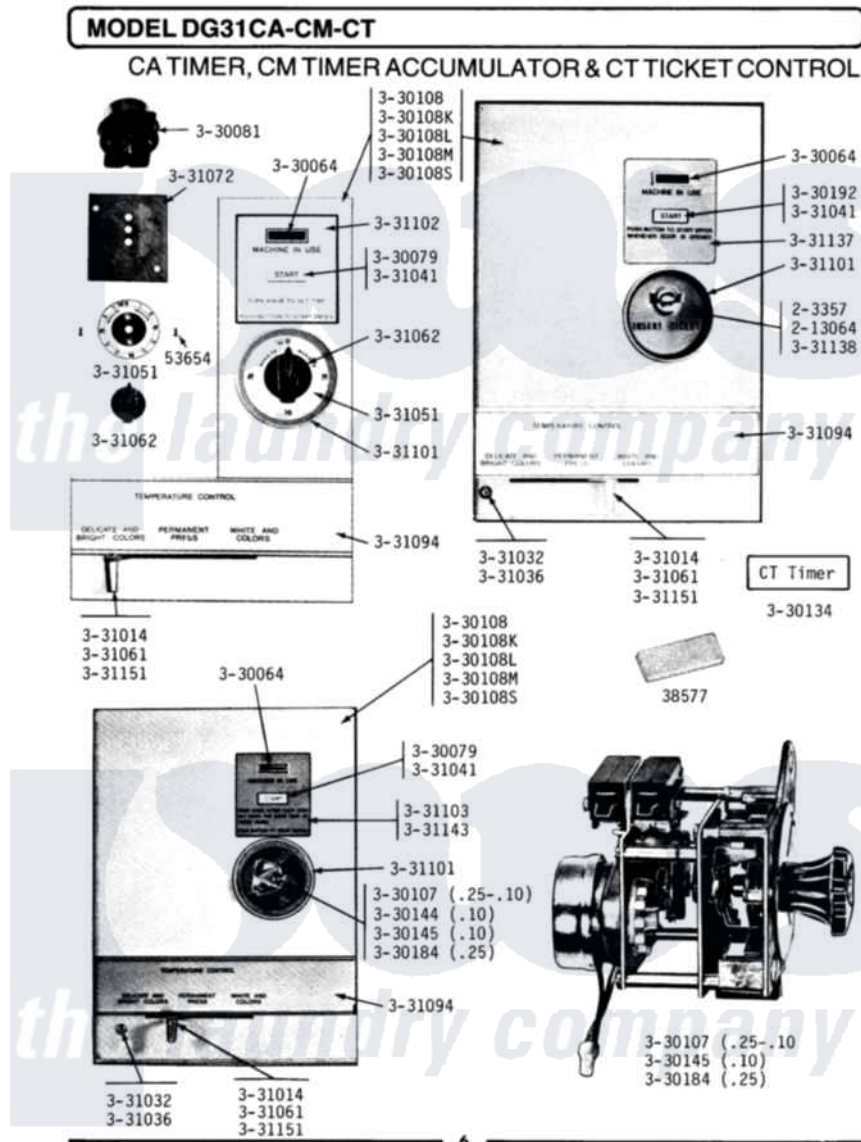

Maytag Commercial Maytag GDG31CT Dryer Parts Parts Diagram 03 - TIMER ACCUMULATORS & TICKET CONTROL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
NI	NLA		Not Available	TOOL TO ADJUST TIMING SWITC
"	NLA		Not Available	SCREW, No.5-40 X 3/8
"	NLA		Not Available	PALNUT
"	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
005	<a href="#">Y330064</a>			Pilot Light
006	Y330079		Not Available	SWITCH, PUSH-TO-START
007	<a href="#">330081</a>			Timer - CA 60 Minutes
NI	NLA		Not Available	TIMER ACCUMULATOR - CM
"	NLA		Not Available	FRONT PANEL-WHITE
010	330108L		Not Available	FRONT PANEL-ALMOND
011	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
NI	NLA		Not Available	TIMER W/KNOB AND PIN
"	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
014	Y330145		Not Available	CONTA ACCUMULATOR

014	<a href="#">330143</a>	Not Available	ASSEMBLY
015	<a href="#">330184</a>		Timer Accumulator-25
016	Y330192	Not Available	SWITCH, PUSH TO START
017	331014	<a href="#">8281196</a>	Screw
018	331032	<a href="#">61002031</a>	Screw, Handle
019	<a href="#">331036</a>		Washer-Front Panel Screws
020	<a href="#">331041</a>		Button-Push-To-Start Switch
NI	NLA	Not Available	TIMER DIAL - CA 60 MINUTES
022	<a href="#">331061</a>		Knob For Temperature Contro
NI	NLA	Not Available	KNOB FOR TIMER
"	NLA	Not Available	MOUNTING PLATE FOR TIMER
"	NLA	Not Available	TRIM BAR FOR UPPER PANEL
026	331101	Not Available	BEZEL FOR TIMER-ACCUMULATOR
NI	NLA	Not Available	INSTRUCTION PLATE (CA)
"	NLA	Not Available	INSTRUCTION PLATE - CM
"	NLA	Not Available	INSTRUCTION PLATE-CT
"	NLA	Not Available	MOUNTING PLATE-TICKET CONT
"	NLA	Not Available	INSTRUCT LABEL - SINGLE COI
032	<a href="#">331151</a>		Lever-Temperature Control

