


Maytag LA26CD 03 - CONTROL CENTER

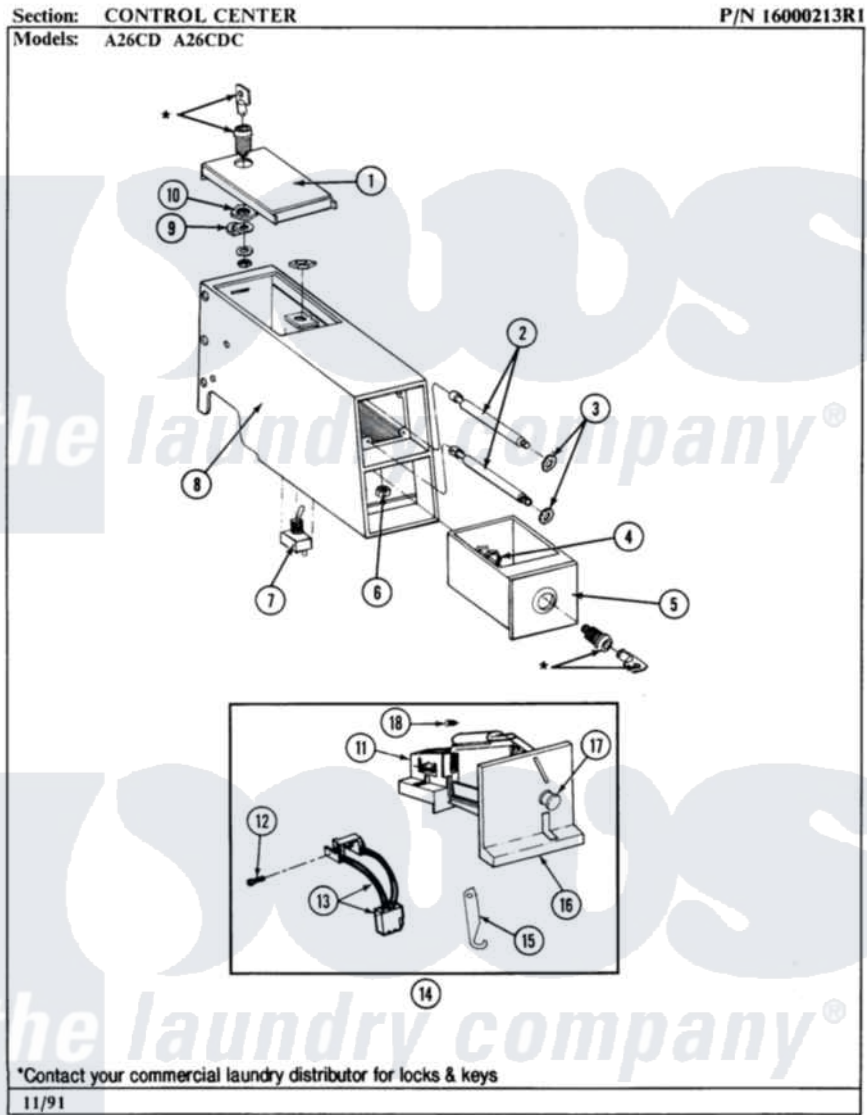

6

Maytag [Commercial Maytag LA26CD Washer Parts](#) Parts Diagram 03 - CONTROL CENTER
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
002	213035			Bolt, Locking
003	910181			Lockwasher, Terminal Block
004	212328	W10139762		Hex Nut, 3/4-27
005	207912	208884		Coin Box K
"	207912L	208884		Coin Box K
"	NLA		Not Available	COIN BOX - HARVEST WHEAT
006	Y052740	62739		Nut, Lock
007	206794		Not Available	SWITCH (W/NUT)
008	207940	22001407		Case, Coin Slide
"	207940L	22001408		(ALM)
"	NLA		Not Available	CONTROL CENTER CASE HARVEST WH

009	213750	W10133266	Cam-Lock
010	212328	W10139762	Hex Nut, 3/4-27
011	207947		Rejector, Coin
012	314665		Screw, Switch Assembly
013	206799		Optic Switch Assembly
014	207948		Coin Drop Assembly
015	216011		Spring, Return Button
016	216010	Y208306	Kit- Mtg C
017	216009		BUTTON, RETURN
018	NLA	Not Available	SCREW FOR CAUTION PLATE----NA

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]