


Maytag LDE18CS 03 - CONTROL PANEL-REAR VIEW

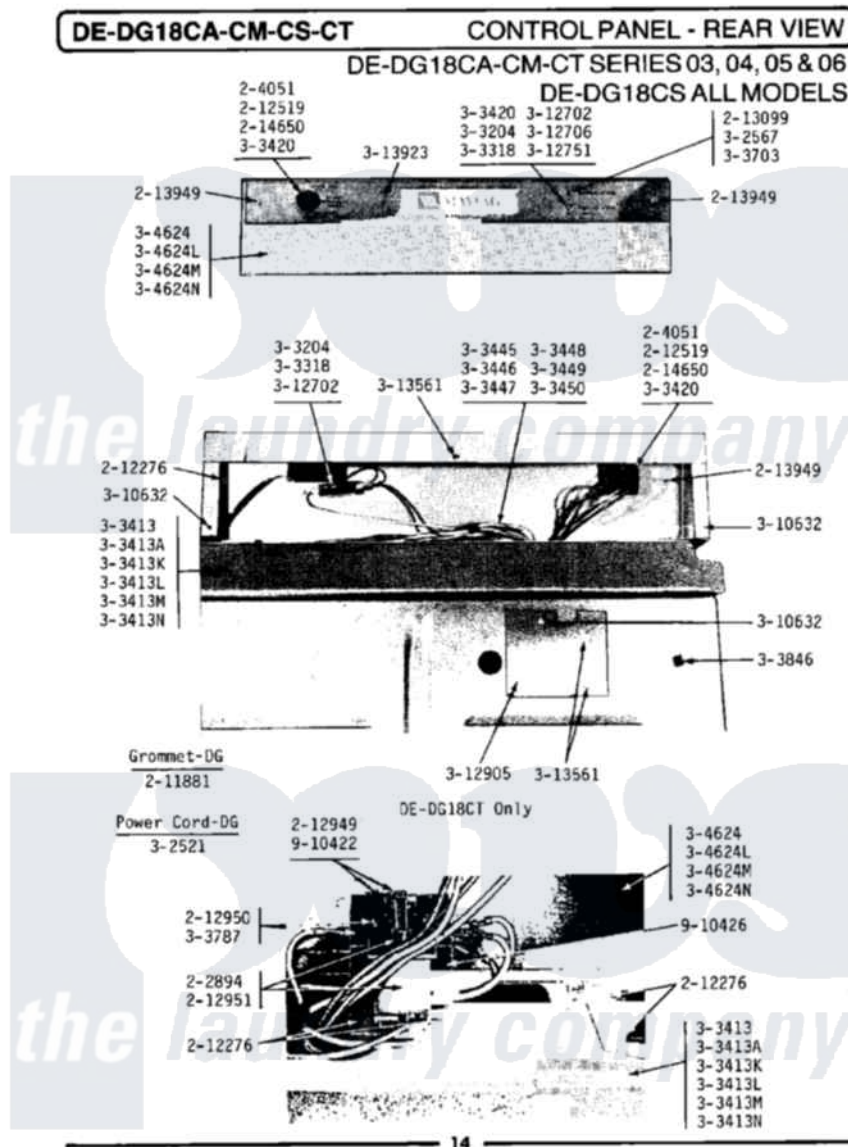

Maytag Commercial Maytag LDE18CS Dryer Parts Parts Diagram 03 - CONTROL PANEL-REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	22204051		Knob
002	212276	W10116760		Screw
003	212519	488234		Screw 8-32 X 1/4
004	212949	22001866		Screw, Relay
005	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	212951			Screw, No.6-32 X 1/4 Inch
007	213099			Lens For Control Panel
008	213949			Screw, No.8-18 X 5/16 Inch
009	214650			Screw For 2-4051 Knob
010	Y303204			Start Switch With Nuts
011	NLA		Not Available	TOP COVER-WHITE
012	NLA		Not Available	TOP COVER-ALMOND
013	NLA		Not Available	TOP COVER-HARVEST WHEAT
014	Y303420		Not Available	SELECTOR SWITCH
015	Y303445		Not Available	MAIN WIRE HARNESS

016	NLA		Not Available	MAIN WIRE HARNESS
017	Y303703			Pilot Light
018	NLA		Not Available	SCREW & WASHER ASSY.
019	NLA		Not Available	CONTROL COVER-WHITE
020	NLA		Not Available	CONTROL COVER-ALMOND
021	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
022	Y310632	1163839		Screw
023	Y311423	489483		Screw 10-32 X 1/2
024	NLA		Not Available	BACK FOR CONTROL PANEL
025	Y312702			Knurled Nut, Start Switch
026	Y312706	422617		Nut
027	312751			Lockwasher, Start Switch
028	Y312905		Not Available	COVER, TERMINAL
029	Y313561			Screw---NA
030	NLA		Not Available	CONTROL PANEL

