


# Maytag LDE27CA 04 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

SECTION: SUPPORT ASSEMBLY, TIMER, TIMER DIAL & KNOB  
 MODEL: DE-D627CA

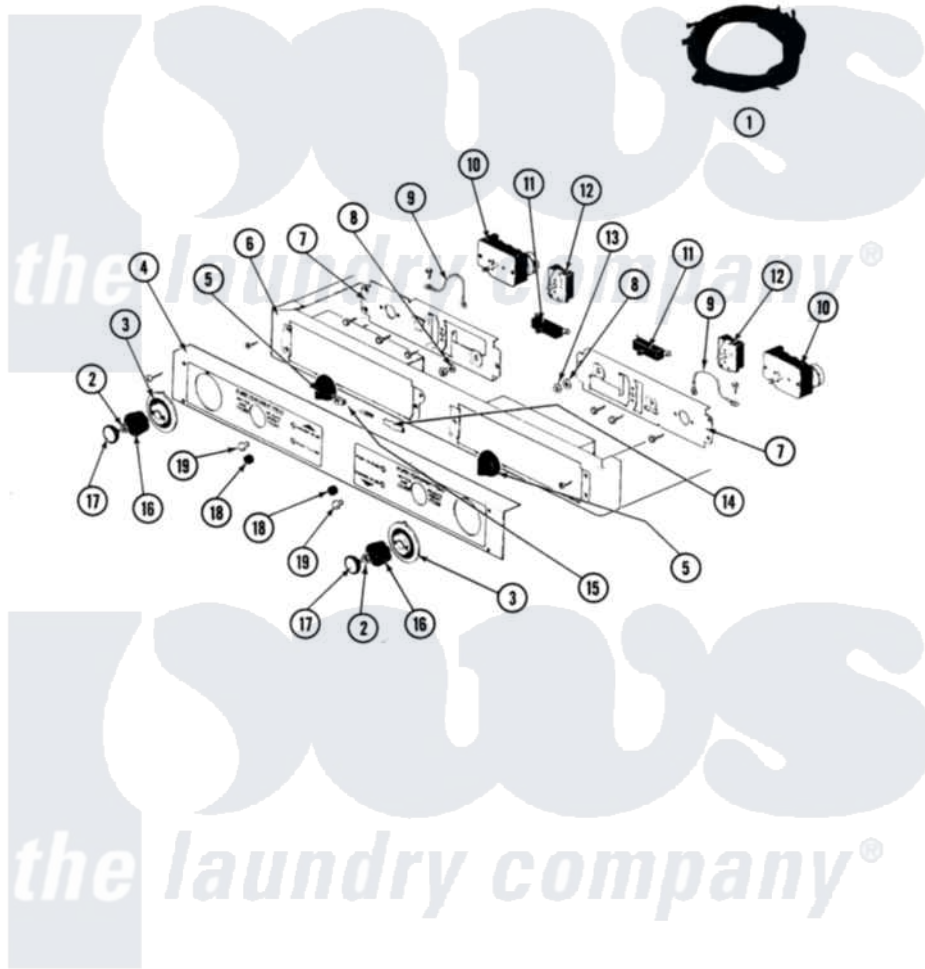

Issue Date: 10/90

12

Maytag Commercial Maytag LDE27CA Dryer Parts Parts Diagram 04 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">307489</a>			Harness, Main
"	<a href="#">307490</a>			Wire Harness-Canada
"	NLA		Not Available	WIRE HARNESS
002	<a href="#">312273</a>			Nut, Control Knob
003	314725	<a href="#">33001500</a>		Dial, Timer Indicator
004	314664	<a href="#">212277</a>		Screw, No.8 X 1/2 Inch
"	NLA		Not Available	CONTROL PANEL
005	<a href="#">205663</a>			Knob For Selector Switch
006	NLA		Not Available	SUPPORT ASSY
"	Y310632	<a href="#">1163839</a>		Screw
007	910186	<a href="#">99002757</a>		Screw
"	NLA		Not Available	CONTROLS MTG BRACKET
008	<a href="#">312751</a>			Lockwasher, Start Switch
009	<a href="#">205810</a>			Wire, Ground
"	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
"	<a href="#">211252</a>			Screw, Ground Wire

010	<a href="#">Y307296</a>		Timer RPR
"	<a href="#">Y313588</a>	<a href="#">488234</a>	Screw 8-32 X 1/4
011	306940	<a href="#">W10149462</a>	Switch, Push-To-Start
012	<a href="#">307253</a>		Switch, Cycle Selector
"	<a href="#">Y313588</a>	<a href="#">488234</a>	Screw 8-32 X 1/4
013	Y312706	<a href="#">422617</a>	Nut
014	Y201110	Not Available	CONNECTOR, WIRE (INDIC. LIGHT)
015	204075	Not Available	PILOT LAMP (DG MODELS ONLY)
016	<a href="#">314724</a>		Knob For Timer
017	314723	<a href="#">W10133501</a>	Cap, Knob
018	<a href="#">Y312702</a>		Knurled Nut, Start Switch
019	<a href="#">215564</a>		Lens, Indicator Light

*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>