

Maytag LDG18CT 04 - CONTROL PANEL-REAR VIEW



[Maytag Commercial Maytag LDG18CT Dryer Parts Parts Diagram 04 - CONTROL PANEL-REAR VIEW](#)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	202894			Solenoid For Relay Assembly
002	204051	22204051		Knob
003	211881			Grommet, Cord Part Not Used- Gas Models Only
004	212276	W10116760		Screw
005	212519	488234		Screw 8-32 X 1/4
006	212949	22001866		Screw, Relay
007	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
008	212951			Screw, No.6-32 X 1/4 Inch
009	213099			Lens For Control Panel
010	213949			Screw, No.8-18 X 5/16 Inch
011	214650			Screw For 2-4051 Knob
012	NLA		Not Available	CONTROL COVER-WHITE
013	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
014	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY

015	NLA		Not Available	PILOT LIGHT
016	Y303318			Switch Assembly With Hex Nu
017	NLA		Not Available	CABINET-WHITE
018	NLA		Not Available	CABINET-ALMOND
019	NLA		Not Available	CABINET-HARVEST WHEAT
020	NLA		Not Available	TOP COVER-WHITE
021	NLA		Not Available	TOP COVER-ALMOND
022	NLA		Not Available	TOP COVER-HARVEST WHEAT
023	Y303420		Not Available	SELECTOR SWITCH
024	NLA		Not Available	MAIN WIRE HARNESS
025	NLA		Not Available	MAIN WIRE HARNESS
026	Y303787		Not Available	SWITCH FOR RELAY
027	NLA		Not Available	SCREW & WASHER ASSY.
028	310557			Washer
029	Y310632	1163839		Screw
030	Y311423	489483		Screw 10-32 X 1/2
031	NLA		Not Available	BACK FOR CONTROL PANEL
032	Y312702			Knurled Nut, Start Switch
033	Y312706	422617		Nut
034	312751			Lockwasher, Start Switch
035	Y312905		Not Available	COVER, TERMINAL
036	NLA		Not Available	CONTROL PANEL
037	Y313561			Screw---NA
038	NLA		Not Available	SPRING LEVER FOR RELAY
039	NLA		Not Available	RELAY BRACKET
040	910768	M0280301		Tie Electr

the laundry company[®]

Howes
the laundry company[®]