


# Maytag LDG26CA 03 - CONTROL PANEL-CA MODELS

SECTION: CA CONTROL PANEL  
 MODEL: DE-DG26CA

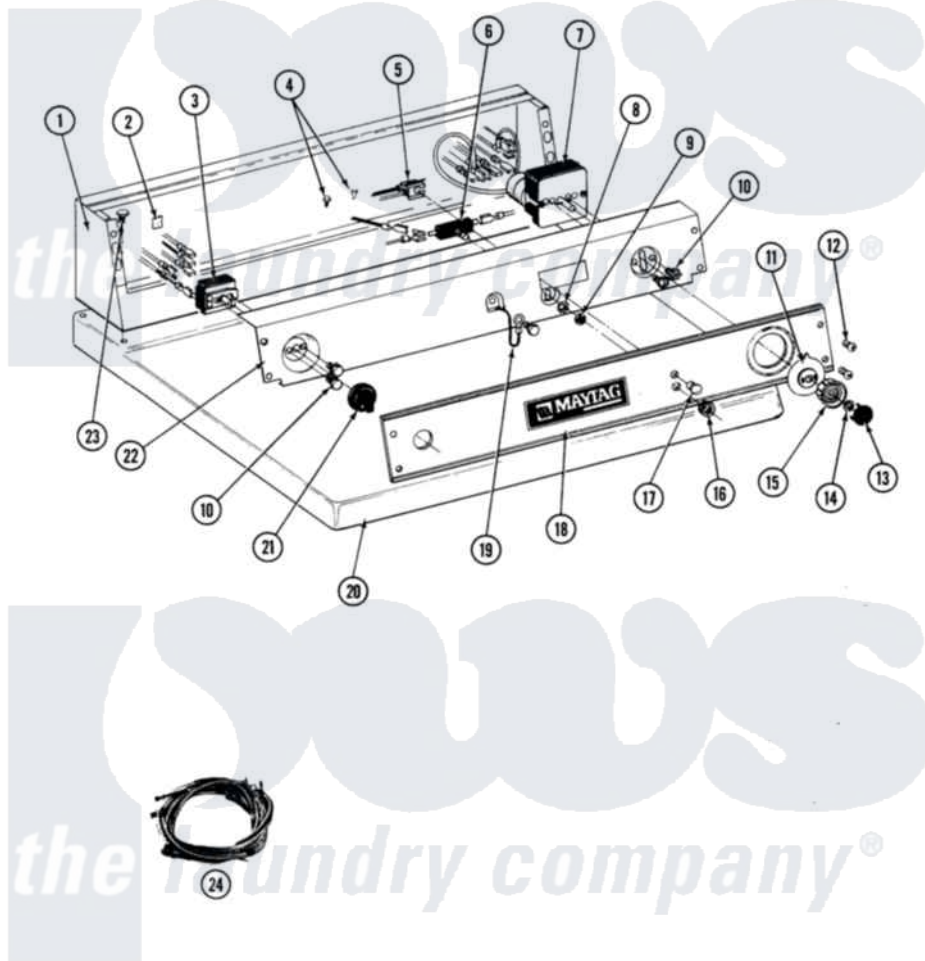

Issue Date: 11/90

22

Maytag [Commercial Maytag LDG26CA Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL-CA MODELS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	(WHT)
002	<a href="#">215003</a>			Fastener, Panel And Bracket
003	307237	<a href="#">W10327105</a>		Switch, Cycle Selection
004	<a href="#">211294</a>	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	Y314322	<a href="#">211251</a>		Screw, Transformer
005	204075		Not Available	PILOT LAMP (DG MODELS ONLY)
006	306940	<a href="#">W10149462</a>		Switch, Push-To-Start
007	<a href="#">305214</a>			Timer
"	305215	<a href="#">305214</a>		Timer
"	<a href="#">Y304585</a>			Timer Motor RPR For 305214 Timer Only
008	<a href="#">312751</a>			Lockwasher, Start Switch
009	Y312706	<a href="#">422617</a>		Nut
010	<a href="#">Y313588</a>	<a href="#">488234</a>		Screw 8-32 X 1/4
011	314725	<a href="#">33001500</a>		Dial, Timer Indicator

012	<a href="#">212277</a>		Screw, No.8 X 1/2 Inch
013	314723	<a href="#">W10133501</a>	Cap, Knob
014	<a href="#">312273</a>		Nut, Control Knob
015	<a href="#">314724</a>		Knob For Timer
016	<a href="#">Y312702</a>		Knurled Nut, Start Switch
017	<a href="#">215564</a>		Lens, Indicator Light
018	314909	<a href="#">33001021</a>	Panel, Control
019	<a href="#">205810</a>		Wire, Ground
"	<a href="#">211252</a>		Screw, Ground Wire
020	<a href="#">307104</a>		Top Cover Assembly
"	NLA	Not Available	(ALM)
021	<a href="#">306938</a>		Knob, Selector Switch
022	NLA	Not Available	BACK-UP PLATE (WHITE)
023	212276	<a href="#">W10116760</a>	Screw
024	NLA	Not Available	WIRE HARNESS

