


Maytag LDG26CS 01 - CONTROL PANEL

MODEL DE-DG26CS CS CONTROL PANEL

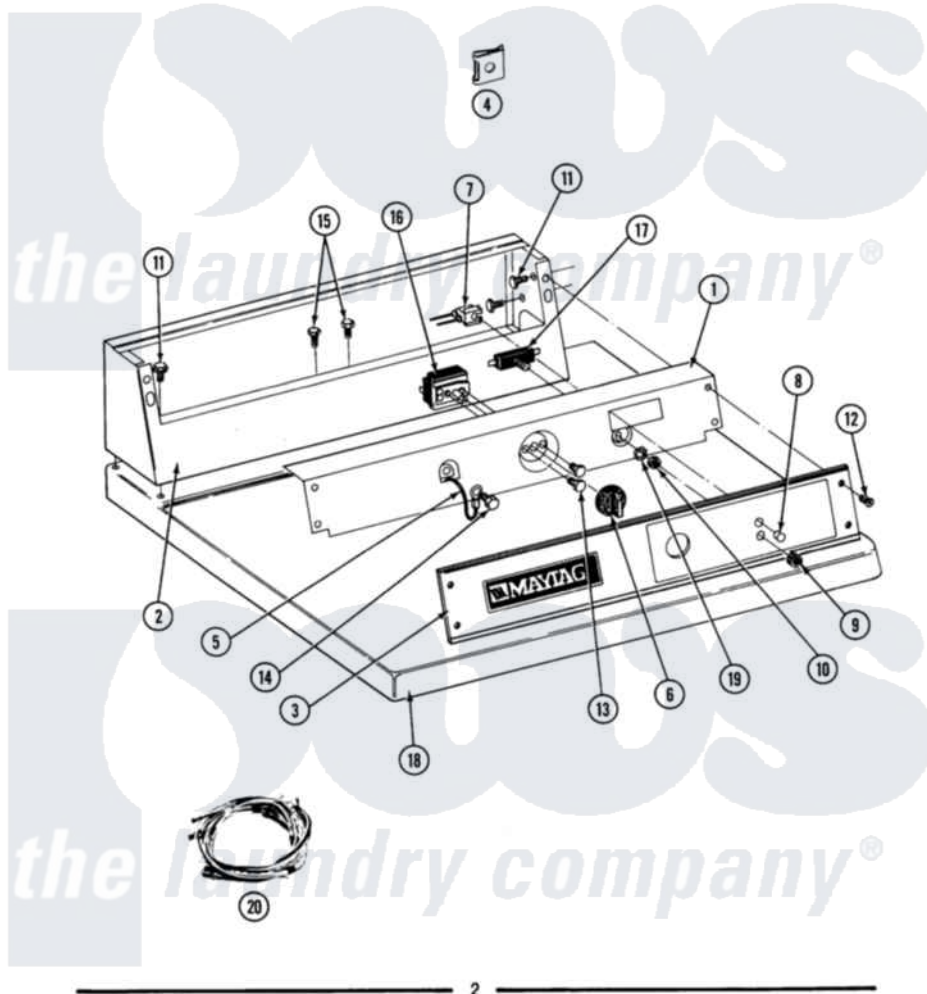

2

Maytag [Commercial Maytag LDG26CS Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	314912		Not Available	BRACKET, CONTROL PANEL (WHT)
"	NLA		Not Available	(ALM)
002	NLA		Not Available	CONTROL COVER (WHT)
003	NLA		Not Available	CONTROL PANEL
004	215003			Fastener, Panel And Bracket
005	205810			Wire, Ground
006	306938			Knob, Selector Switch
007	204075		Not Available	PILOT LAMP (DG MODELS ONLY)
"	Y305396		Not Available	LAMP, INDICATOR
008	215564			Lens, Indicator Light
009	Y312702			Knurled Nut, Start Switch
010	Y312706	422617		Nut
011	212276	W10116760		Screw
"	212276	W10116760		Screw
012	212277			Screw, No.8 X 1/2 Inch

013	Y313588	488234		Screw 8-32 X 1/4
014	211252			Screw, Ground Wire
015	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	Y314322	211251		Screw, Transformer
016	307237	W10327105		Switch, Cycle Selection
017	306940	W10149462		Switch, Push-To-Start
018	307105		Not Available	COVER, TOP ASSY. (WHT)
"	NLA		Not Available	(ALM)
019	312751			Lockwasher, Start Switch
020	Y307175		Not Available	WIRE HARNESS, MAIN
"	307280			Harness, Wire

the laundry company[®]

the laundry company[®]

the laundry company[®]