


# Maytag LDG31CM 01 - FRONT VIEW-DOOR OPEN

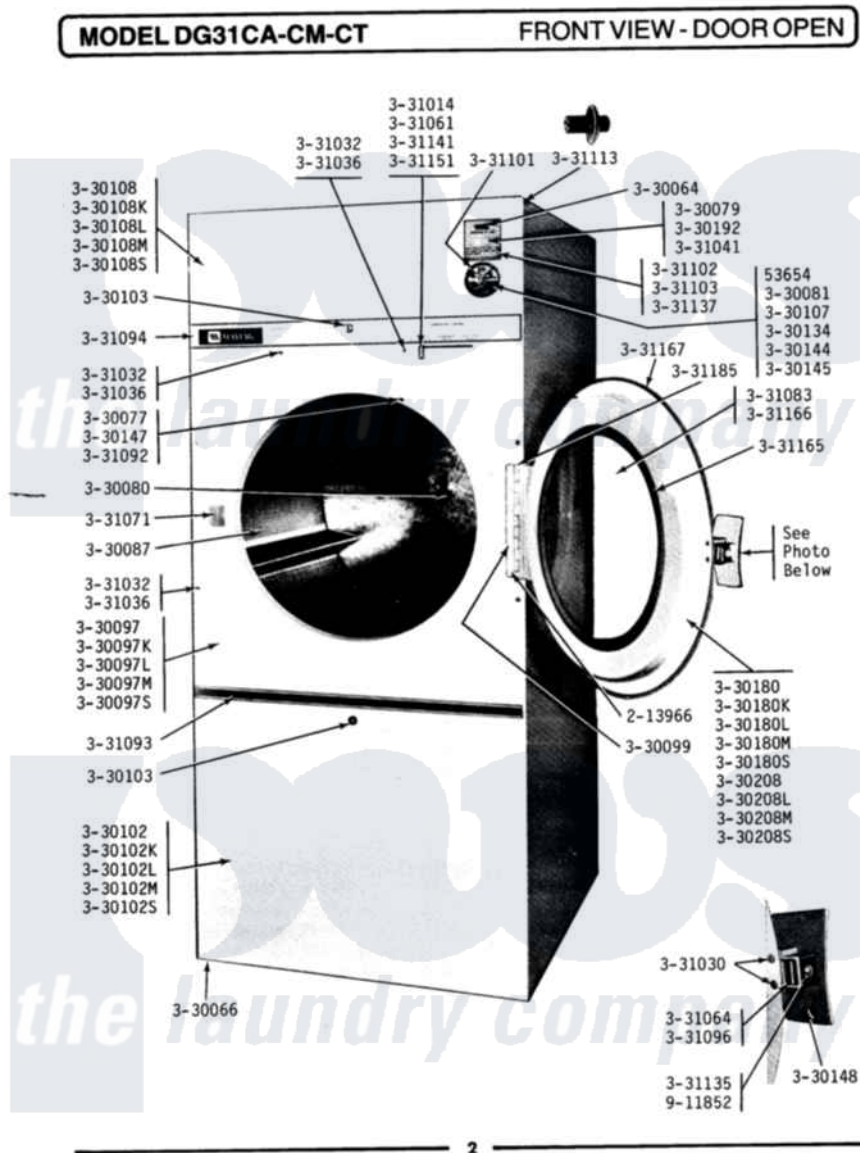

Maytag Commercial Maytag LDG31CM Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	GULMITE WRENCH No.8
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	213966	<a href="#">3400014</a>		Screw
004	<a href="#">Y330064</a>			Pilot Light
005	NLA		Not Available	LEVELING LEG
006	<a href="#">Y330077</a>			Door Switch
007	Y330079		Not Available	SWITCH, PUSH-TO-START
008	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
009	<a href="#">330081</a>			Timer - CA 60 Minutes
010	<a href="#">Y330087</a>			Drum Assembly Complete
011	NLA		Not Available	FRONT PANEL-WHITE
012	NLA		Not Available	FRONT PANEL-ALMOND
013	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
014	NLA		Not Available	HINGE FOR DOOR
015	<a href="#">Y330102</a>			FRONT PANEL-WHITE

016	NLA		Not Available	FRONT PANEL-ALMOND
017	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
018	<a href="#">Y330103</a>			Lock
019	NLA		Not Available	TIMER ACCUMULATOR - CM
020	NLA		Not Available	FRONT PANEL-WHITE
021	330108L		Not Available	FRONT PANEL-ALMOND
022	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
023	NLA		Not Available	PART NOT USED
024	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
025	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
026	<a href="#">Y330147</a>			Part Not Used
027	NLA		Not Available	HANDLE & PIN KIT
028	NLA		Not Available	DOOR-WHITE
029	NLA		Not Available	DOOR-ALMOND
030	NLA		Not Available	DOOR-HARVEST WHEAT
031	Y330192		Not Available	SWITCH, PUSH TO START
032	NLA		Not Available	DOOR-WHITE
033	NLA		Not Available	DOOR-ALMOND
034	NLA		Not Available	DOOR-HARVEST WHEAT
035	331014	<a href="#">8281196</a>		Screw
036	NLA		Not Available	SCREW - HANDLE TO DOOR
037	331032	<a href="#">61002031</a>		Screw, Handle
038	<a href="#">331036</a>			Washer-Front Panel Screws
039	<a href="#">331041</a>			Button-Push-To-Start Switch
040	<a href="#">331061</a>			Knob For Temperature Contro
041	331064		Not Available	MAGNET FOR DOOR HANDLE
042	331071		Not Available	STRIKE PLATE FOR DOOR
043	331083		Not Available	SUPPORT FOR DOOR GLASS
044	NLA		Not Available	ACTUATOR FOR DOOR SWITCH
045	NLA		Not Available	TRIM STRIP-LOWER FRONT PANE
046	NLA		Not Available	TRIM BAR FOR UPPER PANEL
047	NLA		Not Available	POLE BLOCK FOR DOOR MAGNET
048	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
049	NLA		Not Available	PART NOT USED
050	NLA		Not Available	INSTRUCTION PLATE - CM
051	NLA		Not Available	HINGE RIVET
052	NLA		Not Available	DOWEL PIN FOR HANDLE
053	NLA		Not Available	PART NOT USED
054	NLA		Not Available	SCREW-TEMP CONTROL LEVER
055	<a href="#">331151</a>			Lever-Temperature Control
056	<a href="#">331165</a>			Gasket For Door Glass
057	<a href="#">331166</a>			Glass For Door
058	<a href="#">331167</a>			Gasket For Door-Outer
059	<a href="#">331185</a>			Hinge Pin For Door
060	911852	<a href="#">486009</a>		Lockwasher