


Maytag LDGS30PC1 05 - UPPER FRONT PANEL ASSEMBLY

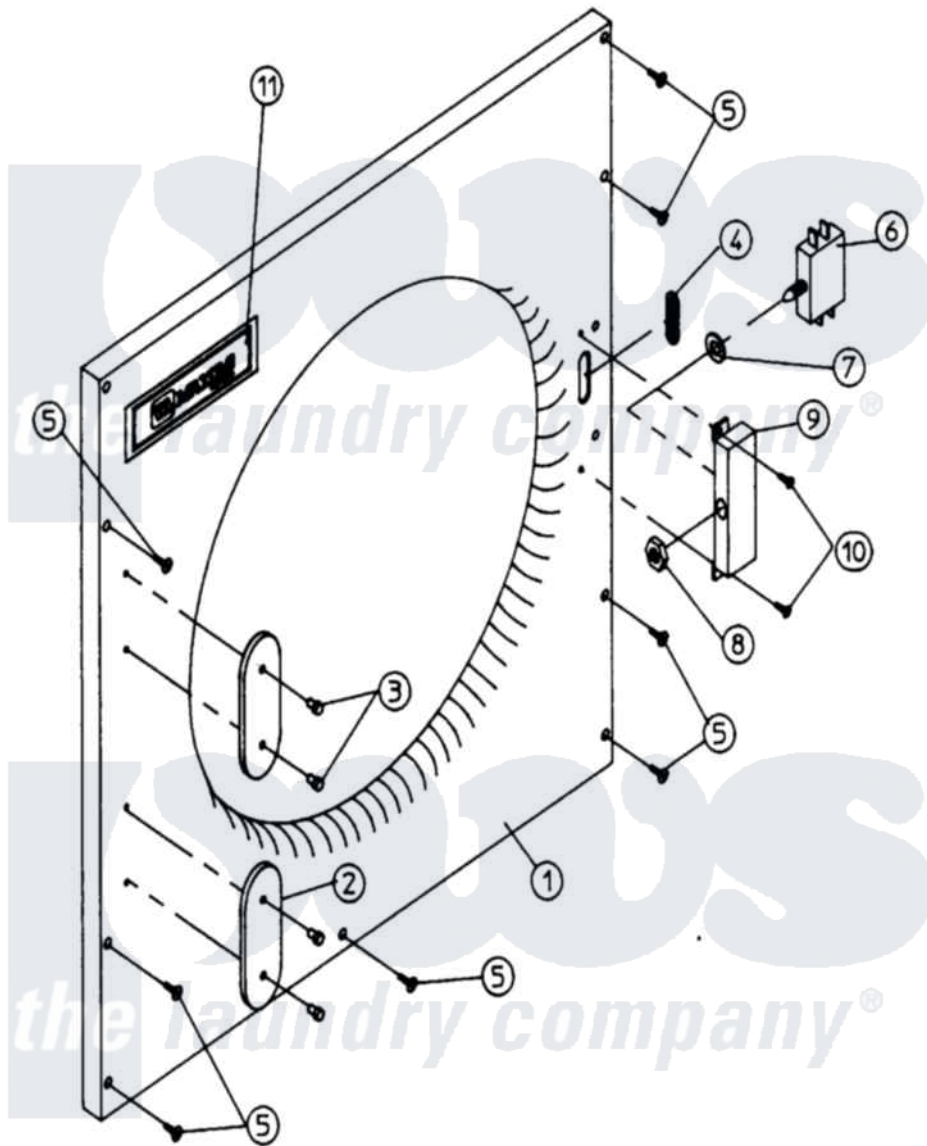

Maytag [Commercial Maytag LDGS30PC1 Dryer Parts](#) Parts Diagram 05 - UPPER FRONT PANEL ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
000	W10124350		Not Available	ORDER PARTS FROM AMERICAN DRYER CORP AT 508-678-9000
001	A880114	W10147949		330 430-To
002	A170340	170340		3 1 2 SS
003	A154200	154200		5 32 RIVE
004	A121405	121405		Rubber Gro
005	A150415		Not Available	SCREW, CRIMPTITE (PH. RD.HD.) (No.10-16 X 1/2` PH. RD. HD.)
006	A137003	137003		Door Switch
007	A401551		Not Available	DOOR SWITCH SPACER/WASHER
008	A152003	152003		3 8-32 X 1
009	A313209	W10146841		Main DR SW
"	A870010	W10147883		Main Door
010	A150301	150301		8-18 X 7
011	A112343	112343		Maytag Log

"	A404500	WB22X55	Switch
"	A404502	404502	White 0.6
"	A870011	W10147884	Logo Doubl

