


Maytag MAF18MC4AW 01 - FINAL ASSEMBLY (MAF18MC4Ax)

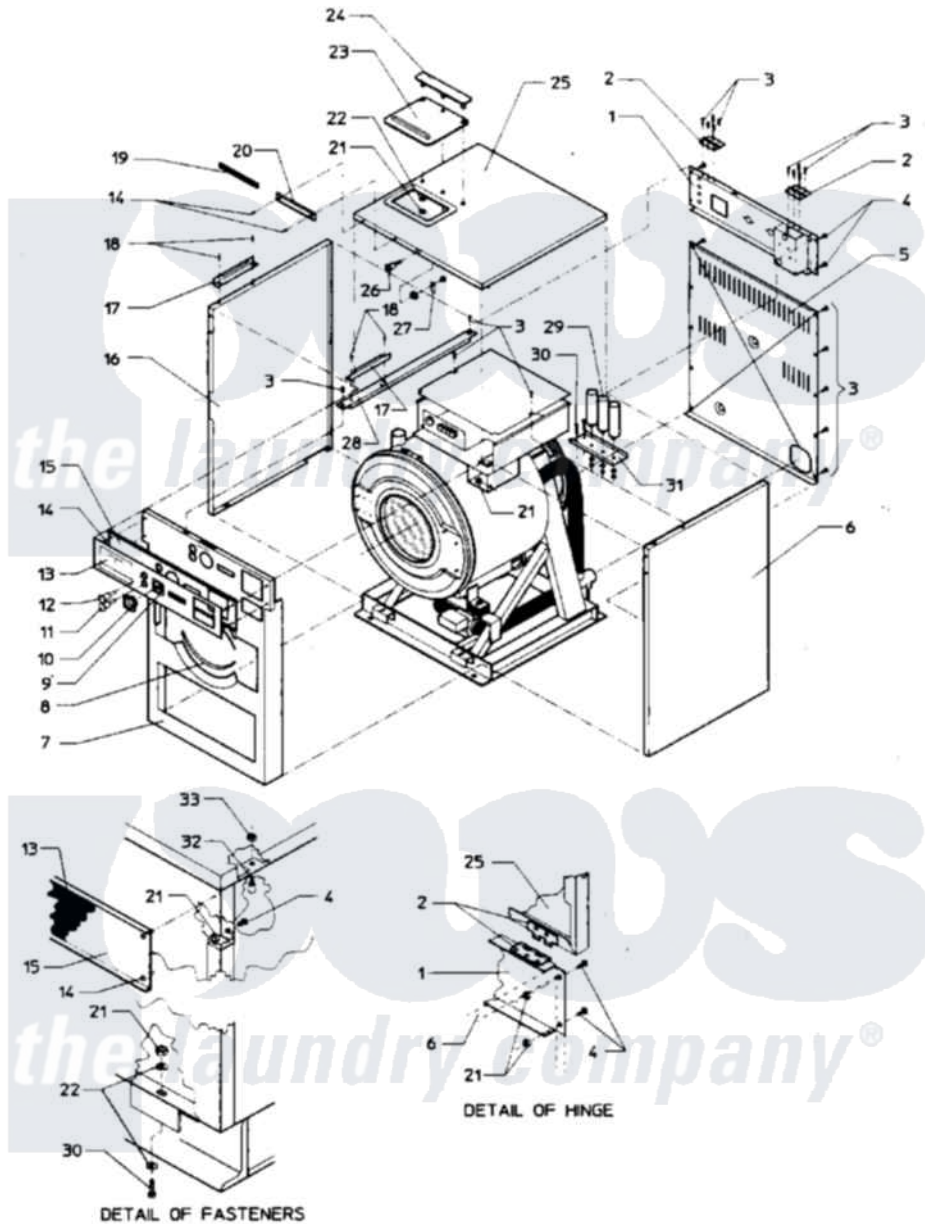

Maytag [Commercial Maytag MAF18MC4AW Washer Parts](#) Parts Diagram 01 - FINAL ASSEMBLY (MAF18MC4Ax)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	24001169			Panel Kit, Valve
002	24001676		Not Available	HINGE, TOP COVER (NOTE: 18003069 AFTER SERIAL
"	Y24001300			Hinge
003	24001301	67006964		Screw, Glide
004	24001323			Screw
005	Y24001400		Not Available	KIT, PANEL (REAR)
006	24001162		Not Available	PANEL KIT, SIDE (RT.)18 (AS VIEWED FROM FRONT)
007	24001677		Not Available	PANEL ASSY. (INR. FRNT.)
008	24001550	24001532		Trim- Pane
009	24001679		Not Available	DECAL, CYCLE INDICATOR
010	24001680			GLASS, TIMER
011	24001681		Not Available	LIGHT, INDICATOR (RED 110V)
012	24001682		Not Available	LIGHT, INDOCATOR (AMBER 110V)
013	24001683		Not Available	DECAL, MAYTAG

014	24001533		Rivet, Pop S.s.
015	24002036		Decal, Control Panel
"	NLA	Not Available	PANEL, CONTROL
016	24001155	Not Available	(AS VIEWED FROM THE FRONT)
"	NLA	Not Available	PANEL KIT, SIDE (LT.)18
017	24001539	Not Available	BRACKET, SOAP DISPENSER
018	24001540	Not Available	RIVET, BLIND S.S. (1/8 X 5/16)
019	W10124350	Not Available	PART NUMBER NOT AVAILABLE
020	24001671	Not Available	NAMEPLATE
021	24001510	W10139757	Nut
022	24001295		Lockwasher, S.s.
023	24001219	Not Available	COVER, SOAP DISPENSER
024	24001542		Clamp, Soap Dispenser
025	24001168		KIT ASSY., TOP COVER
026	24001220		Lock, Top Cover
027	24001221		Latch, Top Cover
028	24001695	Not Available	BRACE, TOP
029	24001236		Capacitor
030	24001303		Screw
031	24001692	Not Available	BRACKET, CAPACITOR
032	24001305		Nut, Fiberlock
033	24001425		Nut, Fiberlock, Pltd
034	W10124350	Not Available	PART NUMBER NOT AVAILABLE

the laundry company[®]

the laundry company[®]