


Maytag MAF50MC4TL 04 - CONTROL MODULE (MC4)

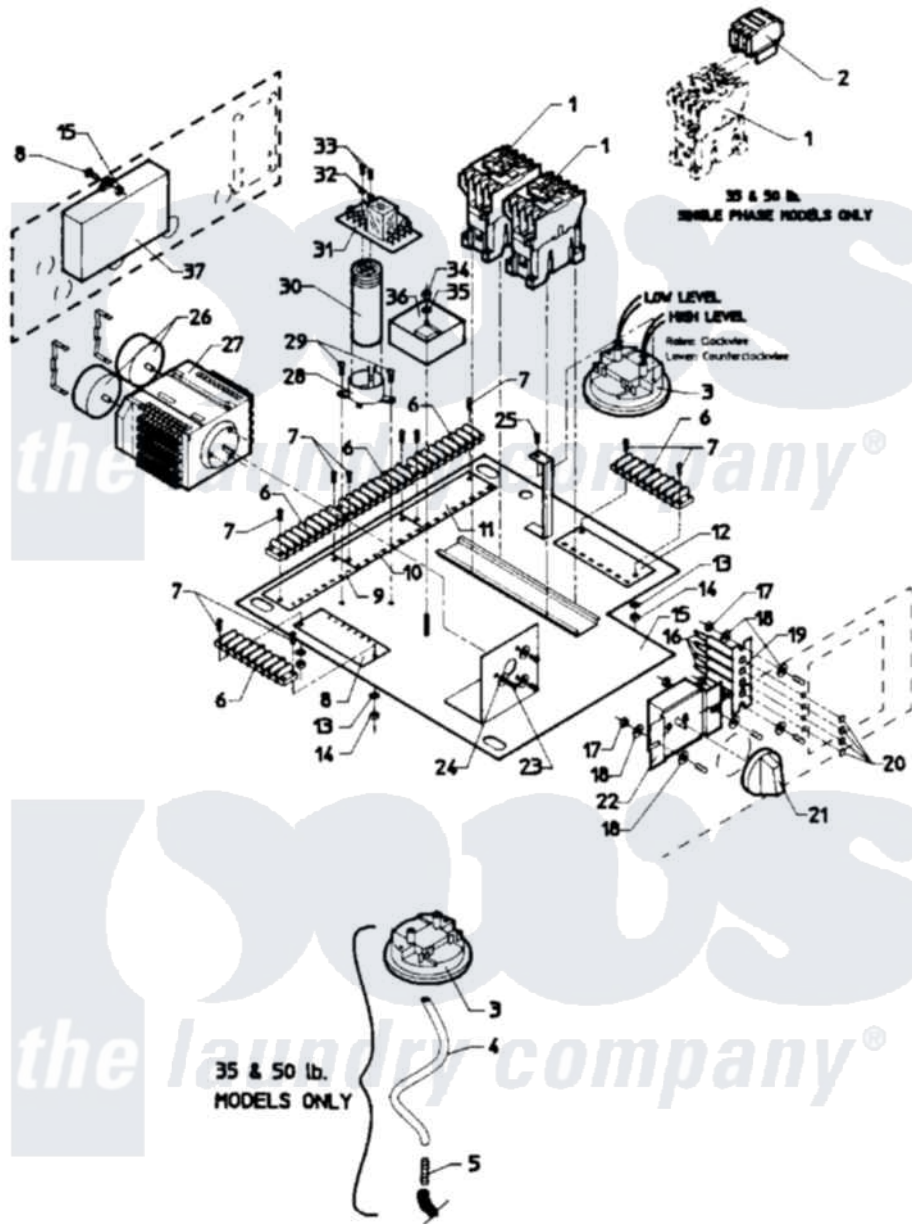

Maytag [Commercial Maytag MAF50MC4TL Washer Parts](#) Parts Diagram 04 - CONTROL MODULE (MC4)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	24001105	24002051		Contacto-
002	24001104		Not Available	CONTACTOR, AUX. ADDER
003	24001224		Not Available	SWITCH, DUAL LEVEL
004	24001747		Not Available	EXTENSION, AIR LINE
005	24001746		Not Available	COUPLER, HOSE (PRESS. SWITCH)
006	24001412		Not Available	STRIP, TERMINAL
007	24001414	4450038		Screw
008	NLA		Not Available	DECAL,INSUL. TERM STRIP (1-8)
009	NLA		Not Available	DECAL,INSUL. TERM STRIP (9-16)
010	NLA		Not Available	DECAL,INSUL. TERM STRIP (17-24)
011	NLA		Not Available	DECAL,INSUL. TERM STRIP (25-32)
012	24001030		Not Available	DECAL,INSUL. TERM STIRP (33-40)
013	24001415			Washer, S.s.

014	24001417	7103P070-60	Nut, Top Pilot
015	W10124350	Not Available	PART NUMBER NOT AVAILABLE
016	24001209	Not Available	LIGHT, NEON (1/3W, 125VAC)
017	24001342	74005230	Nut, Lock
018	24001576		Washer, Flat
019	24001214		Bracket, Ind. Light
020	24001210	215564	Lens, Indicator Light
021	24001204	Not Available	KNOB
022	24001207		Switch, Cycle Select
023	24001357		Screw, Stainless Steel
024	24001358		Washer, Flat
025	24001411	313806	Screw
026	24001577		Motor, Timer
027	24001178		Kit, Timer Cycle
028	W10124350	Not Available	PART NUMBER NOT AVAILABLE
029	24001578	3196170	Screw
030	24001247		Capacitor, Door Lock
031	24001248	Not Available	PC BOARD, DOOR UNLOCK (110V)
032	24001579		Washer, S.s.
033	24001580		Screw, S.s.
034	24001419	W10139757	Nut
035	24001295		Lockwasher, S.s.
036	24001176		Kit, Timer Delay
037	24001235		Kit, Switch

the laundry company[®]

the laundry company[®]