


Maytag MDE17PRAYW0 01 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Model: MDE17PRAYW0
(White)

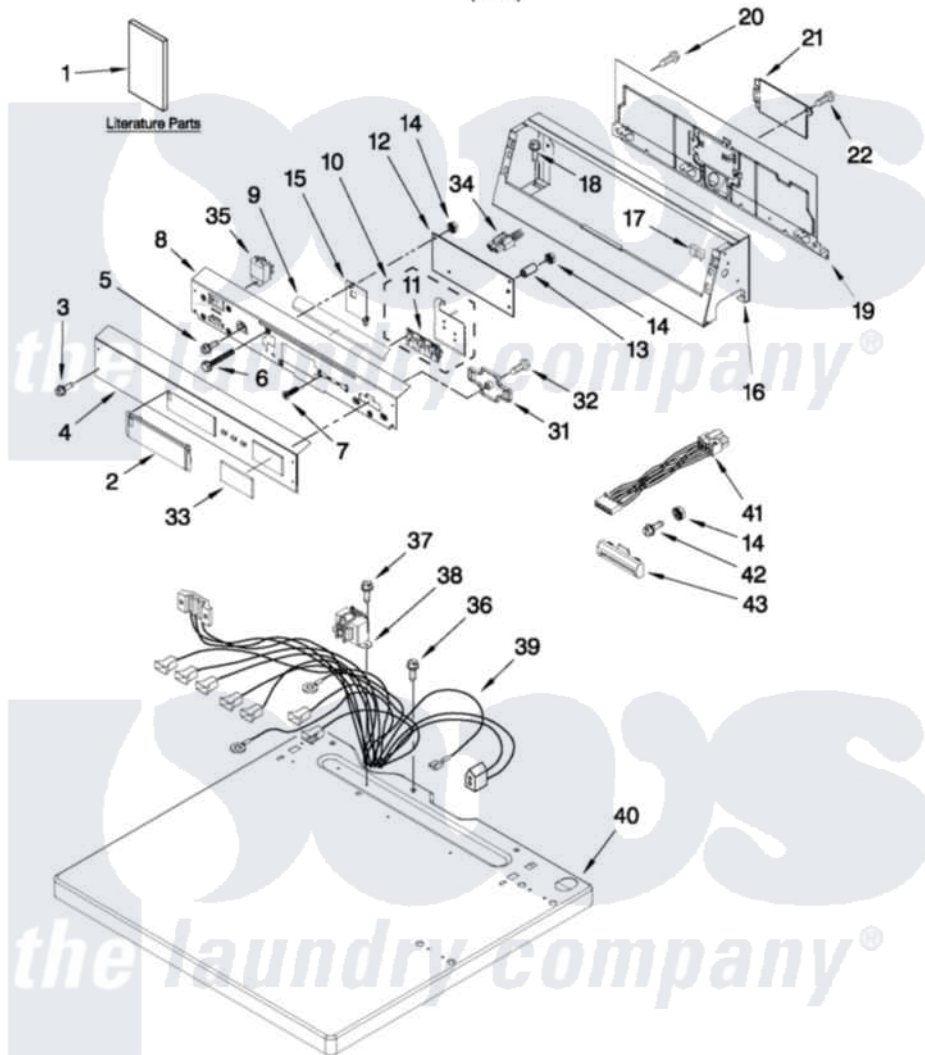

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10135139

2

Maytag [Commercial Maytag MDE17PRAYW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10135130		Not Available	Installation Instructions
"	W10135150		Not Available	Tech Sheet
"	W10135139			Repair Parts List
"	W10135291		Not Available	Card Reader Installation Instructions
2	W10131114			Cover, Display
3	W10131119			Screw, 8-18 X 5/16
4	W10135182			Facia / Overlay
5	W10142728	3370225		Screw
6	W10137322			Screw, 6-20 X 1.00
7	W10140652			Screw, 6-20 X 1/2
8	W10124215			Bracket, Control
9	W10133515			Deflector Switch Assembly
10	W10135233			Push Button And Switch Assembly
11	W10131113			Push Button
12	W10130081			Control Board

13	W10133514		Spacer
14	W10139046		Nut 6-32
15	W10161476		Shield, Probing
16	W10137300	W10207168	Console
17	W10131123		NUt, 8 U-Type
18	W10139210		Screw, 8-18 X 5/16
19	8317305	285909	Panel-Rear
20	3390647	488729	Screw
21	8576583	W10119283	Cover, Terminal Block
22	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	W10137770		Retainer, Card Reader Cover
32	3400618		Screw, 6-19 X 3/8
33	W10137769		Cover, Card Reader
34	W10133282		Switch, Jumper Service Vault
35	W10133335		Relay, Motor
36	3400000		Screw, 10-24 X 3/8
37	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
38	W10131839		Transformer 120 To 22.5 Vac
39	W10130183		Harness, Main
40	W10136704		Top
41	W10133304		Harness, Wiring Card Reader
42	W10143462		Screw, 6-32 X 9/16
43	W10131115		Bezel

the laundry company®

the laundry company®