


Maytag MDE26PCADW 04 - PC CONTROL CENTER

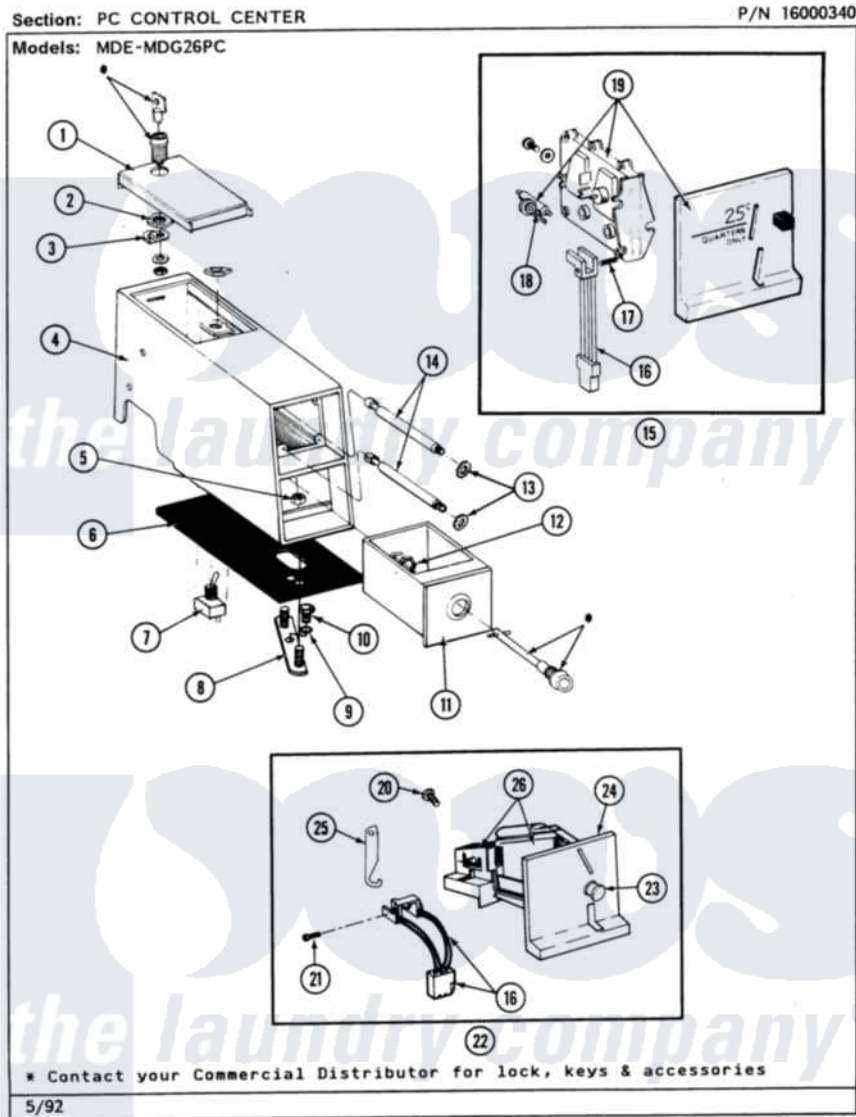

Maytag [Commercial Maytag MDE26PCADW Dryer Parts](#) Parts Diagram 04 - PC CONTROL CENTER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
002	212328	W10139762		Hex Nut, 3/4-27
003	213750	W10133266		Cam-Lock
004	207673	22001407		Case, Coin Slide
"	207673L	22001408		(ALM)
"	207940	22001407		Case, Coin Slide
"	207940L	22001408		(ALM)
"	NLA		Not Available	(H. WHEAT)
"	NLA		Not Available	(H. WHEAT)
005	Y052740	62739		Nut, Lock
006	214660			Gasket, Control Center
007	206794		Not Available	SWITCH (W/NUT)
008	NLA		Not Available	MTG. STRAP---NA

009	910309			Washer, Mounting Strap
010	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
011	207912	208884		Coin Box K
"	207912L	208884		Coin Box K
"	NLA		Not Available	(H. WHEAT)
012	212328	W10139762		Hex Nut, 3/4-27
013	910181			Lockwasher, Terminal Block
014	213035			Bolt, Locking
015	NLA		Not Available	COIN DROP ASSY.
016	206799			Optic Switch Assembly
017	314665			Screw, Switch Assembly
018	NLA		Not Available	BALANCE ARM W/WEIGHT (\$25)
019	NLA		Not Available	COIN REJECTOR
020	NLA		Not Available	SCREW FOR CAUTION PLATE---NA
021	314665			Screw, Switch Assembly
022	207948			Coin Drop Assembly
"	NLA		Not Available	COIN DROP ASSY (CANADA)
023	216009			BUTTON, RETURN
024	216010	Y208306		Kit- Mtg C
025	216011			Spring, Return Button
026	207947			Rejector, Coin
"	207949			Rejector, Coin

