


Maytag MDE27CSAEL 01 - FRONT

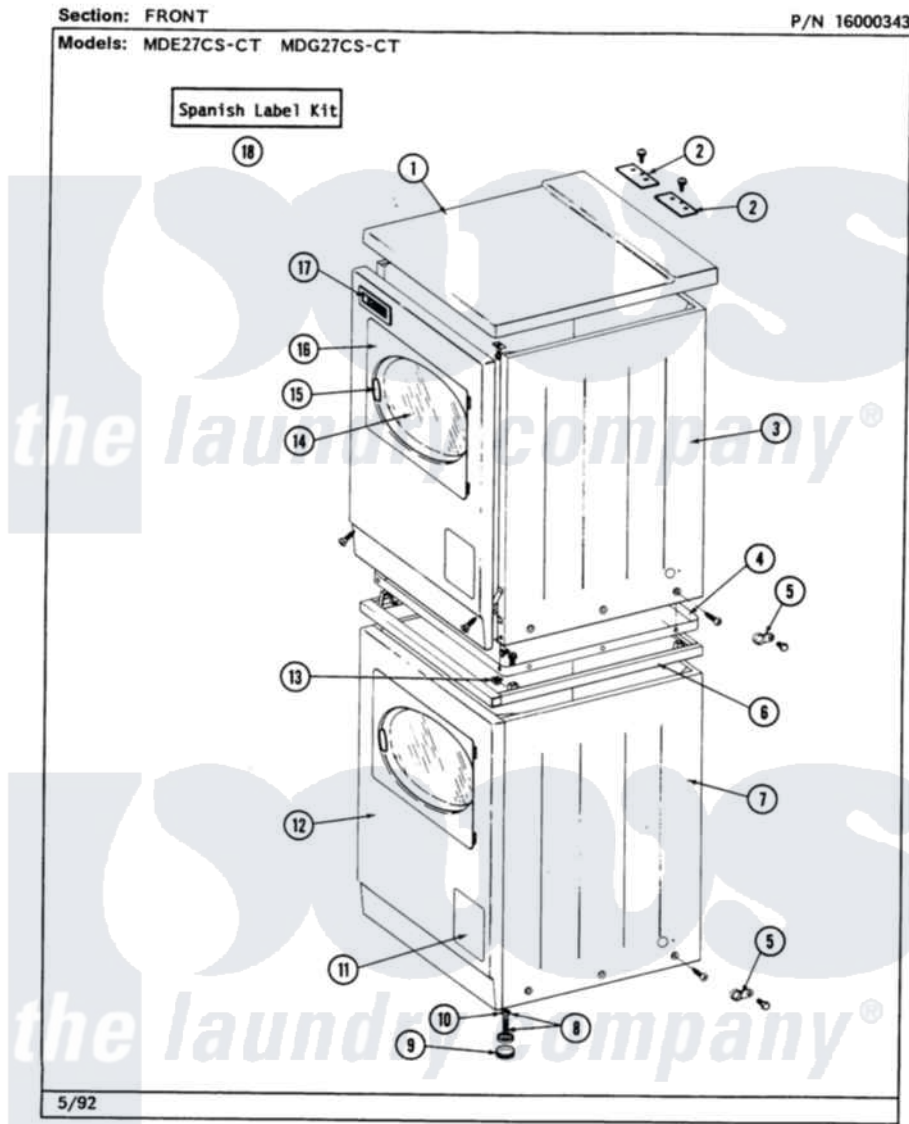

2

Maytag [Commercial Maytag MDE27CSAEL Dryer Parts](#) Parts Diagram 01 - FRONT
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	307104			Top Cover Assembly
"	NLA		Not Available	(ALMOND)
002	NLA		Not Available	TOP COVER PLATE
"	Y313559			Screw
003	204445			Screw And Fastener Assembly
"	213007			Xfor Cabinet See Cabinet, Back
"	NLA		Not Available	CABINET, UPPER (WHITE)
004	314663	214354		Screw, Top Cover To Cabnt.
"	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
005	211168	W10139210		Screw, 8-18 X 5/16
"	910768	M0280301		Tie Electr
006	NLA		Not Available	SPACER ASSY, WHITE
007	307125		Not Available	CABINET, LOWER (WHITE)
"	NLA		Not Available	(ALMOND)
008	Y302699	22003428		Leg, Adjustable

009	210684		Foot, Adjustable Leg
010	210385		Lock Nut For Adjustable Leg
011	NLA	Not Available	PART NOT USED
012	204439		Screw And Fstner Assembly
"	NLA	Not Available	FRONT PANEL-WHITE
013	310933	33002194	Nut, Speed
014	308069	Not Available	DOOR, INNER W/GASKET
015	314939		Handle, Door
"	314974		Handle, Door
016	NLA	Not Available	DOOR ASSY. COMPLETE (WHITE)
017	NLA	Not Available	NAME PLATE
018	NLA	Not Available	SPANISH LABEL KIT

the laundry company[®]

the laundry company[®]

the laundry company[®]