


Maytag MDG120P1HW 16 - SAIL SWITCH ASSEMBLY

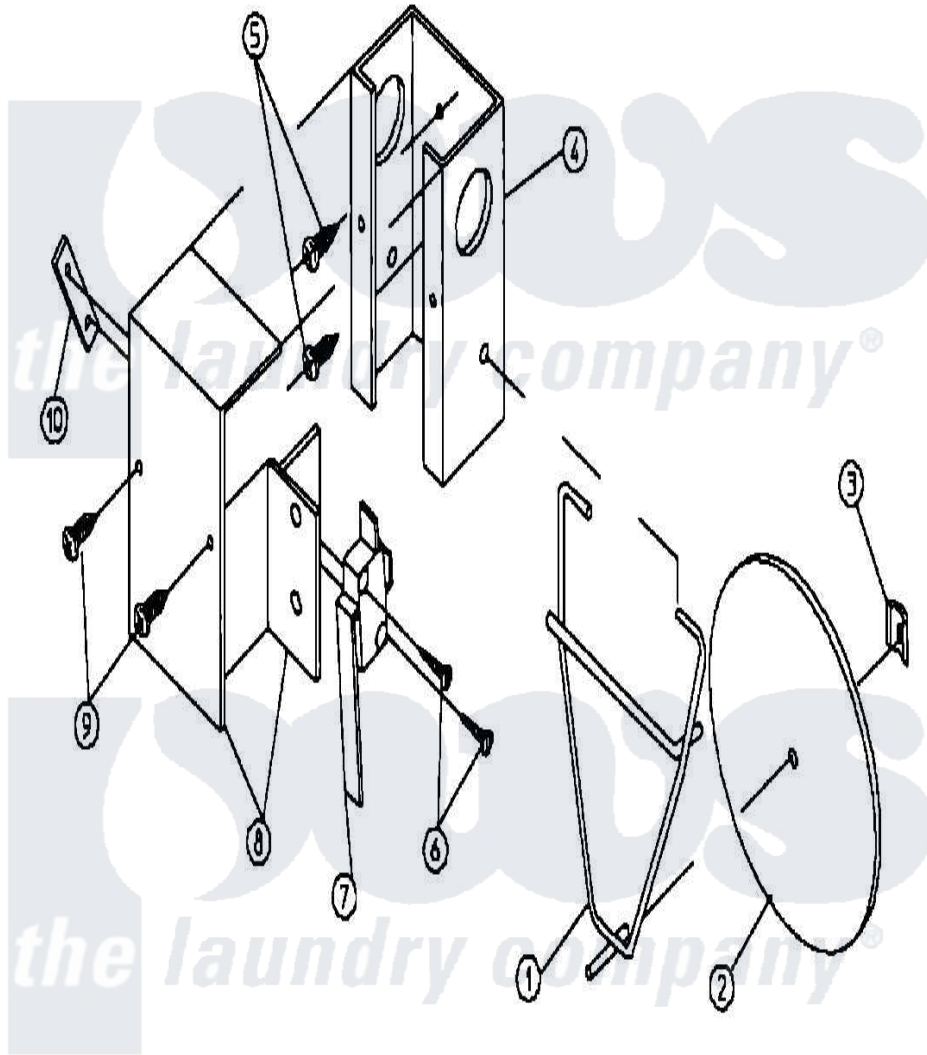

Maytag Commercial Maytag MDG120P1HW Dryer Parts Parts Diagram 16 - SAIL SWITCH ASSEMBLY
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|----------------------|----------------------------|---------------|--|
| 000 | W10124350 | | Not Available | ORDER PARTS FROM AMERICAN DRYER CORP AT 508-678-9000 |
| 001 | A105500 | W10146641 | | Std Sail S |
| 002 | A319202 | W10146866 | | Sail Switch |
| 003 | A154002 | 154002 | | 1 8 Push O |
| 004 | A802800 | 802800 | | Sail Switch |
| " | A802801 | 802801 | | Sail Switch |
| 005 | A150300 | 5307527001 | | Switch |
| 006 | A150303 | 150303 | | 4 X 3 4 P |
| 007 | A122200 | 122200 | | Sail Switch |
| 008 | A802799 | 802799 | | Sail Sw.bo |
| 009 | A150309 | W10146761 | | 10-16 X 1 |
| 010 | A154004 | 154004 | | Tinneman |