


# Maytag MDG17CSBGW1 02 - CABINET PARTS

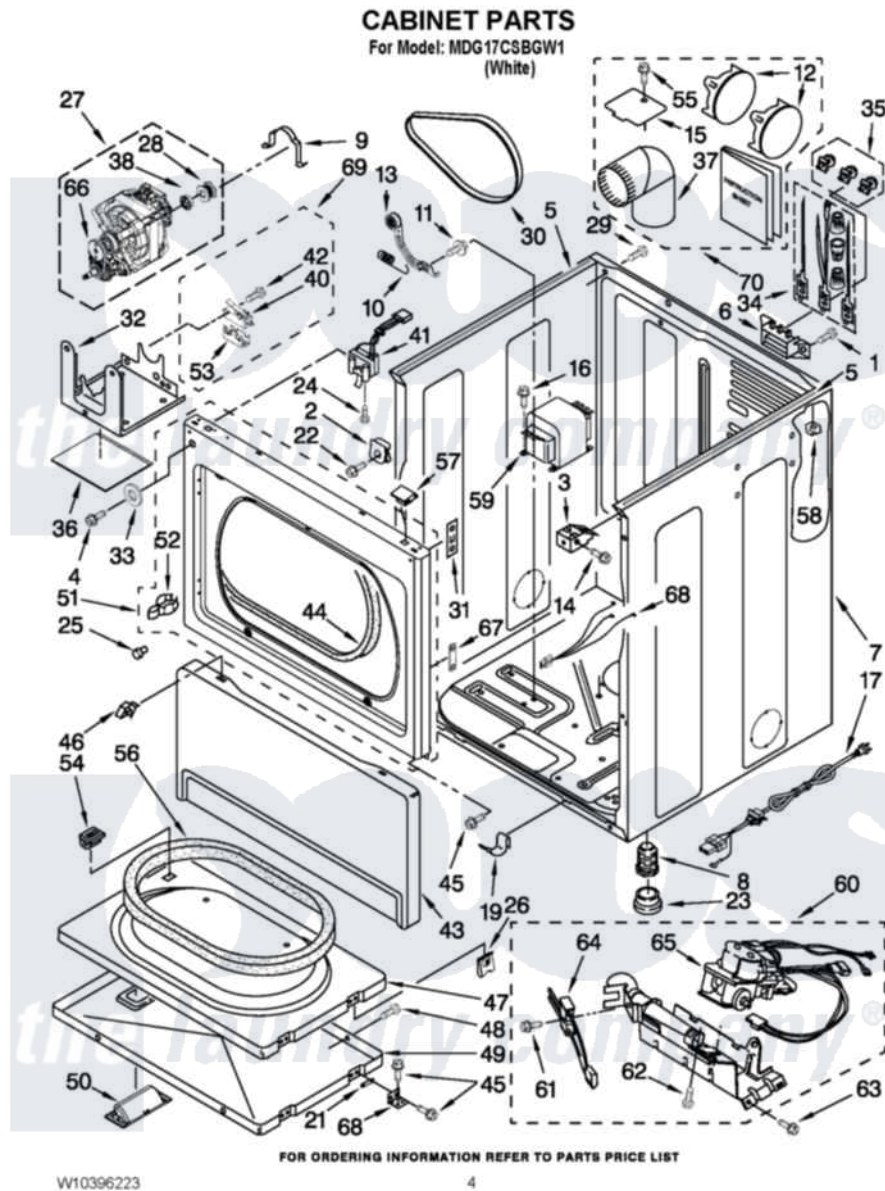

Maytag [Commercial Maytag MDG17CSBGW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3393008	<a href="#">308685</a>		Side Trim )
2	<a href="#">W10131123</a>			NUT, 8 U-Type
3	<a href="#">3391846</a>			Clip, Front Panel
4	<a href="#">3400077</a>			Screw, 10-16 X 1/2
5	<a href="#">8318396</a>			Foam-Seal
6	<a href="#">3397659</a>			Block, Terminal
7	<a href="#">8310656</a>			Cabinet
8	3392100	<a href="#">49621</a>		Feet-Leveling
NI	<a href="#">279810</a>			Foot-Optional
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	697750	<a href="#">W10470674</a>		Dryer Exhaust Kit
13	<a href="#">W10344192</a>			Idler Assembly
14	3391915	<a href="#">681615</a>		Screw
15	<a href="#">3394331</a>			Plate Cover

16	<a href="#">340000</a>		Screw, 10-24 X 3/8
17	<a href="#">W10167642</a>		Cord, Power
NI	N/P	Not Available	PARTS NOT SHOWN
"	<a href="#">W10153836</a>		10A Cord Lock
"	<a href="#">W10223804</a>		10A Cord, Adapters
"	<a href="#">W10223809</a>		10A Cord Adapters
"	<a href="#">W10223807</a>		10A Cord Adapters
19	<a href="#">W10291934</a>		Clip
21	<a href="#">W10279703</a>		Hinge And Pin Assembly
22	<a href="#">W10131119</a>		Screw, 8-18 X 5/16
23	<a href="#">3391943</a>		Boot, Foot
24	697773	<a href="#">3395530</a>	Screw
25	<a href="#">693152</a>		Bumper, Console
26	<a href="#">3389249</a>		Nut, Inner Door
27	W10289662	<a href="#">W10416574</a>	Motor-Drve
28	<a href="#">W10167237</a>		Pulley
29	8533974	<a href="#">4331106</a>	Screw, No.10-32 X 7/16
30	<a href="#">W10131172</a>		Belt, Drive
31	<a href="#">3390902</a>		Clip, Door Hinge
32	<a href="#">W10135695</a>		Bracket, Motor
33	<a href="#">W10223794</a>		Washer
34	<a href="#">279318</a>		Terminal Tinned And Brass Panel
35	<a href="#">279393</a>		Terminal Block Screw Kit
36	<a href="#">W10212660</a>		Pad, Sound Dampening
37	279731	<a href="#">49026</a>	4" - 90° Elbow
38	<a href="#">3393657</a>		Restrainer, Belt
40	<a href="#">W10410873</a>		Assembly, Switch And Actuator
41	<a href="#">W10237959</a>		Door Switch Assembly
42	<a href="#">3400934</a>		Assembly, Screw And Insulator
43	697215	<a href="#">3406797</a>	Toe Panel
44	<a href="#">3387242</a>		Seal, Front Panel
45	342055	<a href="#">488627</a>	Screw
46	<a href="#">3388229</a>		Retainer, Toe Panel
47	3392563	<a href="#">280083</a>	Door-Rear
48	<a href="#">W10080300</a>		Screw, 8-18 X 3/8
49	<a href="#">3387872</a>		Door, Front
50	<a href="#">W10116360</a>		Handle, Door
51	W10192882	<a href="#">W10242810</a>	Panel
52	696144	<a href="#">279570</a>	Latch
53	<a href="#">8564011</a>		Bracket-Switch
54	3392538	<a href="#">279570</a>	Latch
55	3390647	<a href="#">488729</a>	Screw
56	<a href="#">3390735</a>		Seal, Door
57	<a href="#">345670</a>		Lock, Top
58	<a href="#">90406</a>		Cage Nut, 5/16-18
59	<a href="#">3977633</a>		Autotransformer
60	<a href="#">W10096909</a>		Burner Assembly 50 Hz
61	<a href="#">3393909</a>		Screw, 8-32 X 7/8
62	W10080630	<a href="#">3387057</a>	Screw, 10-16 X 1/2 Orifice, Burner
63	3390647	<a href="#">488729</a>	Screw

64	686590	<a href="#">279311</a>	Ignitor
65	<a href="#">8281918</a>		Valve, Gas 60 Hz
66	<a href="#">3405160</a>		Belt, Drive
67	<a href="#">W10191265</a>		Plug, Hinge Screw Front Panel
68	<a href="#">W10190549</a>		Transformer Jumper
69	<a href="#">W10259136</a>		Switch, Assembly
NI	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit

