


Maytag MDG17PDAXW0 02 - CABINET PARTS

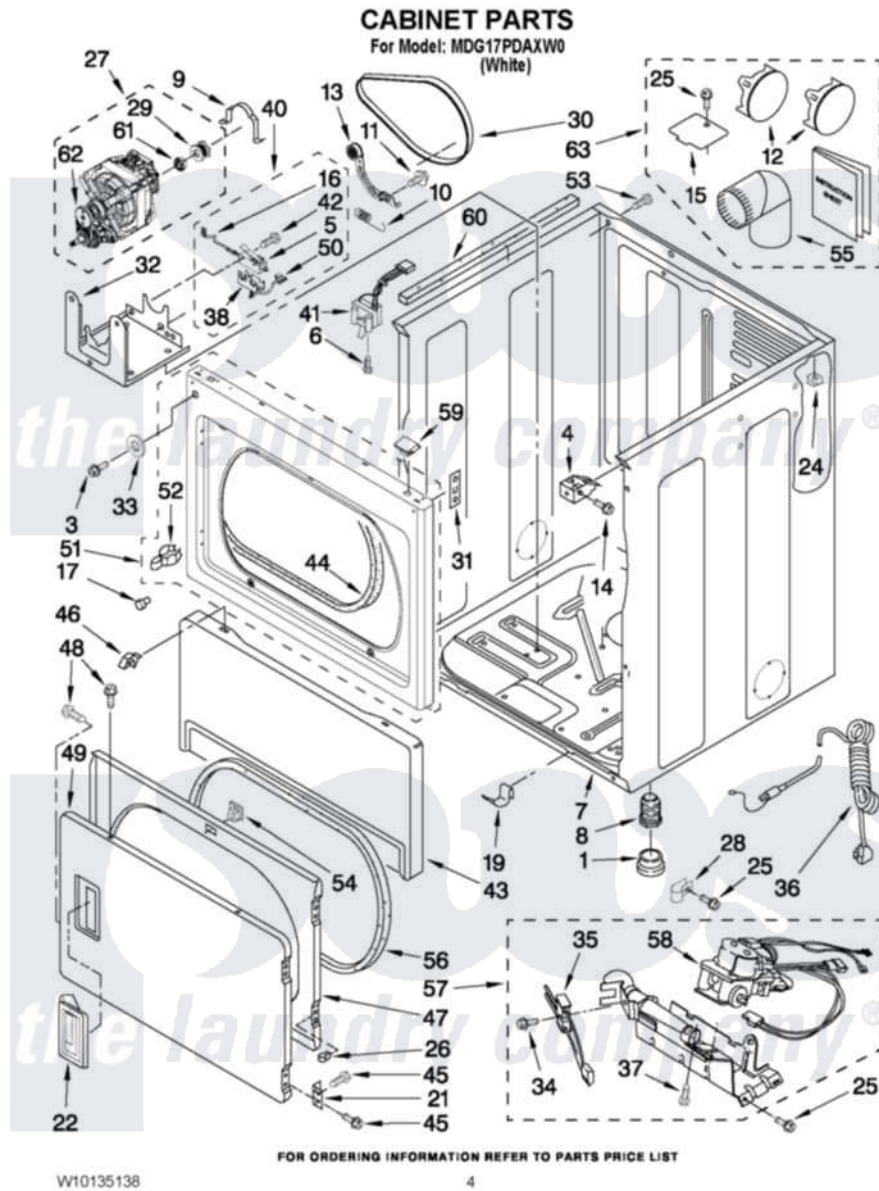

Maytag [Commercial Maytag MDG17PDAXW0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3391943			Boot, Foot
3	3400077			Screw, 10-16 X 1/2
4	3391846			Clip, Front Panel
5	8564010			Assembly, Switch And Actuator
6	697773	3395530		Screw
7	8310656			Cabinet
8	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	697750	W10470674		Dryer Exhaust Kit
13	W10141380	W10344192		Idler Assembly
14	3391915	681615		Screw
15	3394331			Plate Cover

16	W10167613		Wire, Belt Switch
17	693152		Bumper, Console
19	297092		Clip
21	3389247		Hinge And Pin Assembly
22	3389522		Handle, Door
24	90406		Cage Nut, 5/16-18
25	3390647	488729	Screw
26	3389249		Nut, Inner Door
27	W10139766	W10396034	Motor Assembly 60 Hz
28	3387561		Clamp-Pipe
29	3394341	W10299847	Pulley-Motor
30	W10131172		Belt, Drive
31	3390902		Clip, Door Hinge
32	W10135695		Bracket, Motor
33	3392186	4159590	Washer
34	3393909		Screw, 8-32 X 7/8
35	686590	279311	Ignitor
36	3401401	3401402	Cord, Power
37	3387057		Screw, 10-16 X 1/2 Orifice, Burner
38	8564011		Bracket-Switch
40	W10155571		Switch, Assembly
41	3406109	3406107	Door Switch Assembly
42	W10002600		Screw, 6-20 X 1 1/4
43	697215	3406797	Toe Panel
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	3392563	280083	Door-Rear
48	694091		Trim, Side Right Hand
49	3387872		Door, Front
50	8539892		Wire-Motor To Belt Switch
51	3393081	279722	Panel
52	696144	279570	Latch
53	8533974	4331106	Screw, No.10-32 X 7/16
54	3392538	279570	Latch
55	279731	49026	4" - 90° Elbow
56	3390735		Seal, Door
57	W10135231	W10492508	Burner-Gas
58	W10141728		Valve, Gas 60 Hz
59	345670		Lock, Top
60	W10157932		Seal, Foam Cabinet
61	3393657		Restrainer, Belt
62	3405160		Belt, Drive
NI	279818	W10470674	Dryer Exhaust Kit