


Maytag MDG30PCCWW 05 - DOOR SWITCH

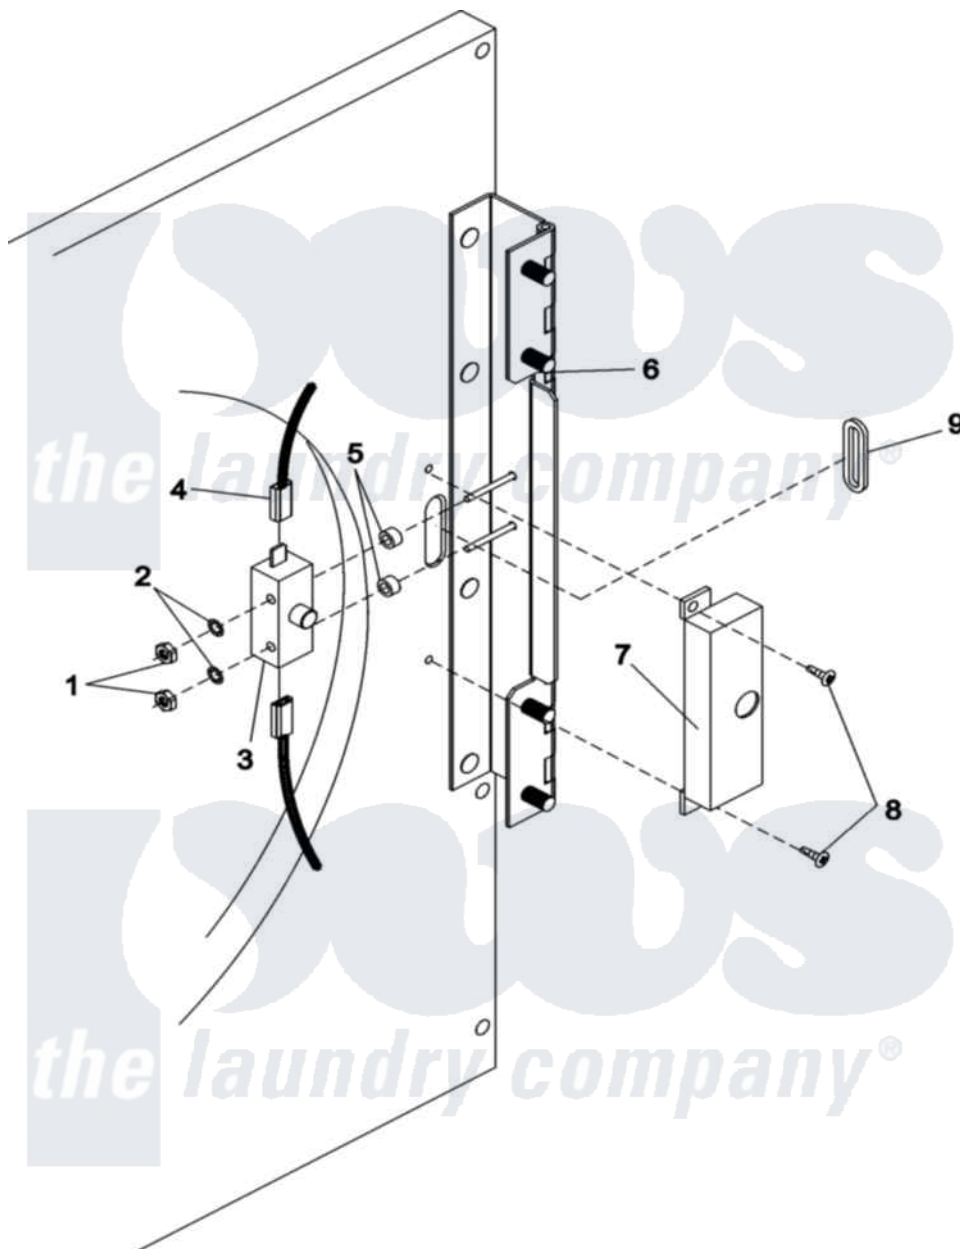

Maytag [Commercial Maytag MDG30PCCWW Dryer Parts](#) Parts Diagram 05 - DOOR SWITCH
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|----------------------|---------------------------|---------------|------------------|
| 001 | A152013 | 152013 | | 6-32 Hex N |
| 002 | A153010 | 153010 | | 6 Internal |
| 003 | A137005 | W10146741 | | SDS Door S |
| 004 | A121028 | 121028 | | 1 4 X .032 |
| 005 | A154281 | 154281 | | 3 8 Stand |
| 006 | A801524 | | Not Available | BLACK DOOR HINGE |
| 007 | A313218 | W10146845 | | MAIN DOOR |
| 008 | A150201 | 150201 | | 10-32 X 1 |
| 009 | A121405 | 121405 | | Rubber Gro |