


Maytag MDG32PC3AW 14 - SAIL SWITCH ASSEMBLY

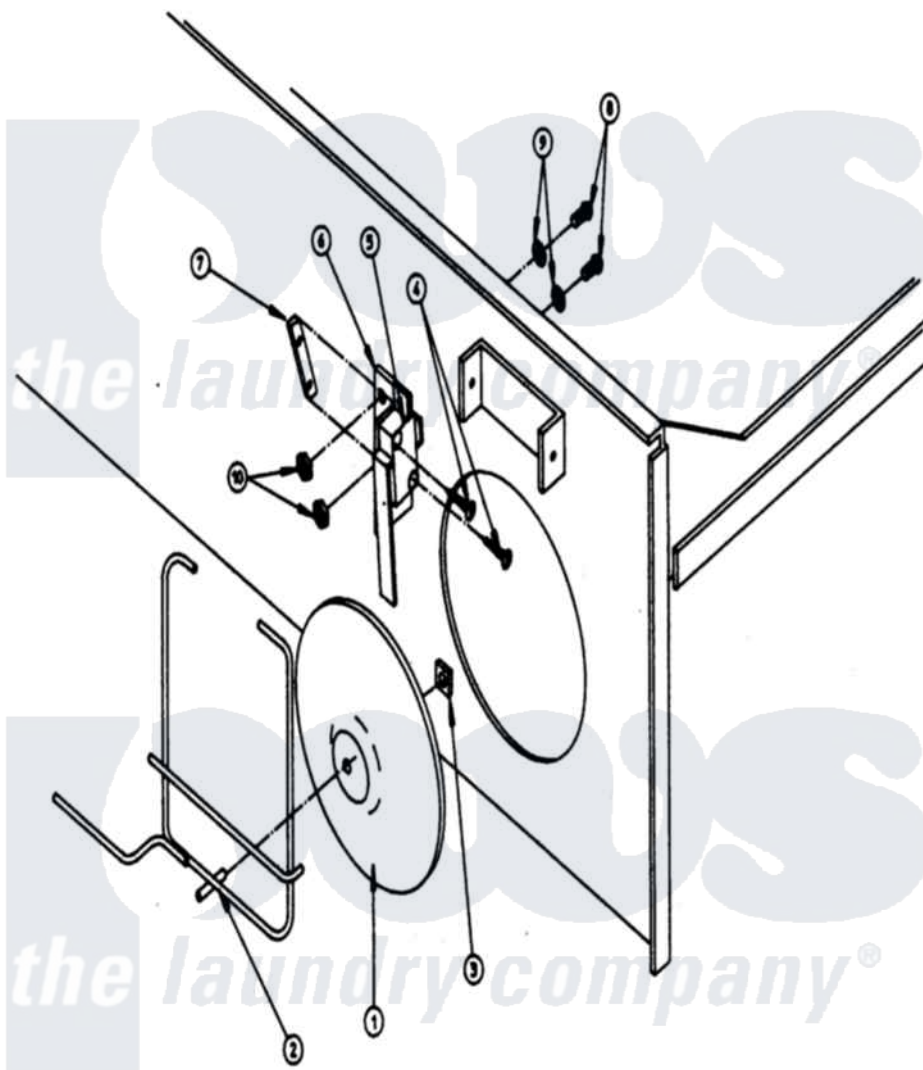

Maytag [Commercial Maytag MDG32PC3AW Dryer Parts](#) Parts Diagram 14 - SAIL SWITCH ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
000	W10124350		Not Available	ORDER PART FROM AMERICAN DRYER CORP AT 508-678-9000
001	A309206		Not Available	DAMPER, SAIL SWITCH
"	A802805		Not Available	SAIL SWITCH ROD & DAMPER ASSY. (INCL. ITEMS 1 THRU 3)
002	A105550	W10146642		320 330 43
003	A154002	154002		1 8 Push O
004	A150303	150303		4 X 3 4 P
005	A122200	122200		Sail Switch
"	A802807	W10147081		320 330 43
006	A319208	319208		320 330 43
007	A154004	154004		Tinneman
008	A150001	150001		6-32 X 1 2
009	A153010	153010		6 Internal
010	A152000	152000		6-32 HEX N