


Maytag MFS35PNFTS 10 - WASH DRUM AND TUB

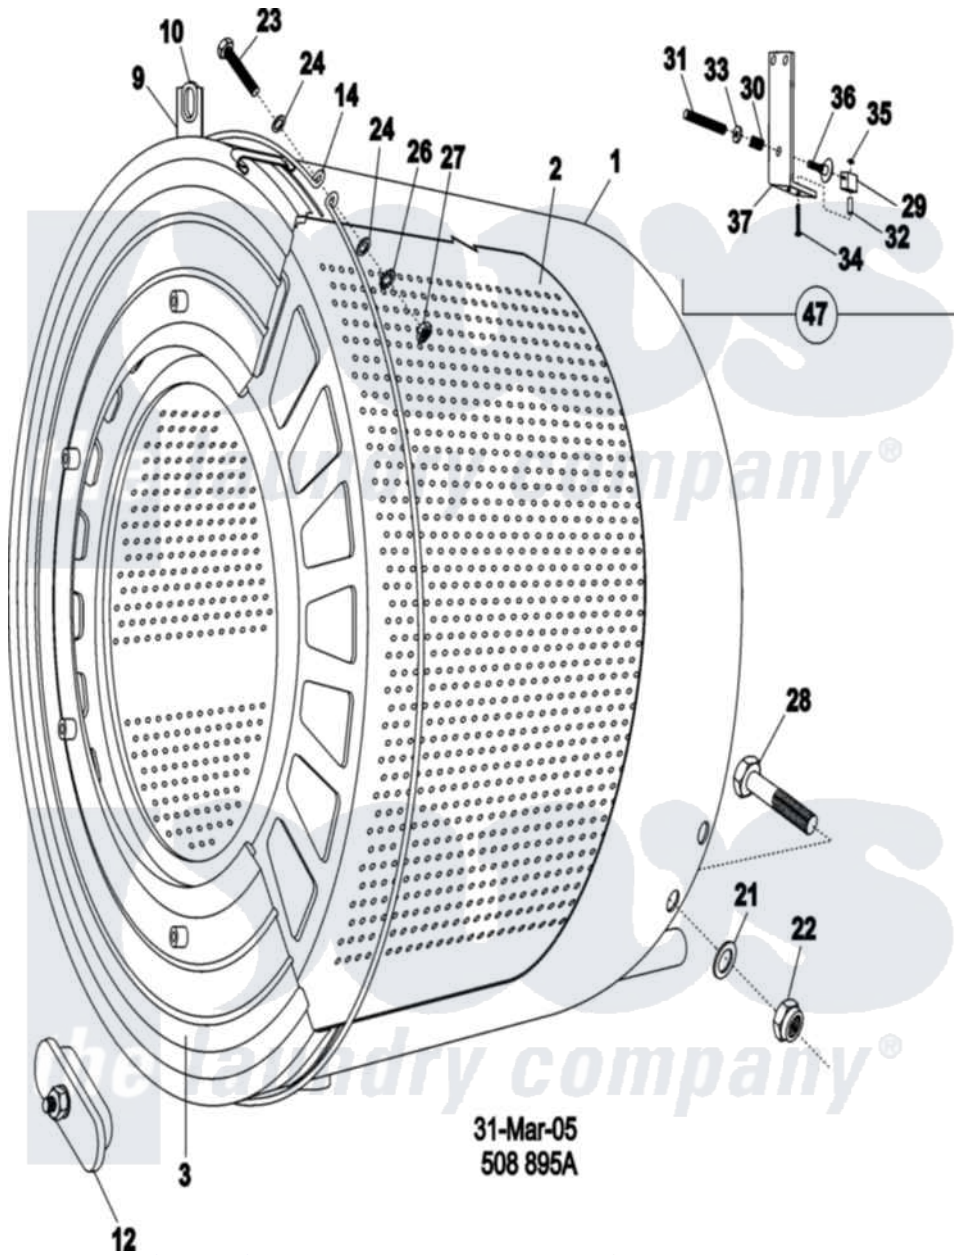

Maytag [Commercial Maytag MFS35PNFTS Washer Parts](#) Parts Diagram 10 - WASH DRUM AND TUB
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	23003897			Tub
002	23004410			Drum, Inner Tub
003	23004411			Plate, Front Outer Drum
"	23004522	23004148		Tub Front Gasket
009	23003911			Balance Switch Grommet Support
010	23003539			Balance Switch Grommet
012	23001594			Heating Element Hole Plug
014	23004142			Clamp li
021	NLA		Not Available	WASHER
022	NLA		Not Available	NUT (M16)
023	23003541			Screw
024	23001309			Washer Lu
026	23001028	23002756		Lockwasher
027	23003606			Nut
028	23004523			Bolt M16x70
029	23003899			Out Of Balance Switch

030	23003900	Small Balance Switch Spring
031	23003901	Large Balance Switch Spring
032	23003902	Spacer M7x10
033	23002951	Washer, Fiber
034	23003903	Screw M3x25
035	23001053	Nut
036	23003904	Balance Switch Spring Holder
037	23003905	Support Tilt Switch
047	23004414	Tilt Switch Complete

