

Maytag MLE23PDFUW 14 - WIRING INFORMATION(ELEC)

Diagnostic Mode:

This mode is normally accessed by pressing the **LAUNDRY SERVICE** button on the control panel for 1 second while in any of the ready modes. Once through the screen, a diagnostic code is presented, or when **CLAS** displays if operating with Maytag Data Management system.


One step to diagnostic mode the settings display will flash, and certain screens will be cleared, and diagnostic codes are cleared. If a diagnostic code persists on either of the machines, the fault must be corrected before the following cycle options are permitted. Procedures to initiate cycle activity from diagnostic mode are as follows:

- Upper Dryer Field Diagnostic Cycle** - With the control panel in diagnostic mode, press the **PERMANENT PRESS** key pad. The cycle consists of seven minutes of heat and six minutes of cool down. The **UPPER DRYER** **WHITES & COLORS** key pad will increase the diagnostic cycle minutes up to 180 minutes. The **UPPER DRYER** **DRYER DELICATES** key pad will cancel this cycle and exit the diagnostic mode.
- Lower Dryer Field Diagnostic Cycle** - With the control panel flashing, this cycle is entered by pressing the **LOWER DRYER** **PERMANENT PRESS** key pad. The cycle consists of seven minutes of heat and six minutes of cool down. The **LOWER DRYER** **WHITES & COLORS** key pad will increase the diagnostic cycle minutes up to 180 minutes. The **LOWER DRYER** **DRYER DELICATES** key pad will cancel this cycle and exit the diagnostic mode.

Diagnostic Codes:

If the set up results in control and one of the diagnostic codes, the appropriate diagnostic code will be on the display.

- #1 - Upper dryer door sensor error (no contact) based on the fact to power the induction upper dryer door sensor. (Upper dryer display disabled) (wall diagnostic code is normally cleared).
- #2 - Lower dryer door sensor error (no contact) based on the fact to power the induction lower dryer door sensor. (Lower dryer display disabled) (wall diagnostic code is normally cleared).
- #3 - Blocked coils (air main) (display disabled) (wall diagnostic code is normally cleared).
- #4 - Voltage detected (lower) (flow for 8 seconds) (lower dryer display disabled) (wall diagnostic code is normally cleared).
- #5 - Upper dryer motor sense error (no contact) (lower dryer display disabled) (wall diagnostic code is normally cleared).
- #6 - Lower dryer motor sense error (no contact) (upper dryer display disabled) (wall diagnostic code is normally cleared).
- #7 - Upper dryer motor sense error (no contact) (lower dryer display disabled) (wall diagnostic code is normally cleared).
- #8 - No incoming communication from installed data card reader in residential (temperature 2) (Min 100°F) (wall diagnostic code is normally cleared).
- #9 - Lower dryer door sensor error (no contact) (lower dryer display disabled) (wall diagnostic code is normally cleared).
- #10 - Lower dryer door sensor error (no contact) (upper dryer display disabled) (wall diagnostic code is normally cleared).
- #11 - Upper dryer door sensor error (no contact) (upper dryer display disabled) (wall diagnostic code is normally cleared).

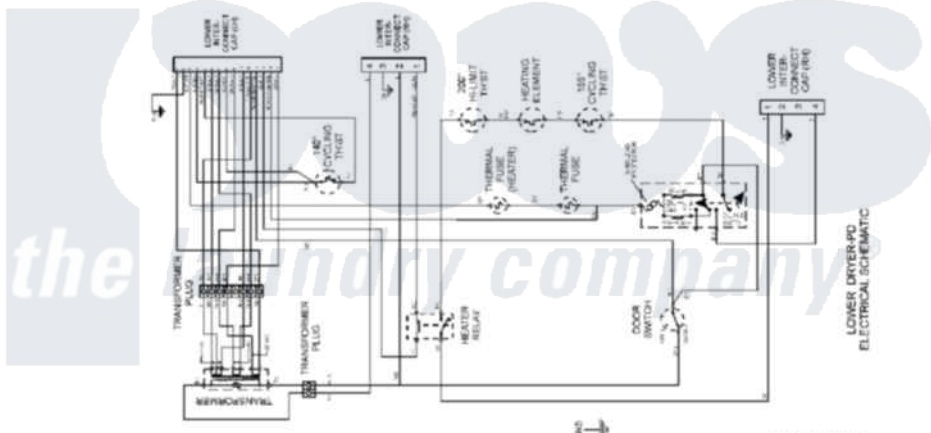

6 3720380 LOWER DRYER (PD) ELECTRICAL SCHEMATIC

Maytag [Commercial Maytag MLE23PDFUW Dryer Parts](#) Parts Diagram 14 - WIRING INFORMATION(ELEC)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	WIRING INFORMATION

