


# Maytag MLE24PDAZW0 03 - UPPER CABINET AND FRONT PANEL PARTS

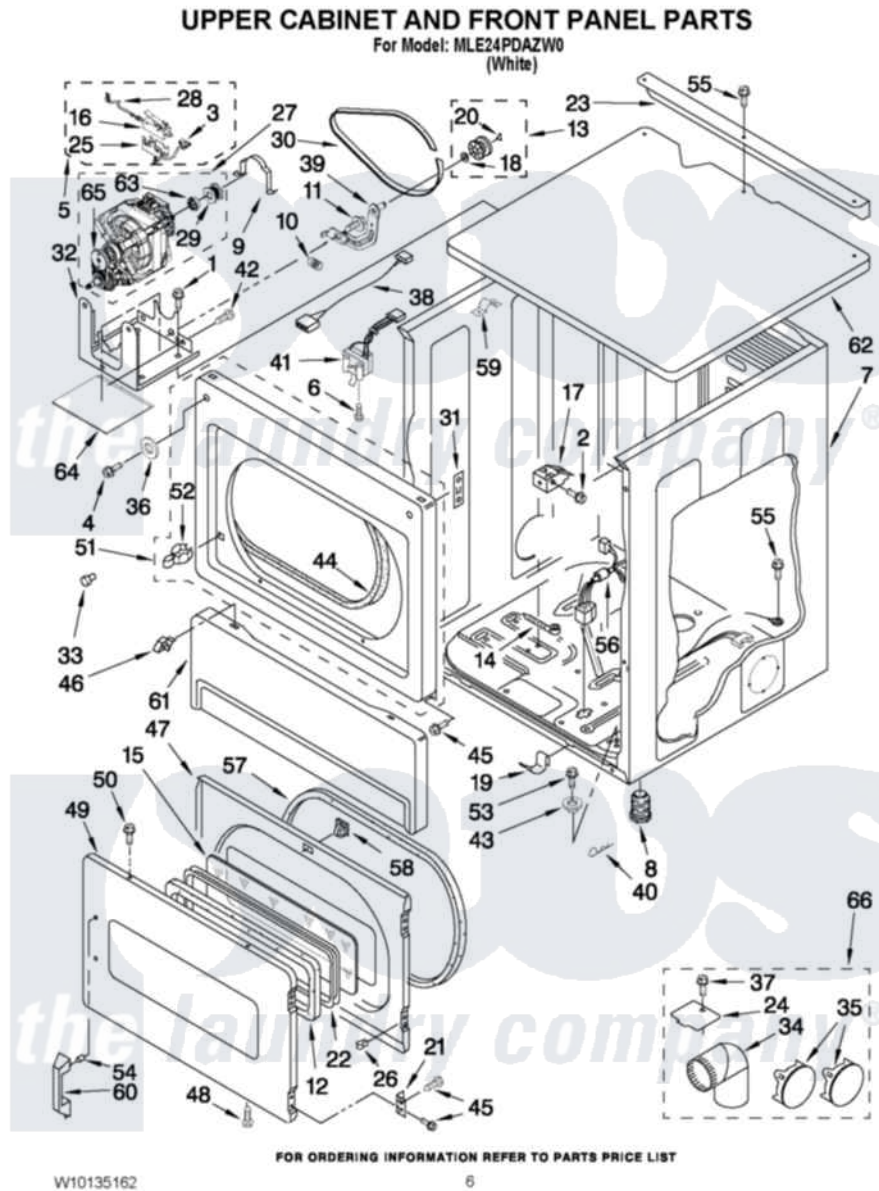

Maytag [Commercial Maytag MLE24PDAZW0 Dryer Parts](#) Parts Diagram 03 - UPPER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3390663	<a href="#">681414</a>		Screw, 10AB X 1/2
2	3391915	<a href="#">681615</a>		Screw
3	<a href="#">8539892</a>			Wire-Motor To Belt Switch
4	<a href="#">3400077</a>			Screw, 10-16 X 1/2
5	<a href="#">W10155571</a>			Switch, Assembly
6	697773	<a href="#">3395530</a>		Screw
7	3978859	<a href="#">280024</a>		Cabinet
8	<a href="#">689172</a>			Foot, Dryer
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	<a href="#">3392915</a>			Gasket, Window
13	3388672	<a href="#">279640</a>		Pulley-Idr
14	<a href="#">3391018</a>			Tie Cable
15	3392918	<a href="#">3398122</a>		Window Pack. Includes

15	<a href="#">3392910</a>	<a href="#">3390122</a>	Illustration 15 And 25)
NI	<a href="#">3396122</a>		Window Pack. Includes Illustration 15 And 25)
16	<a href="#">8564010</a>		Assembly, Switch And Actuator
17	<a href="#">3391846</a>		Clip, Front Panel
18	<a href="#">233520</a>		Washer, Thrust
19	<a href="#">297092</a>		Clip
20	<a href="#">690997</a>		Washer, Thrust
21	<a href="#">3389247</a>		Hinge And Pin Assembly
22	<a href="#">3392914</a>		Frame, Window
23	<a href="#">3979115</a>		Bracket, Angle
24	<a href="#">3394331</a>		Plate Cover
25	<a href="#">8564011</a>		Bracket-Switch
26	<a href="#">3389249</a>		Nut, Inner Door
27	<a href="#">W10139766</a>	<a href="#">W10396034</a>	Motor Assembly 60 Hz
28	<a href="#">W10167613</a>		Wire, Belt Switch
29	W10344191	Not Available	PULLEY 60 HZ
30	<a href="#">W10131172</a>		Belt, Drive
31	<a href="#">3390902</a>		Clip, Door Hinge
32	<a href="#">W10135695</a>		Bracket, Motor
33	<a href="#">693152</a>		Bumper, Console
34	279731	<a href="#">49026</a>	4" - 90° Elbow
35	697750	<a href="#">W10470674</a>	Dryer Exhaust Kit
36	3392186	<a href="#">4159590</a>	Washer
37	<a href="#">488729</a>		Screw
38	<a href="#">8283298</a>		Jumper, Door Switch
39	<a href="#">W10141380</a>	<a href="#">W10344192</a>	Idler Assembly
40	<a href="#">63823</a>		Cotter Pin
41	3406109	<a href="#">3406107</a>	Door Switch Assembly
42	<a href="#">W10002600</a>		Screw, 6-20 X 1 1/4
43	<a href="#">3389233</a>		Bushing
44	<a href="#">3387242</a>		Seal, Front Panel
45	342055	<a href="#">488627</a>	Screw
46	<a href="#">3388229</a>		Retainer, Toe Panel
47	3392905	<a href="#">W10244331</a>	Door-Rear
48	<a href="#">694091</a>		Trim, Side Right Hand
49	<a href="#">3392880</a>		Door, Front
50	<a href="#">718032</a>		Screw, 8-18 X 3/4
51	3393081	<a href="#">279722</a>	Panel
52	696144	<a href="#">279570</a>	Latch
53	3400523	<a href="#">285875</a>	Kit, Security
54	<a href="#">3393933</a>		Fastener
55	3390647	<a href="#">488729</a>	Screw
56	<a href="#">W10169676</a>		Harness
57	<a href="#">3390735</a>		Seal, Door
58	3392538	<a href="#">279570</a>	Latch
59	<a href="#">98997</a>		Clip, Harness Following Parts Optional Are Not Supplied On This Whirlpool Model. But Are Available For Purchase.
60	<a href="#">3392906</a>		Handle, Door
61	697215	<a href="#">3406797</a>	Toe Panel
62	<a href="#">3389351</a>		Top
63	<a href="#">3393657</a>		Restrainer, Belt

64 [W10212660](#)

Pad, Sound Dampening

65 [3405160](#)

Belt, Drive

NI 279818

[W10470674](#)

Dryer Exhaust Kit

