


Maytag MLE24PRAZW1 03 - UPPER CABINET AND FRONT PANEL PARTS

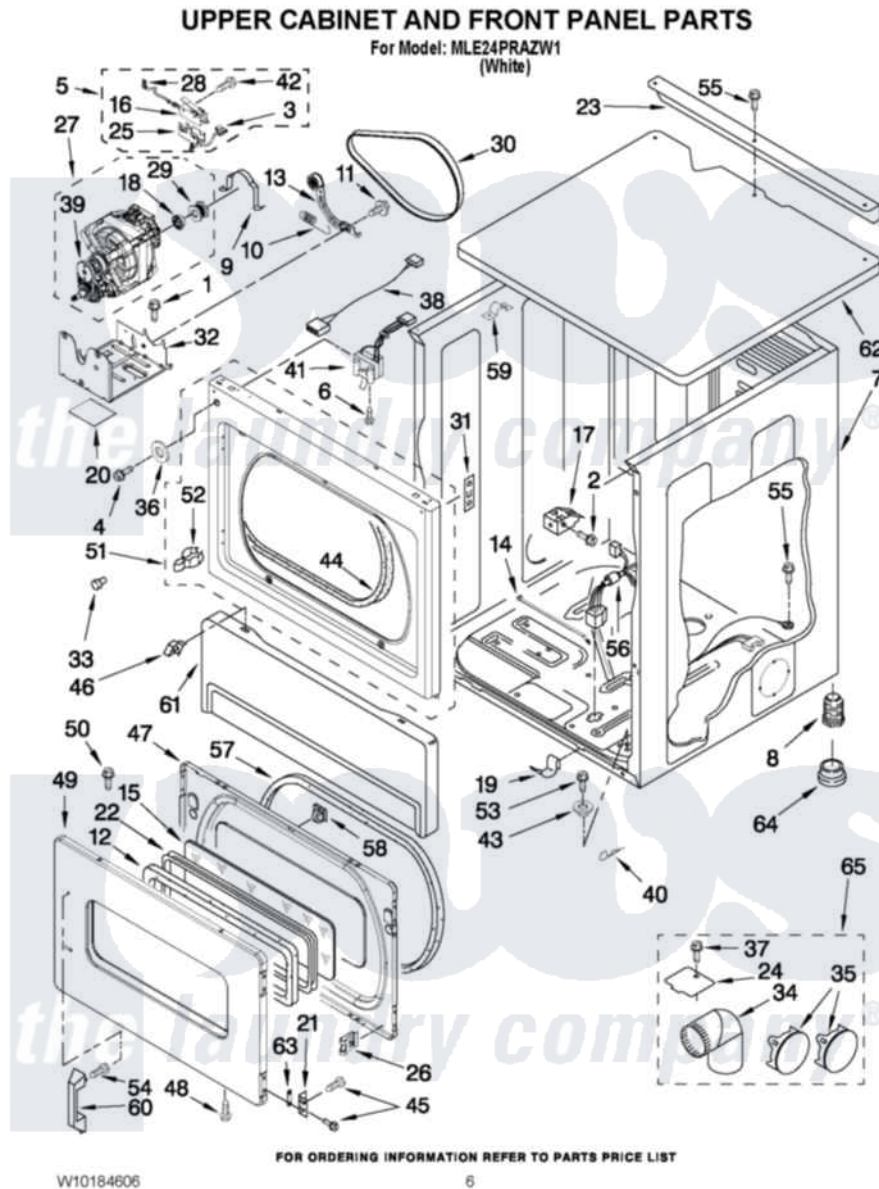

Maytag [Commercial Maytag MLE24PRAZW1 Dryer Parts](#) Parts Diagram 03 - UPPER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|---------------------------|-------------------------|--------|--|
| 1 | 3390663 | 681414 | | Screw, 10AB X 1/2 |
| 2 | 3391915 | 681615 | | Screw |
| 3 | 8539892 | | | Wire-Motor To Belt Switch |
| 4 | 3400077 | | | Screw, 10-16 X 1/2 |
| 5 | W10155571 | | | Switch, Assembly |
| 6 | 697773 | 3395530 | | Screw |
| 7 | 3978859 | 280024 | | Cabinet |
| 8 | 689172 | | | Foot, Dryer |
| 9 | 660658 | | | Clamp, Motor Mounting 343481 685441 |
| 10 | 3387374 | | | Spring, Idler |
| 11 | 3389420 | | | Retainer-Idler 1/4-20 X 1/16 |
| 12 | 3392915 | | | Gasket, Window |
| 13 | W10344192 | | | Idler Assembly |
| 14 | 8529895 | | | Tie, Cable |
| 15 | 3392918 | 3398122 | | Window Pack. Includes |

| | | | |
|----|---------------------------|---------------------------|--|
| 15 | 3392910 | 3390122 | Illustration 15 And 25) |
| NI | 3396122 | | Window Pack. Includes Illustration 15 And 25) |
| 16 | 8564010 | | Assembly, Switch And Actuator |
| 17 | 3391846 | | Clip, Front Panel |
| 18 | 3393657 | | Restrainer, Belt |
| 19 | W10291934 | | Clip |
| 20 | W10212660 | | Pad, Sound Dampening |
| 21 | W10279703 | | Hinge And Pin Assembly |
| 22 | 3392914 | | Frame, Window |
| 23 | 3979115 | | Bracket, Angle |
| 24 | 3394331 | | Plate Cover |
| 25 | 8564011 | | Bracket-Switch |
| 26 | 3389249 | | Nut, Inner Door |
| 27 | W10139766 | W10396034 | Motor Assembly 60 Hz |
| 28 | W10167613 | | Wire, Belt Switch |
| 29 | 3394341 | W10299847 | Pulley-Motor |
| 30 | W10131172 | | Belt, Drive |
| 31 | 3390902 | | Clip, Door Hinge |
| 32 | W10135695 | | Bracket, Motor |
| 33 | 693152 | | Bumper, Console |
| 34 | 279731 | 49026 | 4" - 90° Elbow |
| 35 | 697750 | W10470674 | Dryer Exhaust Kit |
| 36 | 3392186 | 4159590 | Washer |
| 37 | 488729 | | Screw |
| 38 | 8283298 | | Jumper, Door Switch |
| 39 | 3405160 | | Belt, Drive |
| 40 | W10117347 | | Cotter Pin |
| 41 | 3406109 | 3406107 | Door Switch Assembly |
| 42 | W10002600 | | Screw, 6-20 X 1 1/4 |
| 43 | 3389233 | | Bushing |
| 44 | 3387242 | | Seal, Front Panel |
| 45 | 342055 | 488627 | Screw |
| 46 | 3388229 | | Retainer, Toe Panel |
| 47 | W10205622 | W10244331 | Door-Rear |
| 48 | 694091 | | Trim, Side Right Hand |
| 49 | W10205649 | | Door, Front |
| 50 | 718032 | | Screw, 8-18 X 3/4 |
| 51 | W10192882 | W10242810 | Panel |
| 52 | 696144 | 279570 | Latch |
| 53 | 3400523 | 285875 | Kit, Security |
| 54 | 9742177 | | Screw, 8-18 X .625 |
| 55 | 3390647 | 488729 | Screw |
| 56 | W10169676 | | Harness |
| 57 | 3390735 | | Seal, Door |
| 58 | 3392538 | 279570 | Latch |
| 59 | 98997 | | Clip, Harness Following Parts Optional Are Not Supplied On This Whirlpool Model. But Are Available For Purchase. |
| 60 | W10213202 | | Handle, Door |
| 61 | 697215 | 3406797 | Toe Panel |
| 62 | 3389351 | | Top |
| 63 | W10191265 | | Plug, Hinge Screw Front Panel |

