


Maytag MLG24PDAXW1 03 - UPPER CABINET AND FRONT PANEL PARTS

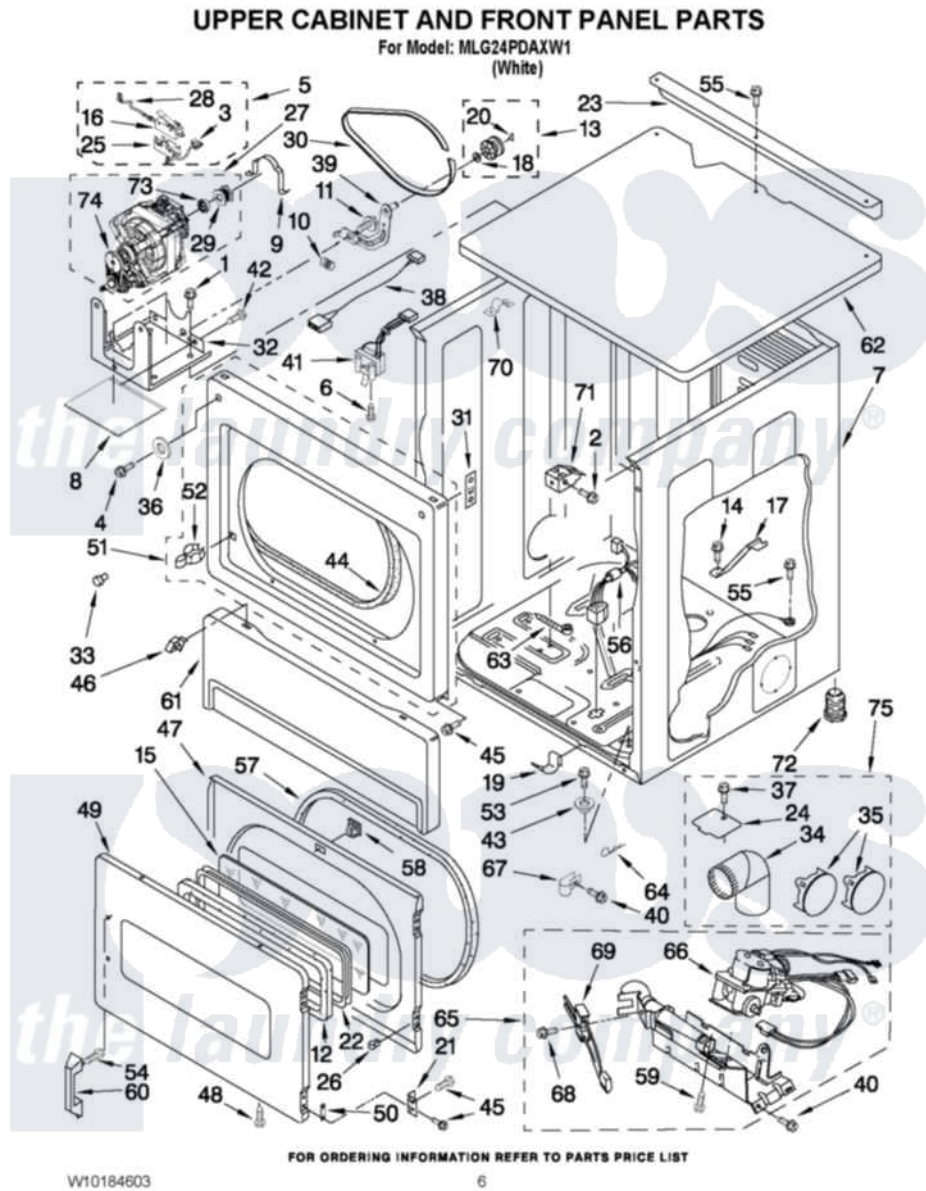

Maytag [Commercial Maytag MLG24PDAXW1 Dryer Parts](#) Parts Diagram 03 - UPPER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3390663	681414		Screw, 10AB X 1/2
2	3391915	681615		Screw
3	8539892			Wire-Motor To Belt Switch
4	3400077			Screw, 10-16 X 1/2
5	W10155571			Switch, Assembly
6	697773	3395530		Screw
7	3978859	280024		Cabinet
8	W10212660			Pad, Sound Dampening
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	3392915			Gasket, Window
13	3388672	279640		Pulley-Idr
14	693995			Screw, Hex Head
15	3399018	3398122		Window Pack. Includes

15	3396122	3396122	Illustration 15 And 25)
NI	3396122		Window Pack. Includes Illustration 15 And 25)
16	8564010		Assembly, Switch And Actuator
17	8529757		Bracket, Burner
18	233520		Washer, Thrust
19	297092		Clip
20	690997		Washer, Thrust
21	3389247		Hinge And Pin Assembly
22	3392914		Frame, Window
23	3979115		Bracket, Angle
24	3394331		Plate Cover
25	8564011		Bracket-Switch
26	3389249		Nut, Inner Door
27	W10139766	W10396034	Motor Assembly 60 Hz
28	W10167613		Wire, Belt Switch
29	3394341	W10299847	Pulley-Motor
30	W10131172		Belt, Drive
31	3390902		Clip, Door Hinge
32	W10135695		Bracket, Motor
33	693152		Bumper, Console
34	279731	49026	4" - 90° Elbow
35	697750	W10470674	Dryer Exhaust Kit
36	3392186	4159590	Washer
37	488729		Screw
38	8283298		Jumper, Door Switch
39	W10141380	W10344192	Idler Assembly
40	343641	681414	Screw, 10AB X 1/2
41	3406109	3406107	Door Switch Assembly
42	W10002600		Screw, 6-20 X 1 1/4
43	3389233		Bushing
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	W10205622	W10244331	Door-Rear
48	694091		Trim, Side Right Hand
49	W10205649		Door, Front
50	W10191265		Plug, Hinge Screw Front Panel
51	W10192882	W10242810	Panel
52	696144	279570	Latch
53	3400523	285875	Kit, Security
54	9742177		Screw, 8-18 X .625
55	3390647	488729	Screw
56	W10169686		Harness
57	3390735		Seal, Door
58	3392538	279570	Latch
59	3387057		Screw, 10-16 X 1/2 Orifice, Burner
60	W10213202		Handle, Door
61	697215	3406797	Toe Panel
62	3389351		Top
63	3391018		Tie Cable
64	W10117347		Cotter Pin

65	W10135231	W10492508	Burner-Gas
66	697441		Valve And Union Shut-Off
67	3387561		Clamp-Pipe
68	3393909		Screw, 8-32 X 7/8
69	686590	279311	Ignitor
70	98997		Clip, Harness Following Parts Optional Are Not Supplied On This Whirlpool Model. But Are Available For Purchase.
71	3391846		Clip, Front Panel
72	689172		Foot, Dryer
73	3393657		Restrainer, Belt
74	3405160		Belt, Drive
NI	279818	W10470674	Dryer Exhaust Kit

the laundry company[®]

the laundry company[®]

the laundry company[®]