


Maytag MLG24PDAXW2 01 - LOWER CABINET AND FRONT PANEL PARTS

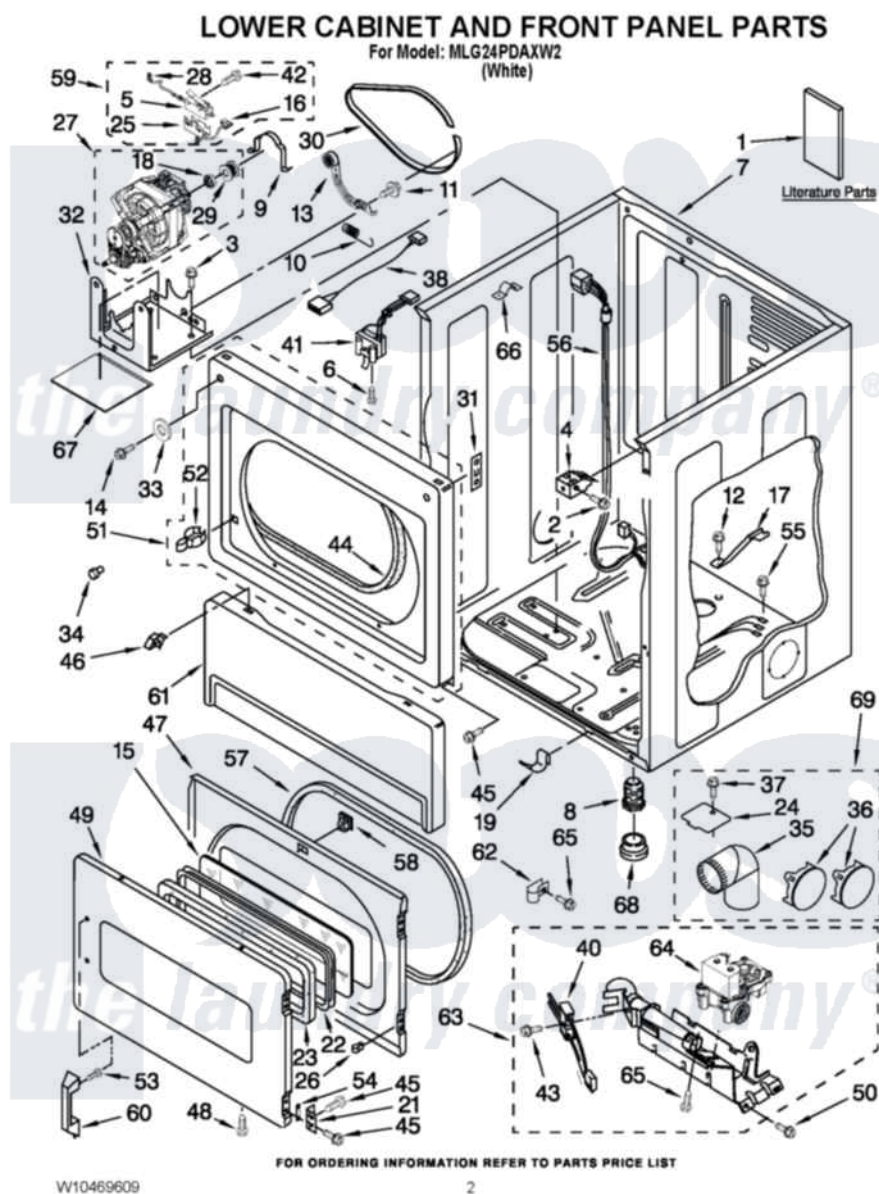

Maytag [Commercial Maytag MLG24PDAXW2 Dryer Parts](#) Parts Diagram 01 - LOWER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10184580		Not Available	Installation Instructions
"	W10135168		Not Available	Tech Sheet
"	W10469609		Not Available	REPAIR PARTS LIST
2	3391915	681615		Screw
3	3390663	681414		Screw, 10AB X 1/2
4	3391846			Clip, Front Panel
5	8564010			Assembly, Switch And Actuator
6	697773	3395530		Screw
7	8310656			Cabinet
8	3392100	49621		Feet-Leveling
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16

12	693995		Screw, Hex Head
13	W10344192		Idler Assembly
14	3400077		Screw, 10-16 X 1/2
15	3392918	3396122	Window Pack. Includes Illustration 15 And 25)
NI	3396122		Window Pack. Includes Illustration 15 And 25)
16	8539892		Wire-Motor To Belt Switch
17	8529757		Bracket, Burner
18	3393657		Restrainer, Belt
19	W10291934		Clip
21	W10279703		Hinge And Pin Assembly
22	3392914		Frame, Window
23	3392915		Gasket, Window
24	3394331		Plate Cover
25	8564011		Bracket-Switch
26	3389249		Nut, Inner Door
27	W10139766	W10396034	Motor Assembly 60 Hz
28	W10167613		Wire, Belt Switch
29	3394341	W10299847	Pulley-Motor
30	W10131172		Belt, Drive
31	3390902		Clip, Door Hinge
32	W10135695		Bracket, Motor
33	3392186	4159590	Washer
34	693152		Bumper, Console
35	279731	49026	4" - 90° Elbow
36	697750	W10470674	Dryer Exhaust Kit
37	488729		Screw
38	8283298		Jumper, Door Switch
40	686590	279311	Ignitor
41	3406109	3406107	Door Switch Assembly
42	W10002600		Screw, 6-20 X 1 1/4
43	3393909		Screw, 8-32 X 7/8
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	W10323063		Door, Rear
48	342055	488627	Screw
49	W10322548		Door, Front
50	343641	681414	Screw, 10AB X 1/2
51	W10192882	W10242810	Panel
52	696144	279570	Latch
53	9742177		Screw, 8-18 X .625
54	W10191265		Plug, Hinge Screw Front Panel
55	3390647	488729	Screw
56	W10169687		Harness
57	3390735		Seal, Door
58	3392538	279570	Latch
59	W10155571		Switch, Assembly
60	W10213202		Handle, Door
61	697215	3406797	Toe Panel
62	3387561		Clamp-Pipe
63	W10400668	W10492508	Burner-Gas

64	W10299939	Valve, Gas 60 Hz
65	3387057	Screw, 10-16 X 1/2 Orifice, Burner
66	98997	Clip, Harness Following Parts Optional Are Not Supplied On This Whirlpool Model. But Are Available For Purchase.
67	W10212660	Pad, Sound Dampening
68	3391943	Boot, Foot
NI	279818	W10470674 Dryer Exhaust Kit

