


# Maytag MLG24PNAGW2 03 - UPPER CABINET AND FRONT PANEL PARTS

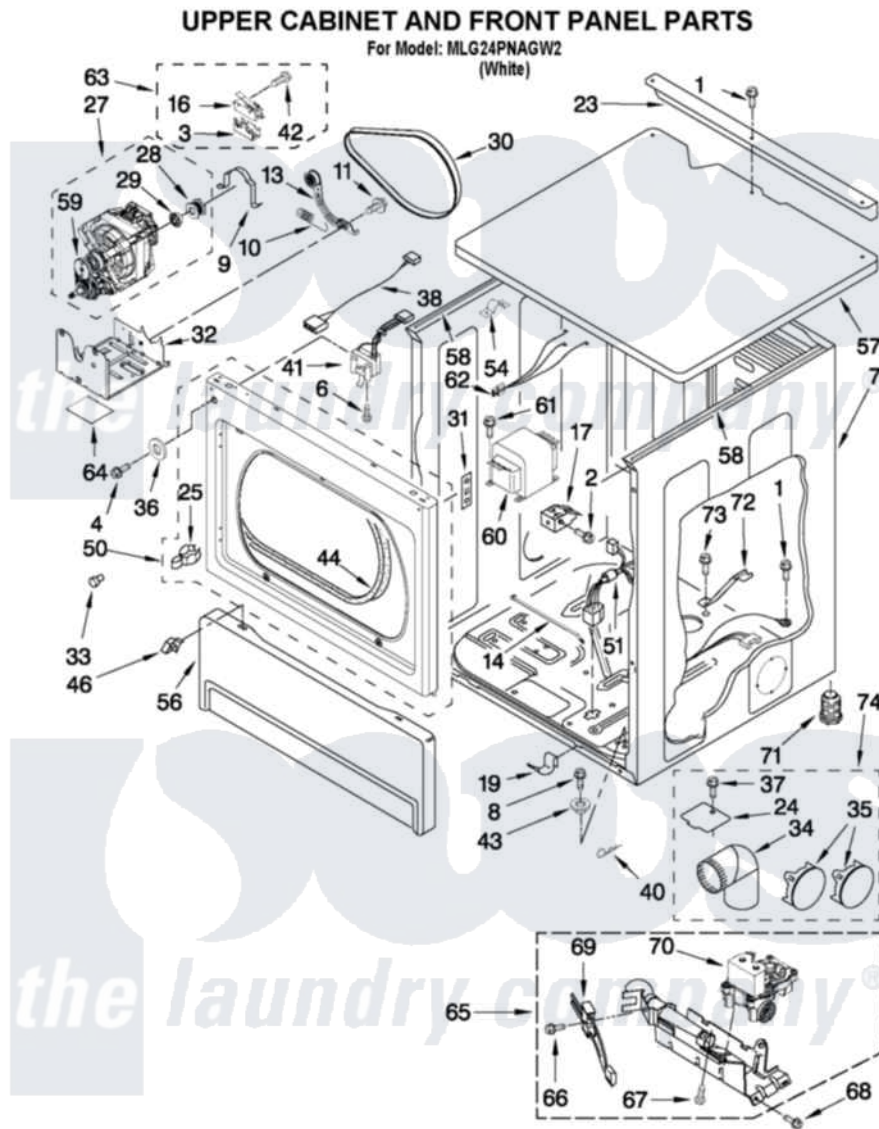

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10496265

6

Maytag [Commercial Maytag MLG24PNAGW2 Dryer Parts](#) Parts Diagram 03 - UPPER CABINET AND FRONT PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3390647	<a href="#">488729</a>		Screw
2	3391915	<a href="#">681615</a>		Screw
3	<a href="#">8564011</a>			Bracket-Switch
4	<a href="#">3400077</a>			Screw, 10-16 X 1/2
6	697773	<a href="#">3395530</a>		Screw
7	3978859	<a href="#">280024</a>		Cabinet
8	3400523	<a href="#">285875</a>		Kit, Security
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
13	<a href="#">W10344192</a>			Idler Assembly
14	<a href="#">8529895</a>			Tie, Cable
16	<a href="#">W10410873</a>			Assembly, Switch And Actuator

17	<a href="#">3391846</a>		Clip, Front Panel
19	<a href="#">W10291934</a>		Clip
23	<a href="#">3979115</a>		Bracket, Angle
24	<a href="#">3394331</a>		Plate Cover
25	696144	<a href="#">279570</a>	Latch
27	W10289662	<a href="#">W10416574</a>	Motor-Drive
28	<a href="#">W10167237</a>		Pulley
29	<a href="#">3393657</a>		Restrainer, Belt
30	<a href="#">W10131172</a>		Belt, Drive
31	<a href="#">3390902</a>		Clip, Door Hinge
32	<a href="#">W10135695</a>		Bracket, Motor
33	<a href="#">693152</a>		Bumper, Console
34	279731	<a href="#">49026</a>	4" - 90° Elbow
35	<a href="#">49252</a>		Plug, Multivent
36	<a href="#">W10223794</a>		Washer
37	<a href="#">488729</a>		Screw
38	<a href="#">W10231861</a>		Jumper, Door Switch
40	<a href="#">W10117347</a>		Cotter Pin
41	<a href="#">W10237959</a>		Door Switch Assembly
42	<a href="#">3400934</a>		Assembly, Screw And Insulator
43	<a href="#">3389233</a>		Bushing
44	<a href="#">3387242</a>		Seal, Front Panel
46	<a href="#">3388229</a>		Retainer, Toe Panel
50	<a href="#">W10234293</a>		Upper Front Panel
51	<a href="#">W10386322</a>		Harness
54	<a href="#">98997</a>		Clip, Harness Following Parts Optional Are Not Supplied On This Whirlpool Model. But Are Available For Purchase.
56	697215	<a href="#">3406797</a>	Toe Panel
57	<a href="#">3389351</a>		Top
58	<a href="#">8318396</a>		Foam-Seal
59	<a href="#">3405160</a>		Belt, Drive
60	<a href="#">3977633</a>		Autotransformer
61	<a href="#">3400000</a>		Screw, 10-24 X 3/8
62	<a href="#">W10190549</a>		Transformer Jumper
63	<a href="#">W10259136</a>		Switch, Assembly
64	<a href="#">W10212660</a>		Pad, Sound Dampening
65	W10469829	Not Available	BURNER ASSEMBLY 50 HZ. (REFER TO PAGE 8 & 9 FOR FURTHER BREAKDOWN)
66	<a href="#">3393909</a>		Screw, 8-32 X 7/8
67	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
68	<a href="#">3387057</a>		Screw, 10-16 X 1/2 Orifice, Burner
69	686590	<a href="#">279311</a>	Ignitor
70	<a href="#">W10304603</a>		Valve, Gas 60 Hz
71	<a href="#">689172</a>		Foot, Dryer
72	<a href="#">W10181903</a>		Bracket, Burner
73	<a href="#">693995</a>		Screw, Hex Head
NI	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit