


Whirlpool 8530040 01 - CABINET PARTS

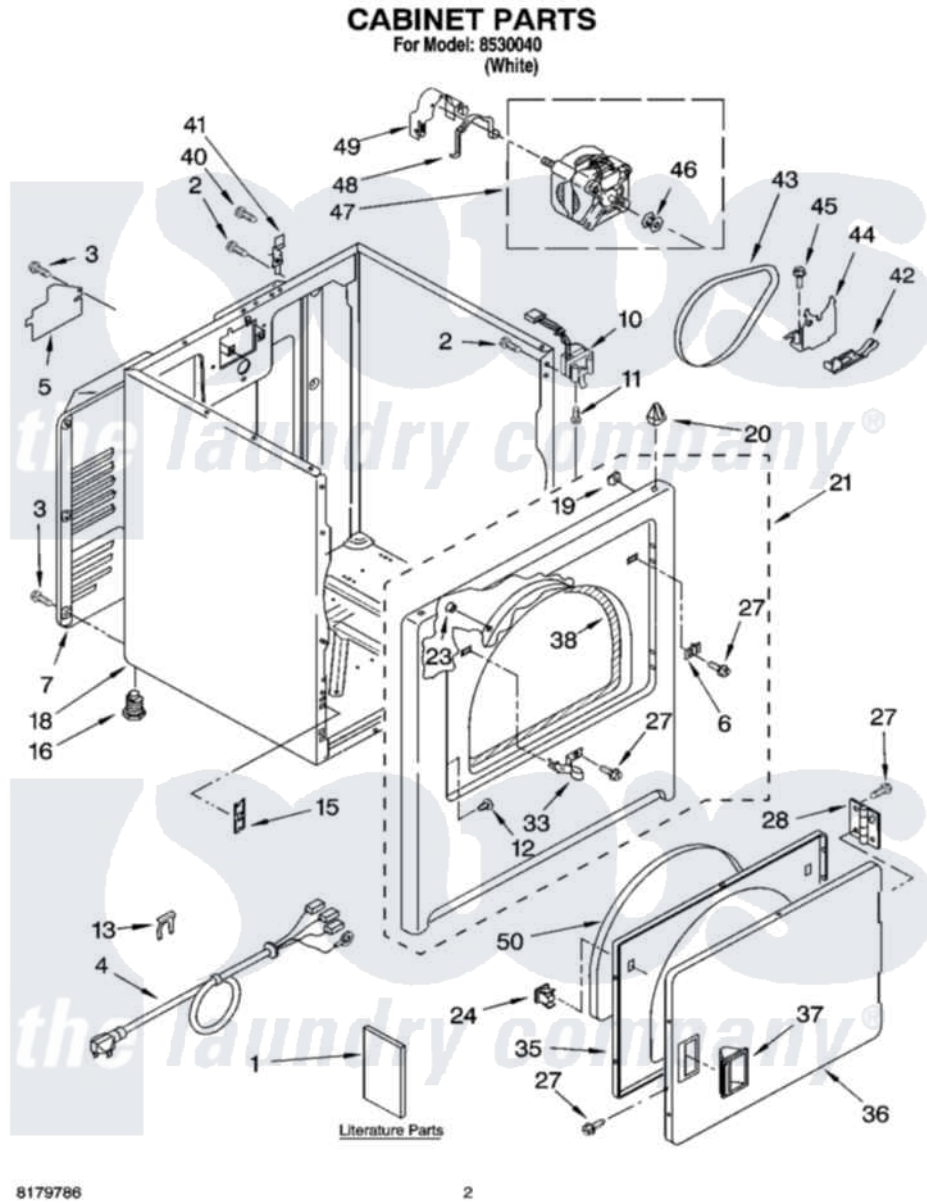

Whirlpool [Commercial Whirlpool 8530040 Dryer Parts](#) Parts Diagram 01 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8532022		Not Available	Literature Parts (Label, Wiring Diagram)
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
4	3394208			Cord, Power
5	3394202		Not Available	Cover, Terminal Block
6	3403630			Plug, Strike Hole
7	3396805	280043		Panel-Rear
10	3406109	3406107		Door Switch Assembly
11	697773	3395530		Screw
12	3404413			Plug, Hinge Hole
13	694415			Clip, Strain Relief
15	3394083			Clip, Front Panel
16	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
18	8530603	8533643		Cabinet
19	98234			Clip, U-Bend

20	690363	18776	Lock, Front Top
21	3403444	279852	Panel
23	685203	279220	Clip
24	690081	279570	Latch
27	342055	488627	Screw
28	3405514	W10362431	Hinge And Pin Assembly
33	3403431		Strike, Panel
35	3402341		Door, Inner
36	3402335		Door, Front
37	3405184		Handle, Door
38	3406129		Seal And Bearing Assembly
40	697776	4331106	Screw, No.10-32 X 7/16
41	238088	8066217	Hinge, Top
42	3394332	691366	Idler And Pulley Assembly
43	8066065	341241	Belt
44	348780		Base, Motor
45	3400500		Bolt, 3405245 5/16-18 X 3/4
46	3394341	W10299847	Pulley-Motor
47	661654	279827	Motor-Drve
48	660658		Clamp, Motor Mounting 343481 685441
49	3404162		Clamp, Motor
50	3405246		Seal, Door Push-To-Start

