 
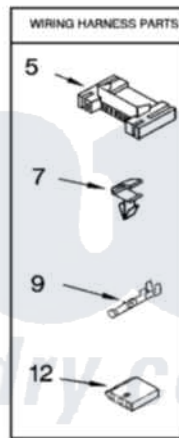 


# Whirlpool 8530040 02 - TOP AND HARNESS PARTS

## TOP AND HARNESS PARTS

For Model: 8530040  
(White)

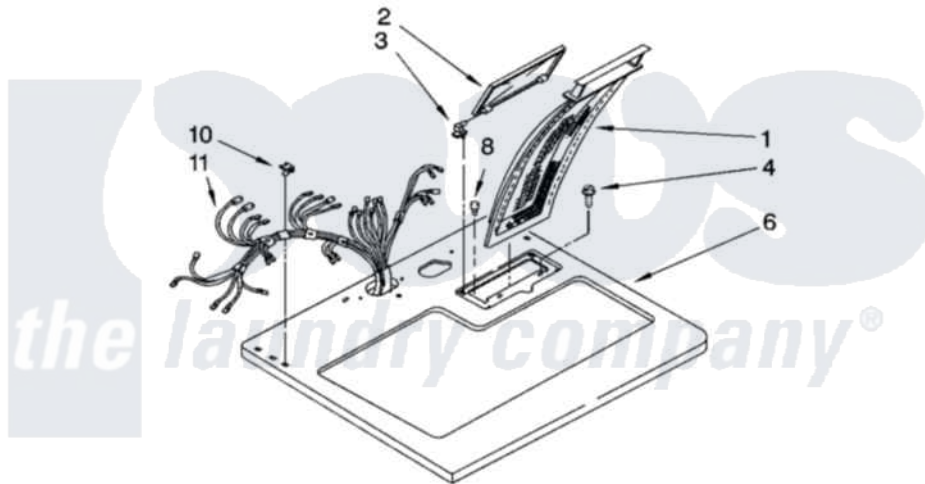

8179786

4

Whirlpool [Commercial Whirlpool 8530040 Dryer Parts](#) Parts Diagram 02 - TOP AND HARNESS PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">349639</a>			HANdle And Lint Screen Assembly
2	<a href="#">8283378</a>			Cover, Lint Screen
3	<a href="#">3978605</a>	<a href="#">W10044470</a>		Hinge, RH
"	<a href="#">3978606</a>			Hinge, Lint Lid
4	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor
5	<a href="#">3395683</a>			Receptacle, Multi-Terminal
6	8271390	<a href="#">8521918</a>		Top
7	<a href="#">3394427</a>			Clip-Harness
8	297535	<a href="#">17258</a>		Bumper
9	<a href="#">94614</a>			Terminal
10	<a href="#">357213</a>			Nut, Push-In
11	8529859		Not Available	Harness, Wiring
12	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
"	BLANK		Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>		Kit, Dryer Repair

[72017](#)

Paint, Touch-Up

"

[350930](#)

Paint, Pressurized Spray B

"

[350938](#)

Paint, Pressurized Spray B

"

[799344](#)

Paint, Touch-Up )

