


Whirlpool CA2751XSW1 03 - CONSOLE

CONSOLE PARTS For Model: CA2751XSW0 and CA2751XSW1

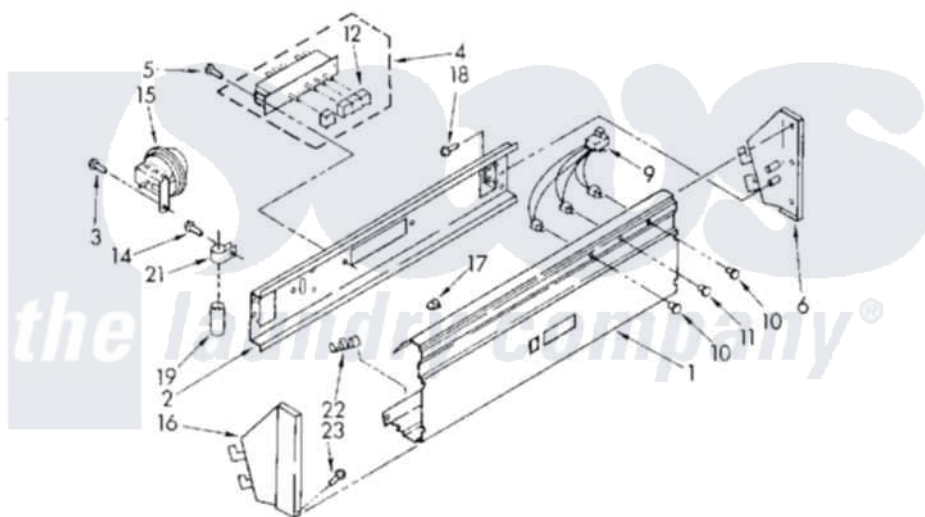

385292

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

4

788-E-4

Whirlpool [Commercial Whirlpool CA2751XSW1 Washer Parts](#) Parts Diagram 03 - CONSOLE

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3347634	3353946		Panel, Console
2	3347632	3352860		Bracket, Control
3	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
4	389138	3355916		Switch, Cycle Selector
5	9424101	965173		Screw, 8 X 3/8 Phlps. Round Hd.
6	3347705			End Cap
9	3348674	3352457		Lights, Indicator
10	3348109			Lens Light
11	3348110			Lens, Yellow
12	3348587			Button, Pushbutton
14	343641	681414		Screw, 10AB X 1/2
15	3348542	279947		Switch-WL
16	63789	285653		Endcap
17	689559			Nut, Push-In
18	355226		Not Available	Screw, End Cap To Bracket

19	357021	8572717	Capacitor, Motor Start
21	357030		Clamp, Capacitor
22	357572	W10113937	Clip, Grounding
23	64211	388326	Screw, 8-18 X 1.25

