


# Whirlpool CA2751XSW4 03 - CONSOLE

## CONSOLE PARTS

For Model. CA2751XSW4

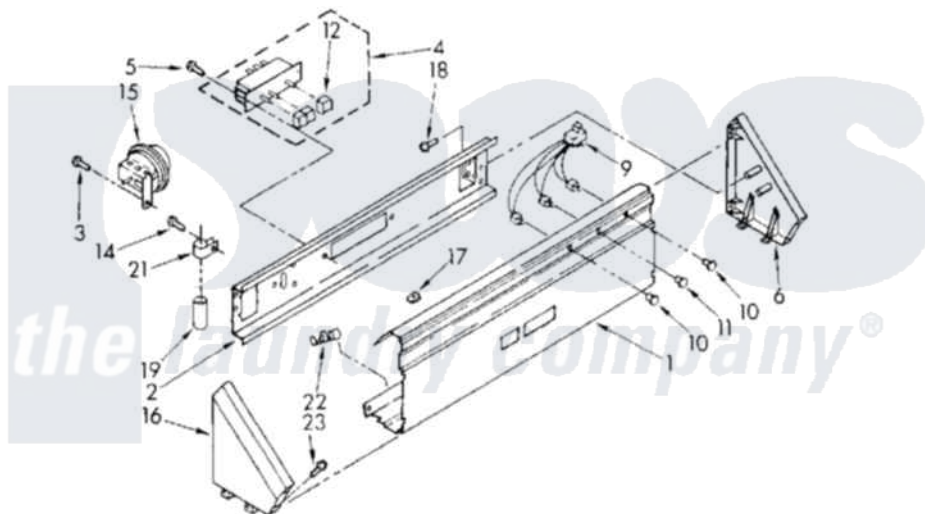

3348939

4

8/1-2-4

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Whirlpool [Commercial Whirlpool CA2751XSW4 Washer Parts](#) Parts Diagram 03 - CONSOLE

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3347634	<a href="#">3353946</a>		Panel, Console
2	3347632	<a href="#">3352860</a>		Bracket, Control
3	<a href="#">90767</a>			Screw, 8A X 3/8 HeX Washer Head Tapping
4	389138	<a href="#">3355916</a>		Switch, Cycle Selector
5	9424101	<a href="#">965173</a>		Screw, 8 X 3/8 Phlps. Round Hd.
6	<a href="#">3347705</a>			End Cap
9	3348674	<a href="#">3352457</a>		Lights, Indicator
10	<a href="#">3348109</a>			Lens Light
11	<a href="#">3348110</a>			Lens, Yellow
12	<a href="#">3348587</a>			Button, Pushbutton
14	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
15	3348542	<a href="#">279947</a>		Switch-WL
16	63789	<a href="#">285653</a>		Endcap
17	<a href="#">689559</a>			Nut, Push-In
18	355226		Not Available	Screw, End Cap To Bracket

19	357021	<a href="#">8572717</a>	Capacitor, Motor Start
21	<a href="#">357030</a>		Clamp, Capacitor
22	357572	<a href="#">W10113937</a>	Clip, Grounding
23	64211	<a href="#">388326</a>	Screw, 8-18 X 1.25

