


# Whirlpool CA2751XWW1 03 - CONTROL PANEL

## CONTROL PANEL PARTS

For Model: CA2751XWW1

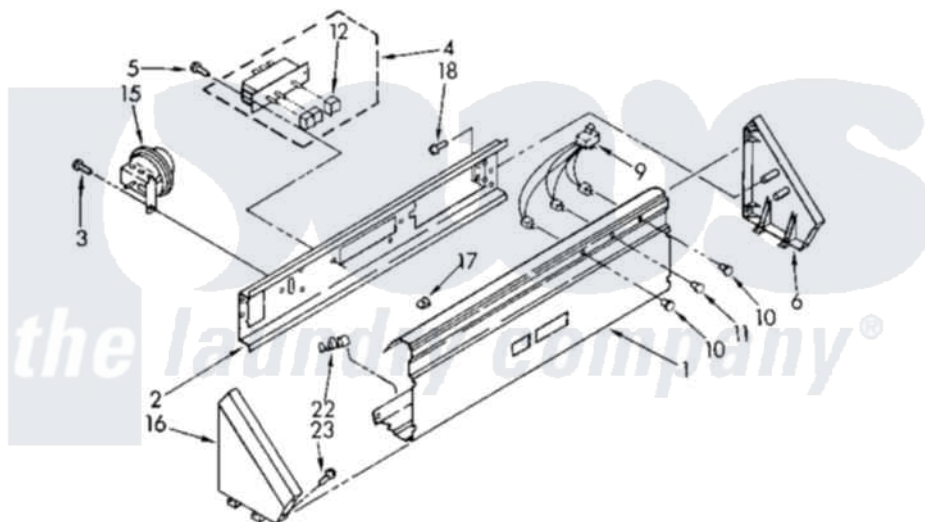

3355015

4

Whirlpool [Commercial Whirlpool CA2751XWW1 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3353946</a>			Panel, Console
2	<a href="#">3352860</a>			Bracket, Control
3	<a href="#">90767</a>			Screw, 8A X 3/8 HeX Washer Head Tapping
4	389138	<a href="#">3355916</a>		Switch, Cycle Selector
5	9424101	<a href="#">965173</a>		Screw, 8 X 3/8 Phlps. Round Hd.
6	<a href="#">3347705</a>			End Cap
9	<a href="#">3352457</a>			Lights, Indicator
10	<a href="#">3348109</a>			Lens Light
11	<a href="#">3348110</a>			Lens, Yellow
12	<a href="#">3348587</a>			Button, Pushbutton
15	3348542	<a href="#">279947</a>		Switch-WL
16	63789	<a href="#">285653</a>		Endcap
17	<a href="#">689559</a>			Nut, Push-In
18	355326		Not Available	Screw, End Cap To Bracket (4)

