


# Whirlpool CAM2742TQ0 05 - AGITATOR, BASKET AND TUB PARTS

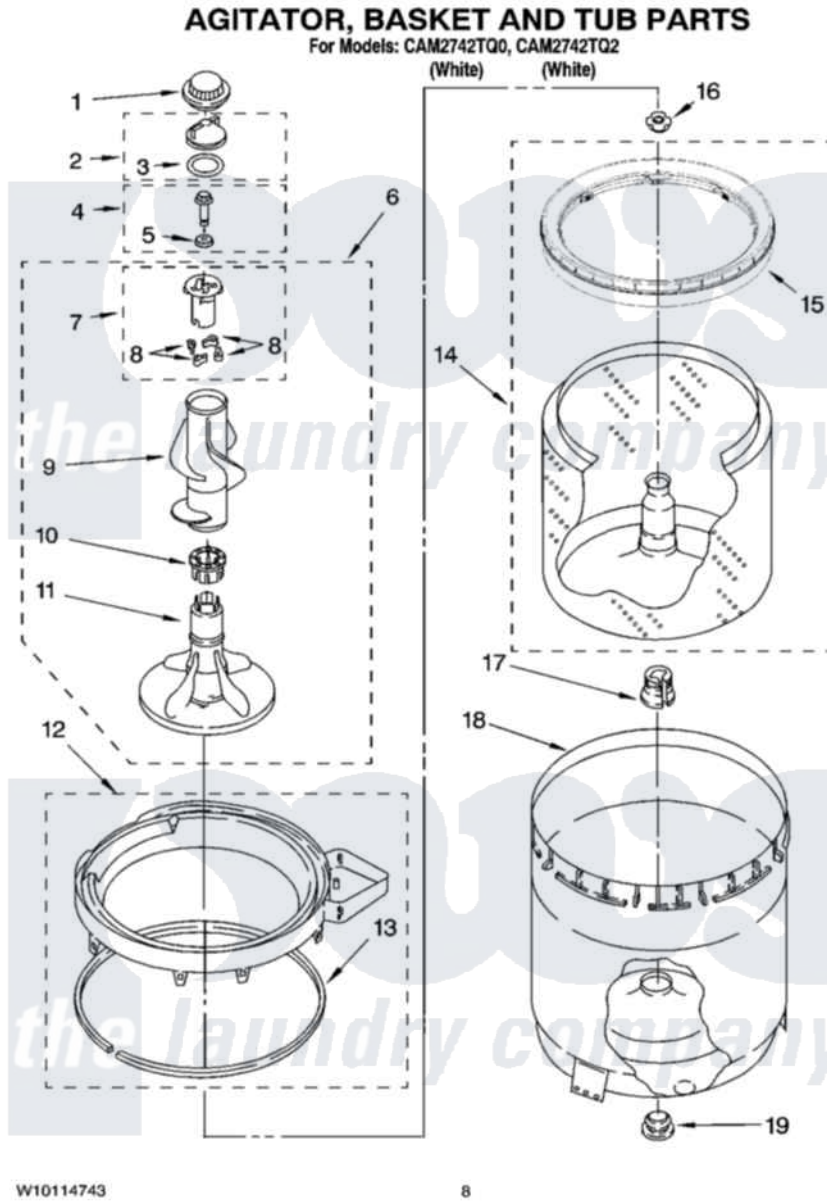

Whirlpool Commercial Whirlpool CAM2742TQ0 Washer Parts Parts Diagram 05 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	387094	<a href="#">285550</a>		Cap
3	<a href="#">W10072840</a>			Fabric Softener
4	<a href="#">358237</a>			Screw And Washer
5	<a href="#">3949550</a>			Washer
6	<a href="#">3349743</a>			Agitator
7	3947410	<a href="#">285751</a>		Dog-Agitator
8	3366877	<a href="#">80040</a>		Dog-Agitator
9	<a href="#">3349610</a>			Mover, Agitator Clutch
10	3351014	<a href="#">285620</a>		Washer
11	<a href="#">3349578</a>			Agitator
12	<a href="#">8528150</a>	<a href="#">W10445870</a>		Ring-Tub
13	<a href="#">3976308</a>			Gasket, Tub Ring
14	<a href="#">8526017</a>	<a href="#">W10389329</a>		Clothes Container, Assembly
15	<a href="#">387240</a>			Ring, Balance
16	<a href="#">21366</a>			Nut, Spanner

17 [389140](#)

Tub Block, Basket Drive

18 W10135425

[63849](#)

Strain Relief, Power Cord

19 [383727](#)

Gasket, Centerpodt

