


Whirlpool CAM2742TQ3 01 - TOP AND CABINET PARTS

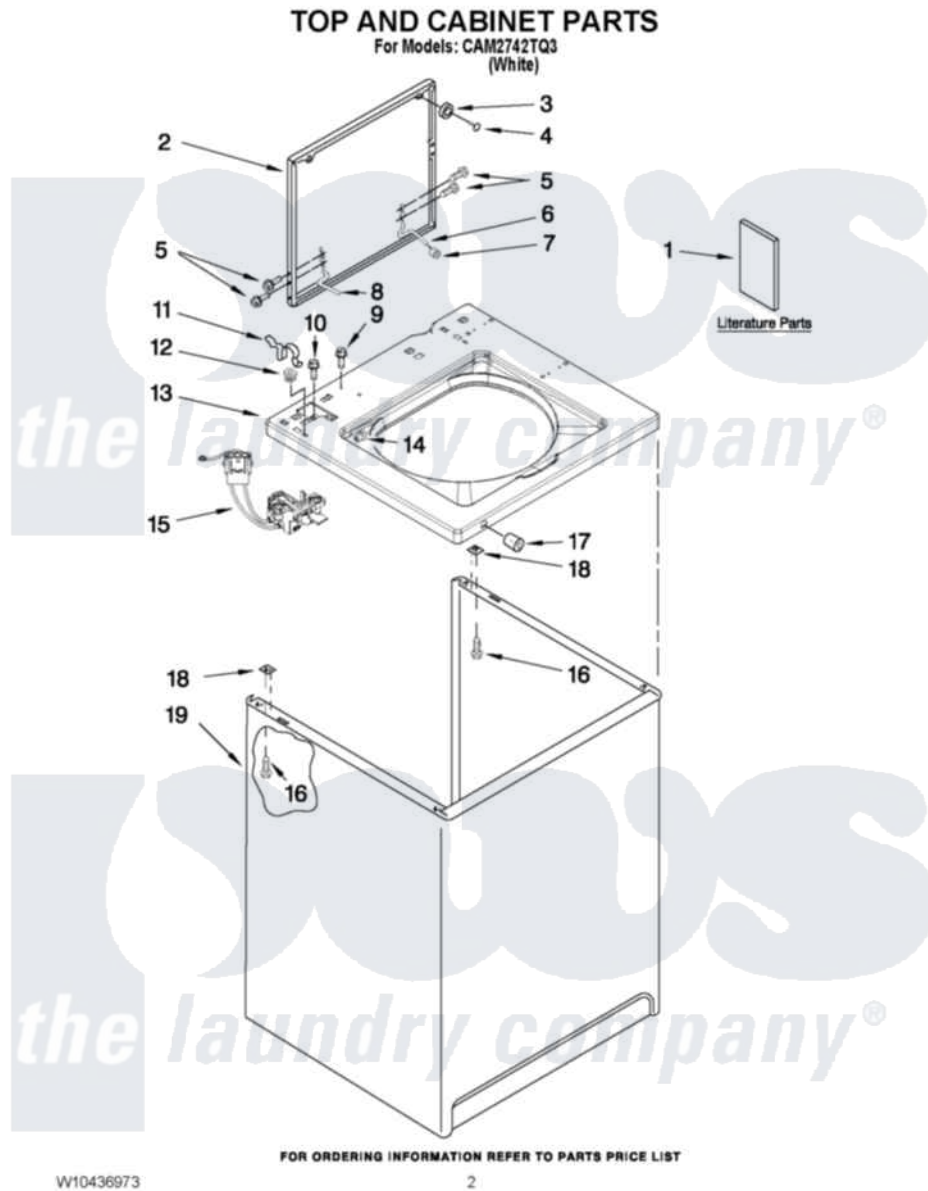

Whirlpool [Commercial Whirlpool CAM2742TQ3 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8316532			Installation Instructions Coin Kit
"	W10135801			Wiring Diagram
"	W10422258		Not Available	ENERGY GUIDE
"	8315954		Not Available	INSTALLATION, INSTRUCTIONS
2	W10173243	W10193874		Lid
3	356908			Bumper, Lid
4	356907			Rivet, Plastic
5	W10119828			Screw, Lid Hinge Mounting
6	54583			Hinge, Lid
7	19119			Bumper, Lid Hinge
8	8524784			Hinge, Lid
9	3351614			Screw, Gearcase Cover Mounting
10	3400611			Screw And Washer, Lid Switch
11	62780			Clip, Top And Cabinet And Rear Panel

12	358473		Nut, Push-In
13	W10114733	8524688	Top
14	21258		Bearing, Lid Hinge
15	8054980		Switch, Lid
16	3390631		Screw, 10-16 X 3/8
17	387371		Lock, Plug Also Available
18	62750		Spacer, Cabinet To Top (4)
19	63424		Cabinet

