


Whirlpool CAM2742TQ3 05 - AGITATOR, BASKET AND TUB PARTS

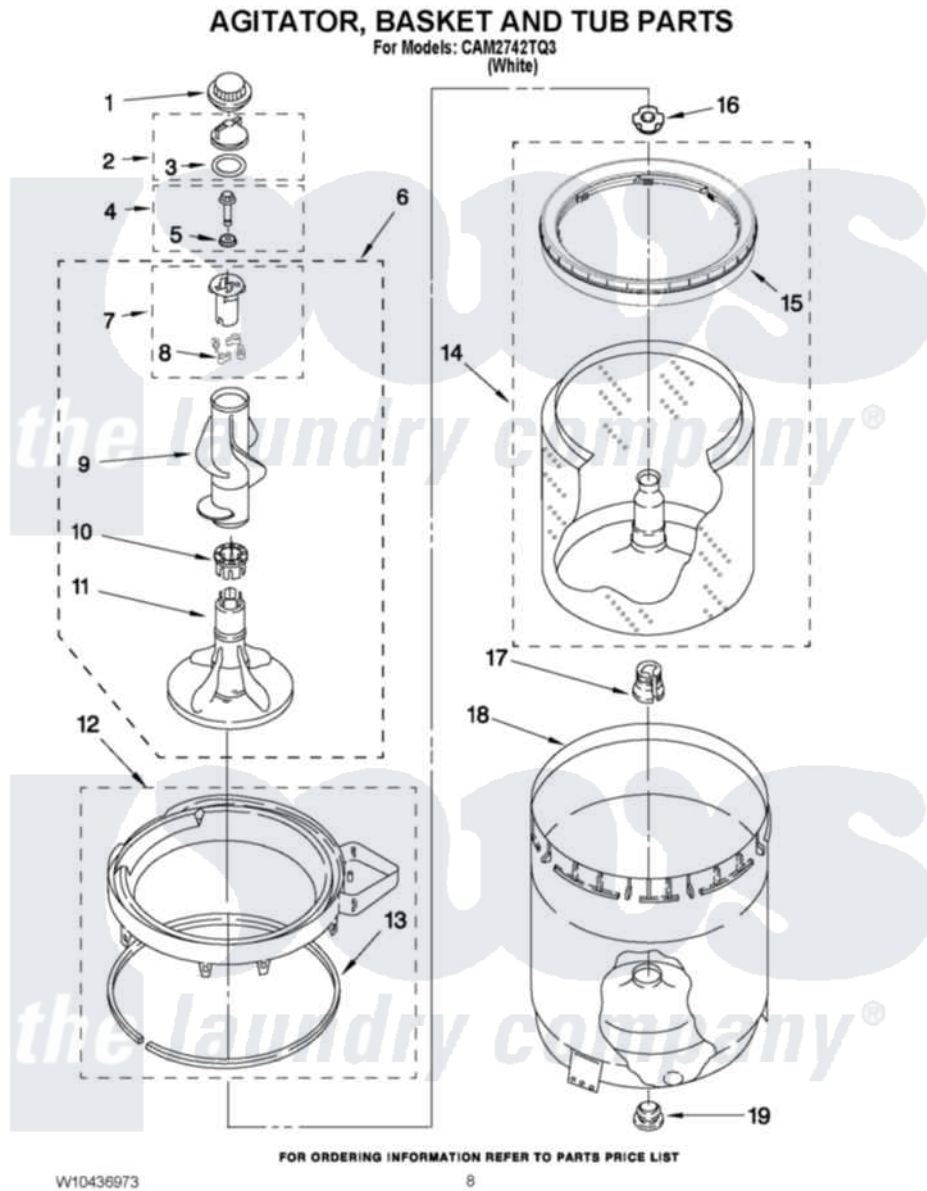

Whirlpool [Commercial Whirlpool CAM2742TQ3 Washer Parts](#) Parts Diagram 05 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	387094	285550		Cap
3	W10072840			Fabric Softener
4	W10003790			Screw And Washer
5	3949550			Washer
6	3349743			Agitator
7	3947410	285751		Dog-Agitator
8	3366877	80040		Dog-Agitator
9	3349610			Mover, Agitator Clutch
10	3351014	285620		Washer
11	3349578			Agitator
12	8528150	W10445870		Ring-Tub
13	3976308			Gasket, Tub Ring
14	W10389329			Clothes Container, Assembly
15	387240			Ring, Balance
16	21366			Nut, Spanner

17 [389140](#)

Tub Block, Basket Drive

18 W10135425

[63849](#)

Strain Relief, Power Cord

19 [383727](#)

Gasket, Centerpodt

