


Whirlpool CAM2762KQ0 03 - CONTROL PANEL

CONTROL PANEL PARTS

For Model: CAM2762KQ0
(White)

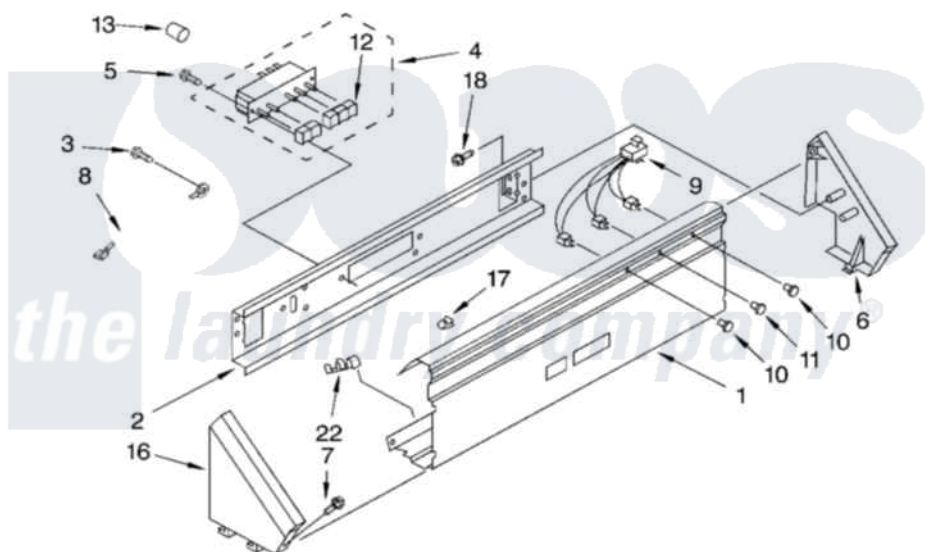

8524724

4

Whirlpool [Commercial Whirlpool CAM2762KQ0 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|--------|------------------------|
| 1 | 8316235 | | | Panel, Console |
| 2 | 3361029 | | | Bracket, Control |
| 3 | 3400073 | | | Screw, Ground |
| 4 | 8316435 | W10330136 | | Switch, Cycle Selector |
| 5 | 3390646 | W10139210 | | Screw, 8-18 X 5/16 |
| 6 | 8316516 | W10096340 | | Cap, End |
| 7 | 8281182 | | | Screw, 8-18 X 1 1/4 |
| 8 | 3398893 | 3395559 | | Wire |
| 9 | 3352457 | | | Lights, Indicator |
| 10 | 3348109 | | | Lens Light |
| 11 | 3348110 | | | Lens, Yellow |
| 12 | 8316433 | | | Pushbutton |
| 13 | 359702 | W10491983 | | Tip-Tines |
| 16 | 3949734 | W10096320 | | Cap, End |
| 17 | 689559 | | | Nut, Push-In |
| 18 | 97787 | W10109200 | | Screw, Baffle Mounting |

