


Whirlpool CAM2762RQ0 01 - TOP AND CABINET PARTS

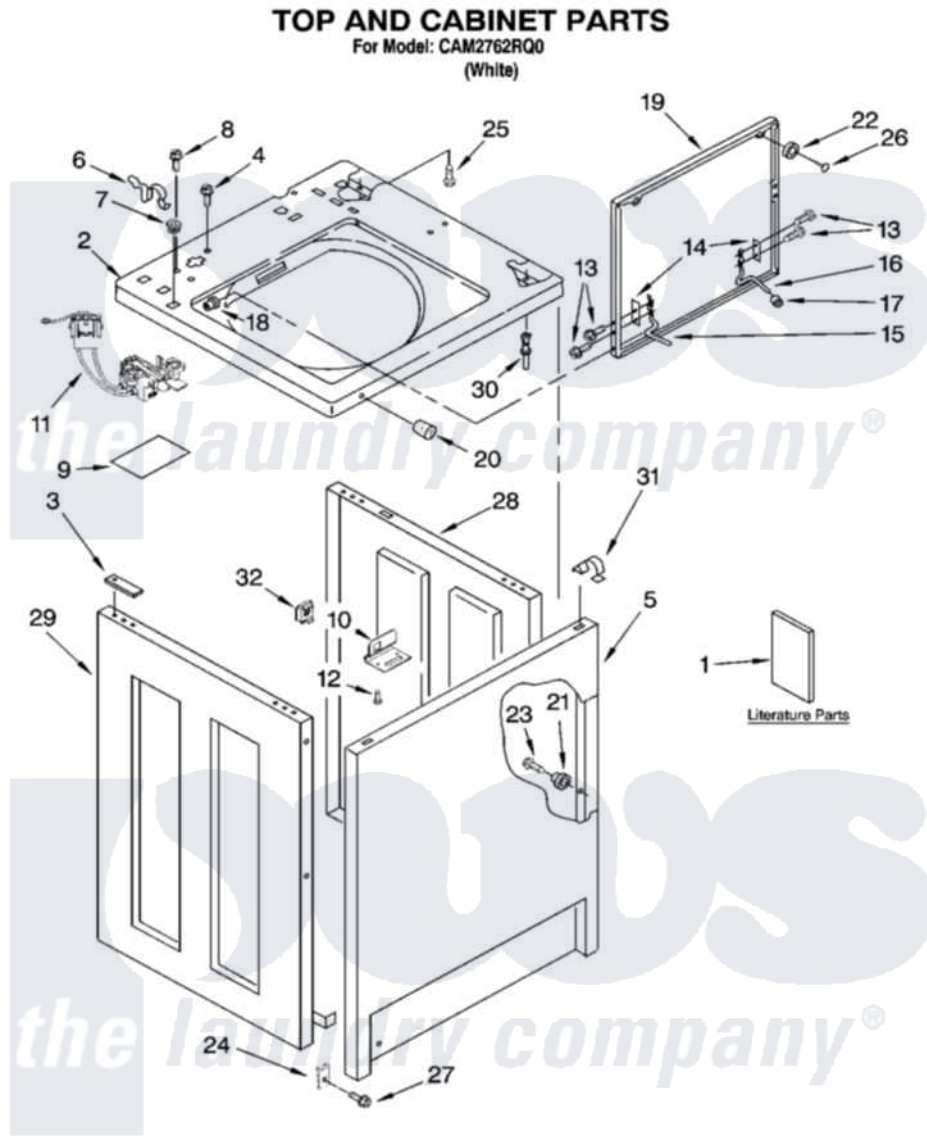

8579450

2

Whirlpool [Commercial Whirlpool CAM2762RQ0 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8524739		Not Available	Installation Instructions
"	8574996			Wiring Diagram
"	8579450			Repair Parts List
2	8524688			Top
3	3353950			Spacer, Cabinet To Top
4	3351614			Screw, Gearcase Cover Mounting
5	3358500			Panel, Front
6	62780			Clip, Top And Cabinet And Rear Panel
7	358473			Nut, Push-In
8	3400611			Screw And Washer, Lid Switch
9	3953152			Shield, Pressure Switch
10	3353948			Bracket, Lock
11	8054980			Switch, Lid
12	63554			Rivet
13	355274	W10119828		Screw, Lid Hinge Mounting

14	21097		Pad, Lid Hinge
15	8524784		Hinge, Lid
16	54583		Hinge, Lid
17	19119		Bumper, Lid Hinge
18	21258		Bearing, Lid Hinge
19	8316257	W10193854W10193854	Lid
20	387371		Lock, Plug Also Available
21	3353812		Locator
22	356908		Bumper, Lid
23	718258	9741232	Screw, 8-18 X 5/8
24	W10004930		Clip, U-Bend
25	3353993		Screw 10-16 X .690
26	356907		Rivet, Plastic
27	3393258	3373329D	Screw
28	3976380		Panel, Right Hand
29	3976382		Panel, Left Hand
30	3353949		Pin, Locator
31	18776		Lock, Front Top
32	90406		Cage Nut, 5/16-18

