


Whirlpool CAM2762RQ0 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Model: CAM2762RQ0
(White)

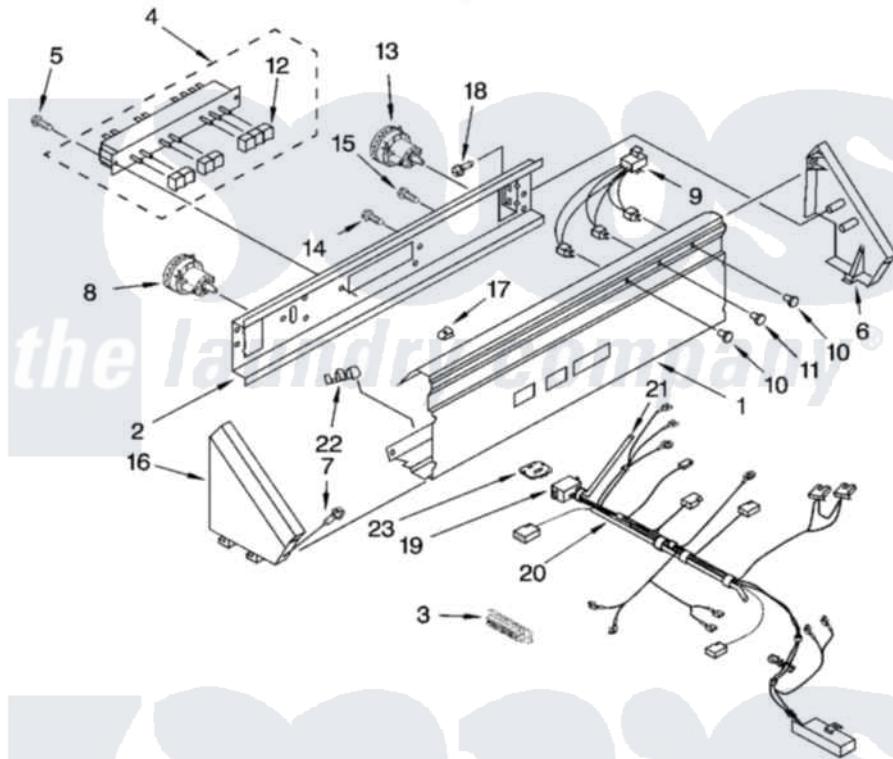

8579450

4

Whirlpool [Commercial Whirlpool CAM2762RQ0 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8577883			Panel, Console
2	3978858			Bracket, Control
3	3349494			Connector, Etc
4	8577359			Switch, Cycle Selector
5	3390646	W10139210		Screw, 8-18 X 5/16
6	3949740			End Cap
7	8281182			Screw, 8-18 X 1 1/4
8	8573825	W10351806		Switch-WL
9	3352457			Lights, Indicator
10	3348109			Lens Light
11	3348110			Lens, Yellow
12	8316433			Pushbutton
13	8524802	W10339319		Switch-WL
14	3400073			Screw, Ground
15	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
16	3949734	W10096320		Cap, End

17	689559		Nut, Push-In
18	97787	W10109200	Screw, Baffle Mounting
19	3957378		Harness, Wiring
20	8524801	353244	Hose, Pressure Switch
21	8524791	353244	Hose, Pressure Switch
22	357572	W10113937	Clip, Grounding
23	8578168		Control, Automatic Temp.

