


Whirlpool CAM2762TQ2 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: CAM2762TQ0, CAM2762TQ2

(White) (White)

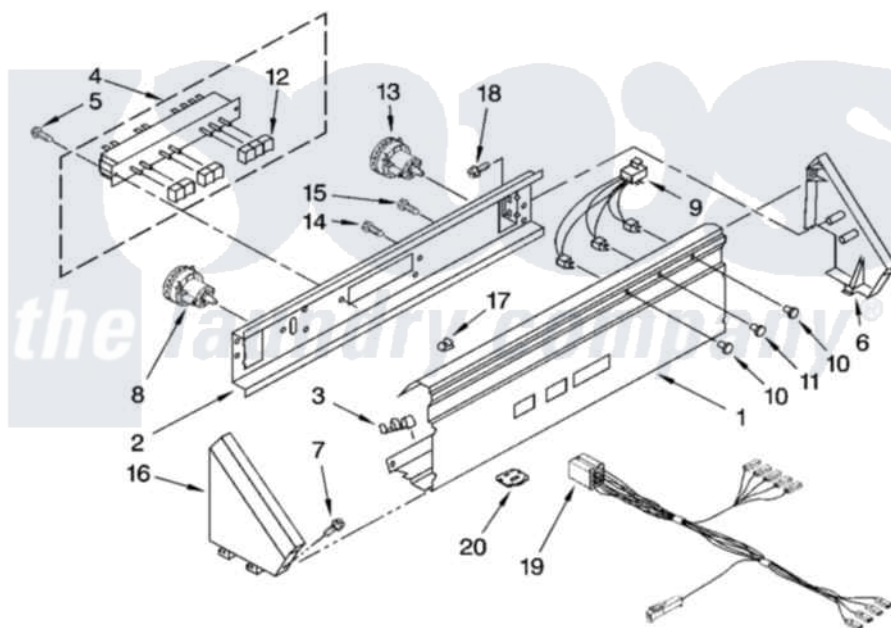

W10114745

4

Whirlpool [Commercial Whirlpool CAM2762TQ2 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8577883			Panel, Console
2	3978858			Bracket, Control
3	357572	W10113937		Clip, Grounding
4	8577359			Switch, Cycle Selector
5	3390646	W10139210		Screw, 8-18 X 5/16
6	3949740			End Cap
7	8281182			Screw, 8-18 X 1 1/4
8	8573825	W10351806		Switch-WL
9	3352457			Lights, Indicator
10	3348109			Lens Light
11	3348110			Lens, Yellow
12	8316433			Pushbutton
13	8524802	W10339319		Switch-WL
14	3400073			Screw, Ground
15	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
16	3949734	W10096320		Cap, End

17	689559	Nut, Push-In	
18	97787	W10109200	Screw, Baffle Mounting
19	W10138030	Harness, Console Wiring	
20	8578168	Control, Automatic Temp.	

