


Whirlpool CE2950XSW1 03 - TOP AND CONSOLE

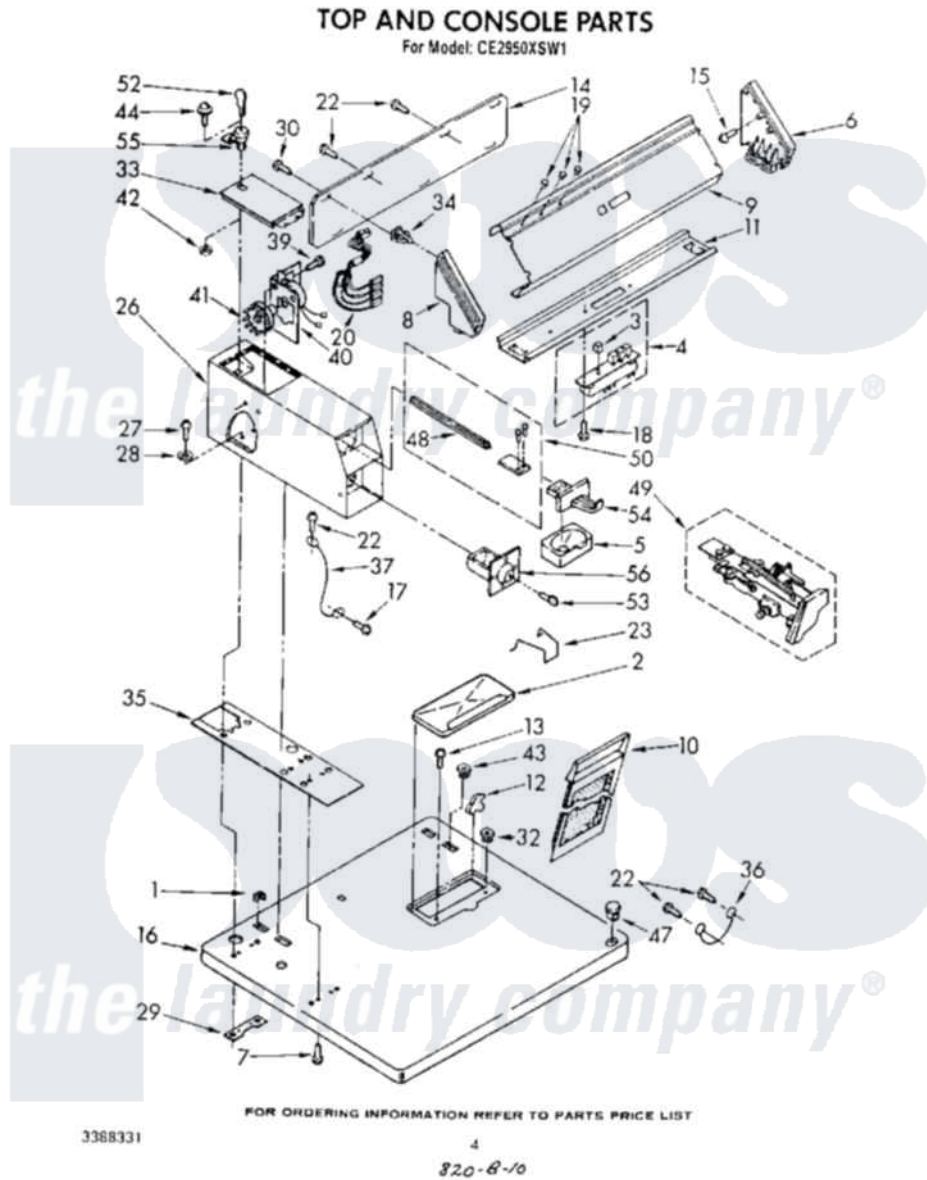

Whirlpool [Commercial Whirlpool CE2950XSW1 Dryer Parts](#) Parts Diagram 03 - TOP AND CONSOLE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	358472			Stop, Push-In Top
2	688150	697367		Cover
"	689313		Not Available	Cover, Lint Screen (Golden Harvest)
"	689310	697368		Cover
3	3348587			Button, Pushbutton
4	697558	3394075		Switch, Pushbutton
5	385421			Funnel, Coin
6	63795	285653		Endcap
7	98445			Screw, 10-16 X 3/4
8	3347718			End Cap
9	3387362			Panel, Control
10	690634	339392		Screen, Lint
11	3387361	3949733		Bracket, Control
12	339230	3978606		Hinge, Lint Lid
"	339229	W10044470		Hinge, RH
				Screw, For Mtn. Service

13	688983	487240	Screw, For Mtg. Service Capacitor
14	3387978		Panel, Rear Console
15	355326	Not Available	Screw, End Cap To Bracket (4)
16	3390464	3402300	Top
"	3390466	3397291	Top
"	3390465	3402301	Top
17	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	695239	965173	Screw, 8 X 3/8 Philps. Round Hd.
19	3348109		Lens Light
20	3388650	Not Available	Lights, Indicator (240 Volts)
22	343641	681414	Screw, 10AB X 1/2
23	3352295		Guide, Drawer
26	3387752	8527844	Case
"	3387754	Not Available	Case, Meter (Golden Harvest)
"	3387753	279995	Case
27	3349065		Bolt, Meter Case Mounting
28	138485		Washer, 5/16
29	3347825	3353813	Plate, Mounting
30	64211	388326	Screw, 8-18 X 1.25
32	98460		Nut, Push-In
33	385757	3351136	Service Door Assembly
"	385760	285880	Door
"	385758	Not Available	Door, Service (Almond)
34	689559		Nut, Push-In
35	3348850	3954812	Cushion, Meter Case
36	690853		Wire, Ground
37	340025	687133	Wire
39	339805		Screw, 10-32 X 3/16
40	3387975	279737	Timer
41	3387974		Timing Cam
"	339855		Timing Cam
"	343777		Timing Cam
42	90406		Cage Nut, 5/16-18
43	358473		Nut, Push-In
44	358409		Screw And Washer
47	387371		Lock, Plug Also Available

