


# Whirlpool CEM2750TQ2 01 - TOP AND CONSOLE PARTS

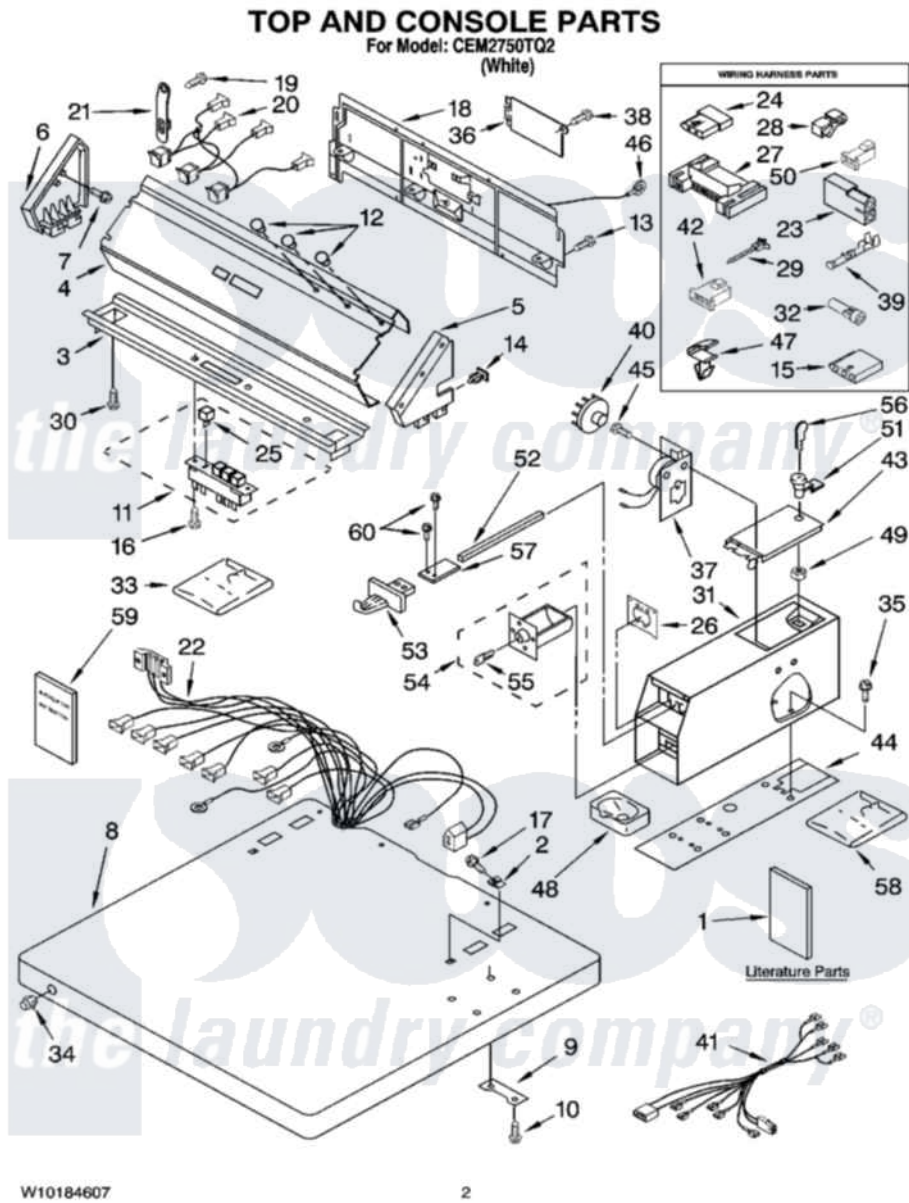

Whirlpool [Commercial Whirlpool CEM2750TQ2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10184582		Not Available	Instructions, Installation
"	<a href="#">8576821</a>			Wiring Diagram
"	<a href="#">W10184607</a>			Repair Parts List
2	<a href="#">357213</a>			Nut, Push-In
3	<a href="#">3361029</a>			Bracket, Control
4	<a href="#">8316634</a>			Panel, Control
5	8316516	<a href="#">W10096340</a>		Cap, End
6	<a href="#">3949734</a>	<a href="#">W10096320</a>		Cap, End
7	97787	<a href="#">W10109200</a>		Screw, Baffle Mounting
8	<a href="#">3954665</a>			Top
9	3347825	<a href="#">3353813</a>		Plate, Mounting
10	<a href="#">98445</a>			Screw, 10-16 X 3/4
11	<a href="#">8316437</a>	<a href="#">W10330137</a>		Switch, Pushbutton
12	<a href="#">3348109</a>			Lens Light
13	<a href="#">693995</a>			Screw, Hex Head
14	<a href="#">689559</a>			Nut, Push-In

15	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
16	303921	<a href="#">489128</a>	Screw, 8-32 X 27/64
17	<a href="#">8281182</a>		Screw, 8-18 X 1 1/4
18	<a href="#">3978608</a>		Panel, Rear
19	3390647	<a href="#">488729</a>	Screw
20	<a href="#">8316640</a>		Lights, Indicator Assembly
21	8318255	<a href="#">8568314</a>	Strap, Console
22	<a href="#">8576528</a>		Harness, Main
23	<a href="#">717252</a>		Receptacle, Terminal
24	<a href="#">717253</a>		Receptacle
25	<a href="#">8316433</a>		Pushbutton
26	3954761	<a href="#">279950</a>	Funnel
27	<a href="#">3395683</a>		Receptacle, Multi-Terminal
28	357572	<a href="#">W10113937</a>	Clip, Grounding
29	<a href="#">3391018</a>		Tie Cable
30	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8316527	<a href="#">3406994</a>	Case, Meter
32	<a href="#">351297</a>		Plug, Harness
33	<a href="#">3954807</a>		Kit, Vertical 8-Coin Coin Mechanism Parts, May be Ordered From Whirlpool Or The Vend
34	<a href="#">387371</a>		Lock, Plug Also Available
"	<a href="#">358290</a>		Top Lock
35	<a href="#">3349065</a>		Bolt, Meter Case Mounting
36	8576583	<a href="#">W10119283</a>	Cover, Terminal Block
37	<a href="#">W10045440</a>		Timer
38	3390814	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
39	<a href="#">94614</a>		Terminal
40	<a href="#">3387974</a>		Timing Cam
"	<a href="#">339855</a>		Timing Cam
"	<a href="#">343777</a>		Timing Cam
"	<a href="#">339854</a>		Timing Cam
"	<a href="#">339853</a>		Timing Cam
41	<a href="#">3401682</a>		Harness, Timer
42	<a href="#">691707</a>		Receptacle, 3-Way
43	<a href="#">3351136</a>		Service Door Assembly
44	<a href="#">3954812</a>		Cushion, Meter Case
45	<a href="#">339805</a>		Screw, 10-32 X 3/16
46	3398893	<a href="#">3395559</a>	Wire
47	<a href="#">3394427</a>		Clip-Harness
48	<a href="#">385421</a>		Funnel, Coin
49	<a href="#">90406</a>		Cage Nut, 5/16-18
50	<a href="#">351296</a>		Receptacle
"	BLANK	Not Available	Following Parts Supplied on Whirlpool Coin Equipped Models Only.
51	8316526	<a href="#">4396668</a>	Lock-Cam
52	8318517	<a href="#">8576635</a>	Bolt
53	<a href="#">8316520</a>		Slide Mechanism Inserts
"	8316264	<a href="#">4396666</a>	Insert
"	8316265	<a href="#">4396667</a>	Insert
54	8316525	<a href="#">4396671</a>	Box

55	BLANK		Not Available	Key (Money Box) (When Ordering, Specify Vendor and Key Number)
56	BLANK		Not Available	Key (Service Door) (When Ordering, Specify Vendor and Key Number)
57	<a href="#">8316523</a>			Extension
58	8316524	<a href="#">4396670</a>		Kit
59	<a href="#">8316532</a>			Installation Instructions Coin Kit
60	<a href="#">3400086</a>			Screw, 10-32 X 3/8

