


Whirlpool CEM2760KQ3 01 - TOP AND CONSOLE PARTS

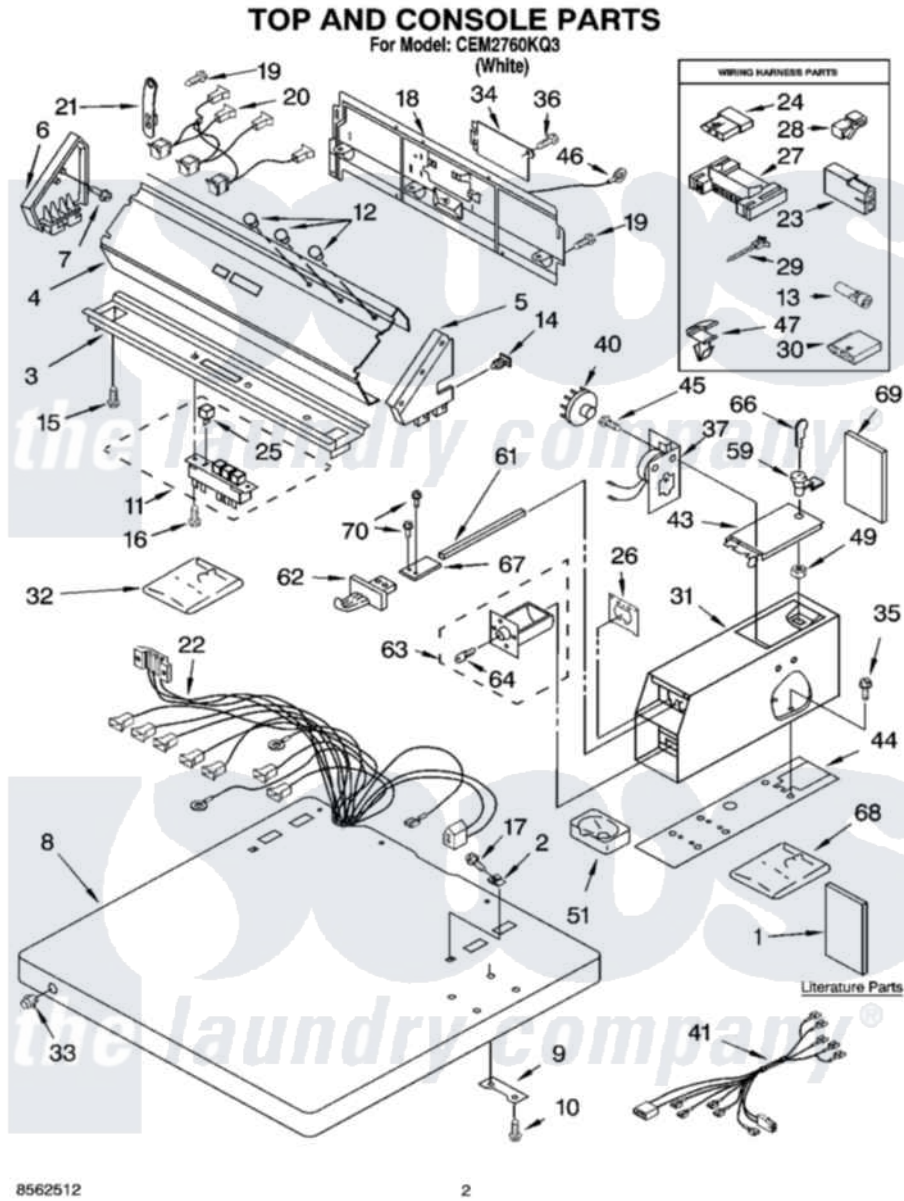

Whirlpool Commercial Whirlpool CEM2760KQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8527795			Literature Parts
"	LIT8533569			Literature Parts
"	LIT8562512		Not Available	Literature Parts (Service Parts List)
2	357213			Nut, Push-In
3	3361029			Bracket, Control
4	8316634			Panel, Control
5	8316516	W10096340		Cap, End
6	3949734	W10096320		Cap, End
7	97787	W10109200		Screw, Baffle Mounting
8	3954665			Top
9	3347825	3353813		Plate, Mounting
10	98445			Screw, 10-16 X 3/4
11	8316437	W10330137		Switch, Pushbutton
12	3348109			Lens Light
13	351297			Plug, Harness
14	689559			Nut, Push-In

15	3390646	W10139210	Screw, 8-18 X 5/16
16	303921	489128	Screw, 8-32 X 27/64
17	8281182		Screw, 8-18 X 1 1/4
18	3978608		Panel, Rear
19	3390647	488729	Screw
20	8316640		Lights, Indicator Assembly
21	8318255	8568314	Strap, Console
22	8529876	8576528	Harness, Main
23	717252		Receptacle, Terminal
24	717253		Receptacle
25	8316433		Pushbutton
26	3954761	279950	Funnel
27	3395683		Receptacle, Multi-Terminal
28	357572	W10113937	Clip, Grounding
29	3391018		Tie Cable
30	3936144		Do-It-Yourself Repair Manuals
31	3406994		Case, Meter
32	3954807		Kit, Vertical 8-Coin Coin Mechanism Parts, May be Ordered From Whirlpool Or The Vend
33	387371		Lock, Plug Also Available
"	358290		Top Lock
34	8317342	W10119283	Cover, Terminal Block
35	3349065		Bolt, Meter Case Mounting
36	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
37	3387975	279737	Timer
40	3387974		Timing Cam
"	339855		Timing Cam
"	343777		Timing Cam
"	339854		Timing Cam
"	339853		Timing Cam
41	3401682		Harness, Timer
43	3351136		Service Door Assembly
44	3954812		Cushion, Meter Case
45	339805		Screw, 10-32 X 3/16
46	3398893	3395559	Wire
47	3394427		Clip-Harness
49	90406		Cage Nut, 5/16-18
51	385421		Funnel, Coin
59	8316526	4396668	Lock-Cam
61	8318517	8576635	Bolt
62	8316520		Slide Mechanism Inserts
"	8316264	4396666	Insert
"	8316265	4396667	Insert
63	8316525	4396671	Box
64	BLANK	Not Available	Key (Money Box) (When Ordering, Specify Vendor and Key Number)
66	BLANK	Not Available	Key (Service Door) (When Ordering, Specify Vendor and Key Number)
67	8316523		Extension
68	8316524	4396670	Kit

69	8316532		Installation Instructions Coin Kit
70	3400086		Screw, 10-32 X 3/8
"	B0592401	Not Available	THERMOSTAT
"	C4889201	Not Available	LINE- SUCT

