


Whirlpool CEP2760KQ0 03 - CABINET

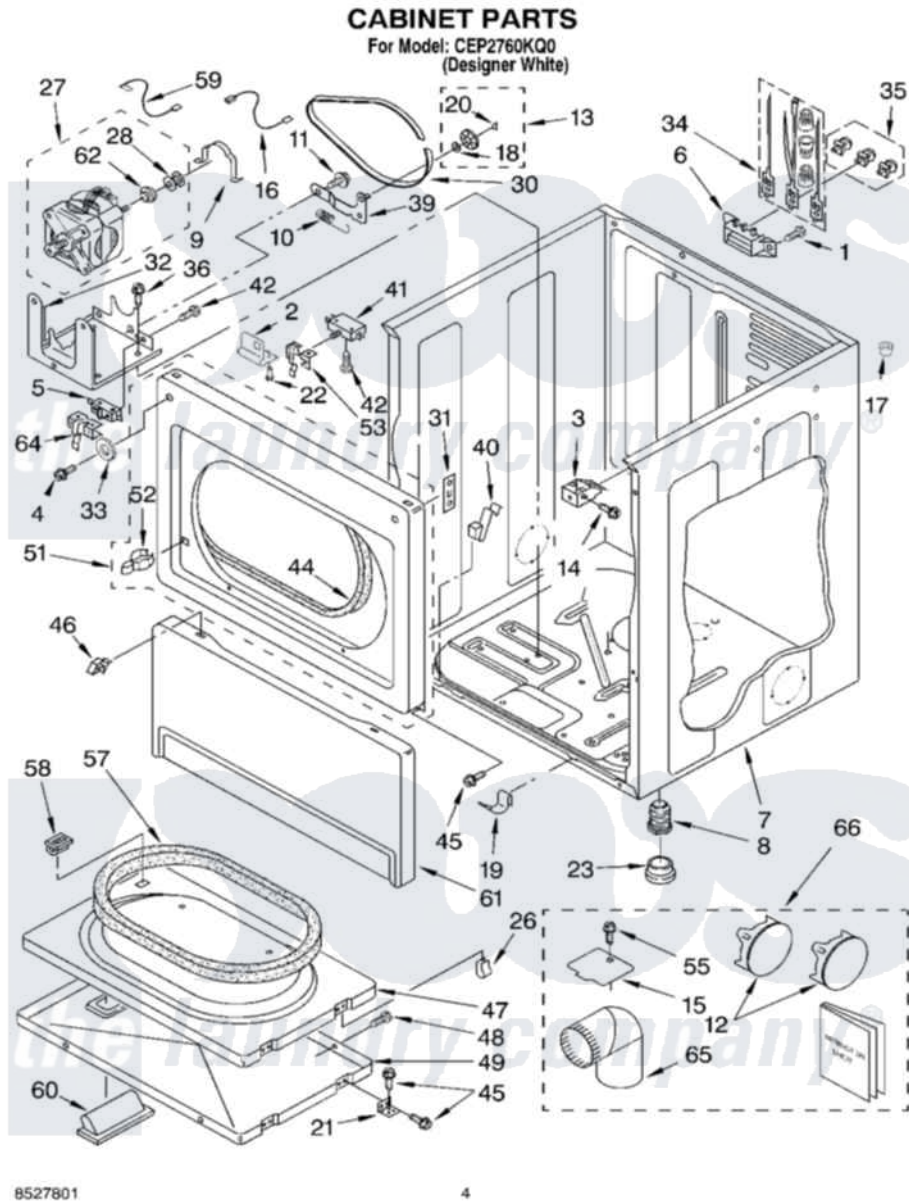

Whirlpool [Commercial Whirlpool CEP2760KQ0 Dryer Parts](#) Parts Diagram 03 - CABINET
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3393008	308685		Side Trim)
2	3353948			Bracket, Lock
3	3391846			Clip, Front Panel
4	3393258	3373329D		Screw
5	3394881	279782		Switch-Lid
6	3397659			Block, Terminal
7	8310656			Cabinet
8	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	697750	W10470674		Dryer Exhaust Kit
13	3388672	279640		Pulley-ldr
14	3391915	681615		Screw
15	3394331			Plate Cover

16	3394081		Wire, Broken Belt Switch
17	356674		Cone, Wedge
18	233520		Washer, Thrust
19	297092		Clip
20	690997		Washer, Thrust
21	3389247		Hinge And Pin Assembly
22	63554		Rivet
23	3391943		Boot, Foot
26	3389249		Nut, Inner Door
27	661656	W10438970	Motor-Drve
28	3389627	W10299847	Pulley-Motor
30	3387610	661570	Belt
31	3390902		Clip, Door Hinge
32	3387118		Bracket, Motor
33	3392186	4159590	Washer
34	279318		Terminal Tinned And Brass Panel
35	279393		Terminal Block Screw Kit
36	3390663	681414	Screw, 10AB X 1/2
39	3388674	W10118756	Idler Bracket
40	3388600		Clip, Lint Duct
41	347207	279347	Switch-Lid
42	98129		Screw, 6-20 X 1 1/16
44	3387242		Seal, Front Panel
45	342055	488627	Screw
46	3388229		Retainer, Toe Panel
47	3392563	280083	Door-Rear
48	694091		Trim, Side Right Hand
49	3387872		Door, Front
51	3393081	279722	Panel
52	696144	279570	Latch
53	691581		Lever, Door Switch
55	693995		Screw, Hex Head
57	3390735		Seal, Door
58	3392538	279570	Latch
59	3398948		Wire, Jumper
60	3389522		Handle, Door
61	697215	3406797	Toe Panel
62	3393657		Restrainer, Belt
64	3391408	8066120	Lever, Door Switch
65	279731	49026	4" - 90° Elbow
66	279818	W10470674	Dryer Exhaust Kit

the laundry company[®]