


Whirlpool CG2951XSW2 02 - TOP AND CONSOLE

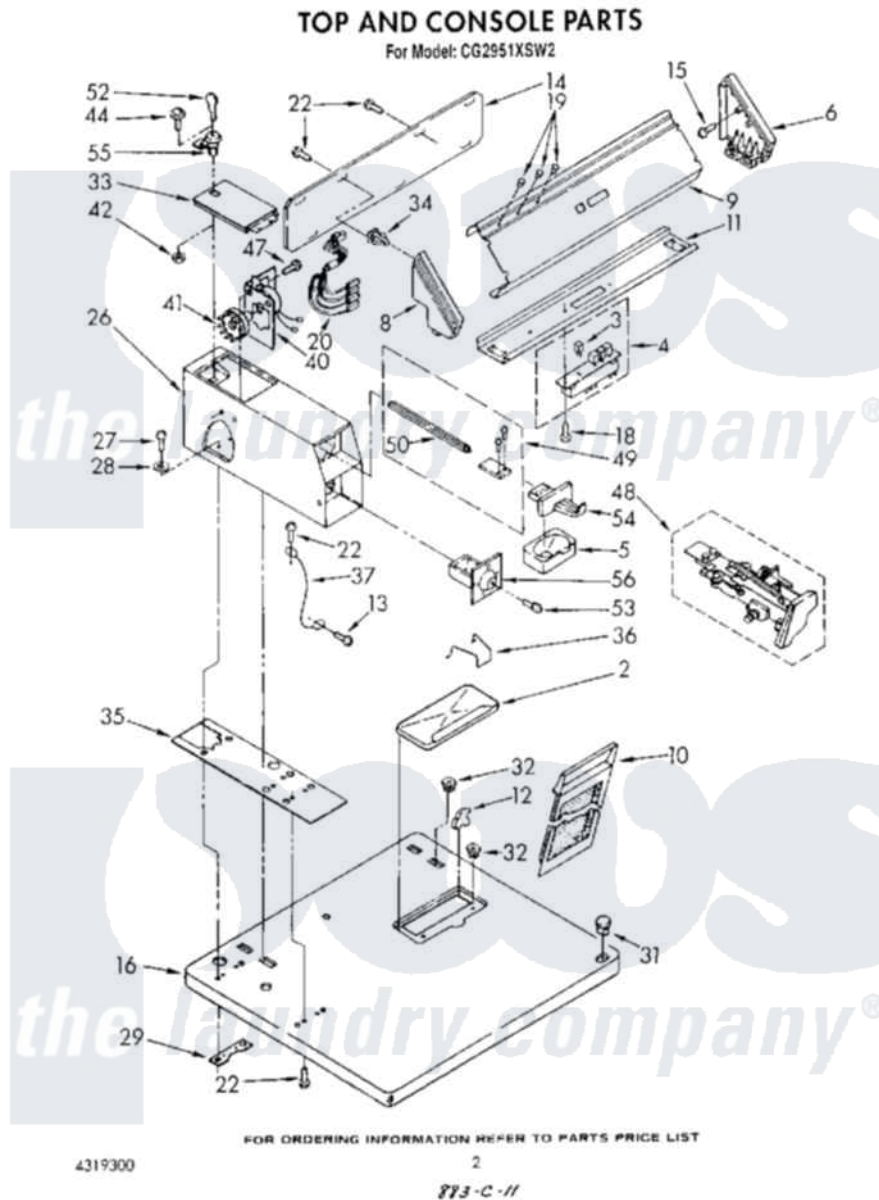

Whirlpool [Commercial Whirlpool CG2951XSW2 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	688150	697367		Cover
"	689310	697368		Cover
3	3348587			Button, Pushbutton
4	697558	3394075		Switch, Pushbutton
5	385421			Funnel, Coin
6	63795	285653		Endcap
8	3347710	3347718		End Cap
9	3387362			Panel, Control
10	690634	339392		Screen, Lint
11	4319335	3949733		Bracket, Control
12	339230	3978606		Hinge, Lint Lid
"	339229	W10044470		Hinge, RH
13	339805			Screw, 10-32 X 3/16
14	4319339	3387978		Panel, Rear Console
15	355326		Not Available	Screw, End Cap To Bracket (4)
16	3390464	3402300		Top

"	3390465	3402301	Top
18	9424101	965173	Screw, 8 X 3/8 Phlps. Round Hd.
19	3348109		Lens Light
20	3388650	Not Available	Lights, Indicator (240 Volts)
22	343641	681414	Screw, 10AB X 1/2
26	4319336	8527844	Case
"	4319346	279995	Case
27	4319338	Not Available	Bolt, 5/16-24 x 1
28	4319337		Washer, 5/16
29	3347825	3353813	Plate, Mounting
31	387371		Lock, Plug Also Available
32	98460		Nut, Push-In
33	4319340	3351136	Service Door Assembly
"	4319341	Not Available	Door, Service (Almond)
34	689559		Nut, Push-In
35	3348850	3954812	Cushion, Meter Case
36	3352295		Guide, Drawer
37	690853		Wire, Ground
40	3387975	279737	Timer
41	3387974		Timing Cam
"	339855		Timing Cam
"	343777		Timing Cam
42	4319352		Nut, Cage
44	358409		Screw And Washer
47	339805		Screw, 10-32 X 3/16

the laundry company[®]

the laundry company[®]