


# Whirlpool CG2951XYW0 02 - TOP AND CONSOLE

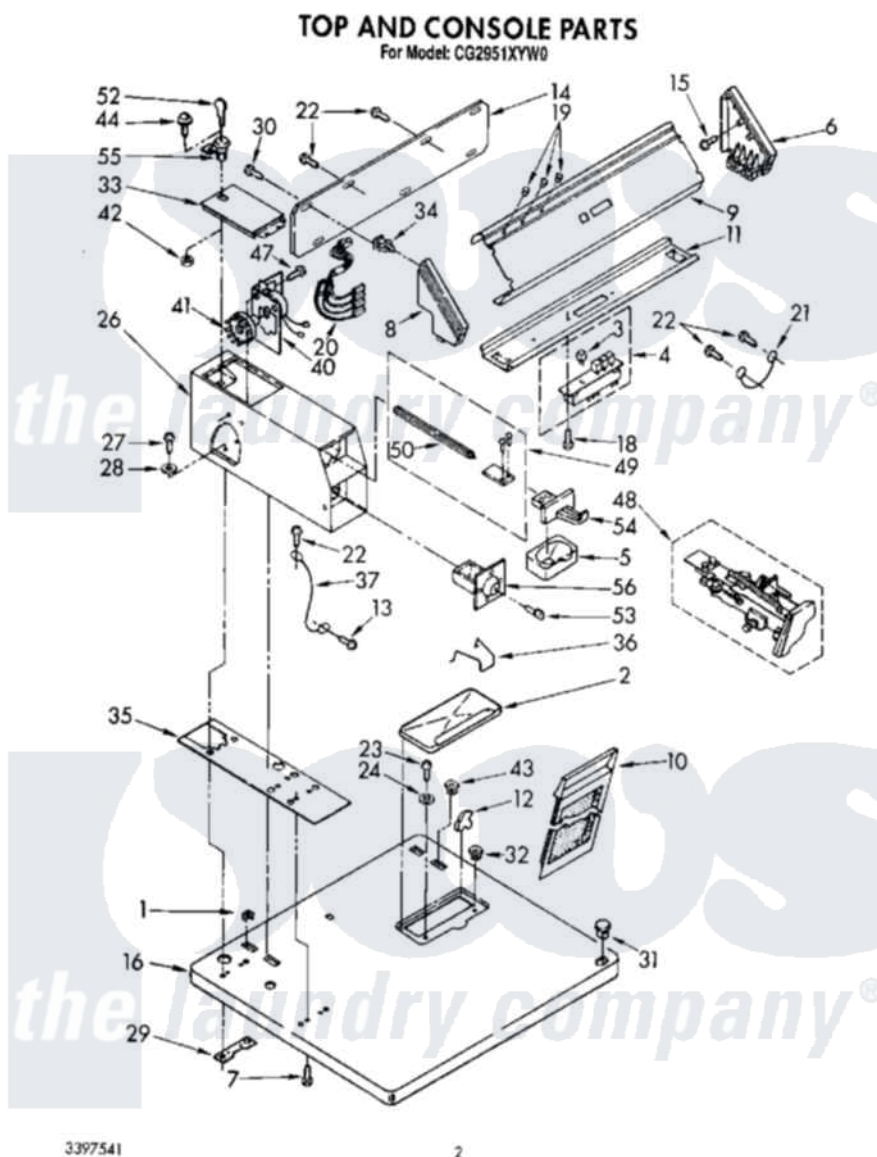

Whirlpool [Commercial Whirlpool CG2951XYW0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">358472</a>			Stop, Push-In Top
2	688150	<a href="#">697367</a>		Cover
"	689310	<a href="#">697368</a>		Cover
"	689313		Not Available	Cover, Lint Screen (Golden Harvest)
3	<a href="#">3348587</a>			Button, Pushbutton
4	3394732	<a href="#">3394075</a>		Switch, Pushbutton
5	<a href="#">385421</a>			Funnel, Coin
6	63795	<a href="#">285653</a>		Endcap
7	<a href="#">98445</a>			Screw, 10-16 X 3/4
8	3347710	<a href="#">3347718</a>		End Cap
9	3393405	<a href="#">3387362</a>		Panel, Control
10	690634	<a href="#">339392</a>		Screen, Lint
11	3392280	<a href="#">3949733</a>		Bracket, Control
12	339230	<a href="#">3978606</a>		Hinge, Lint Lid
"	339229	<a href="#">W10044470</a>		Hinge, RH
13	<a href="#">339805</a>			Screw, 10-32 X 3/16

14	<a href="#">3387978</a>		Panel, Rear Console
15	355326	Not Available	Screw, End Cap To Bracket (4)
16	3397289	<a href="#">3402300</a>	Top
"	3397290	<a href="#">3402301</a>	Top
"	<a href="#">3397291</a>		Top
18	9424101	<a href="#">965173</a>	Screw, 8 X 3/8 Phlps. Round Hd.
19	<a href="#">3348109</a>		Lens Light
20	3388650	Not Available	Lights, Indicator (240 Volts)
21	<a href="#">690853</a>		Wire, Ground
22	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
23	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
24	237446	<a href="#">487596</a>	Washer
26	3395378	<a href="#">8527844</a>	Case
"	3395379	<a href="#">279995</a>	Case
"	3395380	Not Available	Case, Meter (Golden Harvest)
27	<a href="#">3349065</a>		Bolt, Meter Case Mounting
28	<a href="#">138485</a>		Washer, 5/16
29	3347825	<a href="#">3353813</a>	Plate, Mounting
30	64211	<a href="#">388326</a>	Screw, 8-18 X 1.25
31	<a href="#">387371</a>		Lock, Plug Also Available
32	<a href="#">98460</a>		Nut, Push-In
33	<a href="#">3351136</a>		Service Door Assembly
"	3351137	Not Available	Door, Service (For Almond Model)
"	3351138	<a href="#">285880</a>	Door
34	<a href="#">689559</a>		Nut, Push-In
35	3348850	<a href="#">3954812</a>	Cushion, Meter Case
36	<a href="#">3352295</a>		Guide, Drawer
37	340025	<a href="#">687133</a>	Wire
40	3387975	<a href="#">279737</a>	Timer
41	<a href="#">3387974</a>		Timing Cam
"	<a href="#">343777</a>		Timing Cam
42	<a href="#">90406</a>		Cage Nut, 5/16-18
43	<a href="#">358473</a>		Nut, Push-In
44	<a href="#">358409</a>		Screw And Washer
47	<a href="#">339805</a>		Screw, 10-32 X 3/16

