


# Whirlpool CG2951XYW3 01 - TOP AND CONSOLE

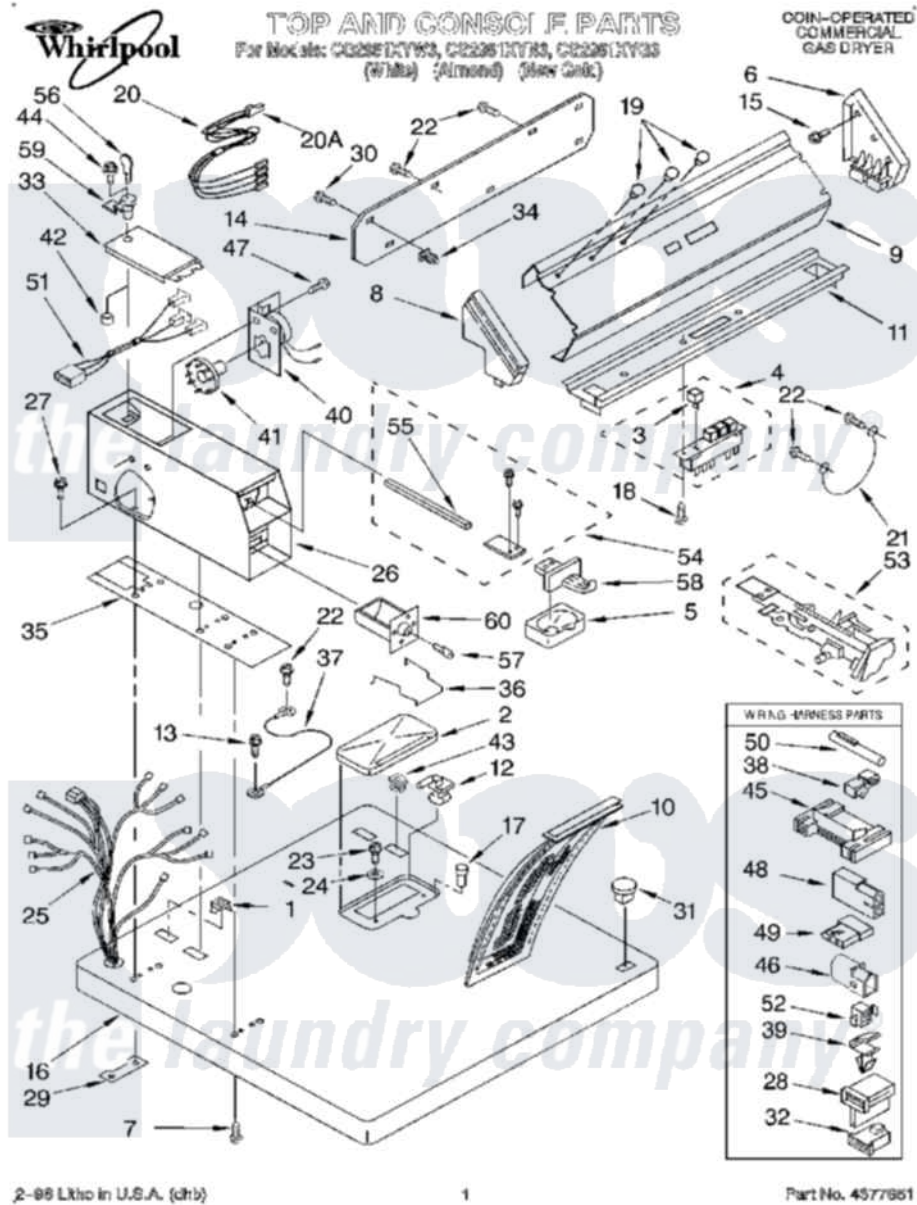

Whirlpool [Commercial Whirlpool CG2951XYW3 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">358472</a>			Stop, Push-In Top
2	691205		Not Available	Cover, Lint Screen
3	<a href="#">3348587</a>			Button, Pushbutton
4	<a href="#">3401851</a>			Switch, Pushbutton
5	<a href="#">385421</a>			Funnel, Coin
6	63795	<a href="#">285653</a>		Endcap
7	<a href="#">98445</a>			Screw, 10-16 X 3/4
8	3347710	<a href="#">3347718</a>		End Cap
9	3393405	<a href="#">3387362</a>		Panel, Control
10	<a href="#">339392</a>			Screen, Lint
11	3398113	<a href="#">3949733</a>		Bracket, Control
12	691194	<a href="#">3978606</a>		Hinge, Lint Lid
"	691193	<a href="#">W10044470</a>		Hinge, RH
13	<a href="#">339805</a>			Screw, 10-32 X 3/16
14	<a href="#">3387978</a>			Panel, Rear Console
15	97787	<a href="#">W10109200</a>		Screw, Baffle Mounting

16	<a href="#">3402300</a>		Top
"	<a href="#">3402301</a>		Top
"	<a href="#">3402302</a>		Top (New Gold)
17	297535	<a href="#">17258</a>	Bumper
18	9424101	<a href="#">965173</a>	Screw, 8 X 3/8 Phlps. Round Hd.
19	<a href="#">3348109</a>		Lens Light
20	<a href="#">3401177</a>		Light, Indicator Assembly
"	<a href="#">351297</a>		Plug, Harness
21	<a href="#">690853</a>		Wire, Ground
22	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
23	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
24	237446	<a href="#">487596</a>	Washer
25	<a href="#">3401738</a>		Harness, Wiring
26	3395378	<a href="#">8527844</a>	Case
"	3395379	<a href="#">279995</a>	Case
"	3395380		Not Available Case, Meter (Golden Harvest)
27	<a href="#">3349065</a>		Bolt, Meter Case Mounting
28	<a href="#">3403499</a>		Connector, 2-Postion
29	3347825	<a href="#">3353813</a>	Plate, Mounting
30	64211	<a href="#">388326</a>	Screw, 8-18 X 1.25
31	<a href="#">387371</a>		Lock, Plug Also Available
32	<a href="#">3403498</a>		Connector, 3-Position
33	<a href="#">3351136</a>		Service Door Assembly
"	3351137		Not Available Door, Service (For Almond Model)
"	3351138	<a href="#">285880</a>	Door
34	<a href="#">689559</a>		Nut, Push-In
35	3348850	<a href="#">3954812</a>	Cushion, Meter Case
36	<a href="#">3352295</a>		Guide, Drawer
37	340025	<a href="#">687133</a>	Wire
38	<a href="#">689180</a>		Clip, Harness
39	<a href="#">3394427</a>		Clip-Harness
40	3387975	<a href="#">279737</a>	Timer
41	<a href="#">3387974</a>		Timing Cam
"	<a href="#">343777</a>		Timing Cam
42	<a href="#">90406</a>		Cage Nut, 5/16-18
43	<a href="#">358473</a>		Nut, Push-In
44	<a href="#">358409</a>		Screw And Washer
45	<a href="#">3395683</a>		Receptacle, Multi-Terminal
46	<a href="#">342529</a>		Cap, Terminal (6-Way) (Uses Terminal 94614)
47	<a href="#">339805</a>		Screw, 10-32 X 3/16
48	<a href="#">717252</a>		Receptacle, Terminal
49	<a href="#">717253</a>		Receptacle
50	<a href="#">351296</a>		Receptacle
51	<a href="#">3401126</a>		Harness, Timer
52	<a href="#">342529</a>		Cap, Terminal (6-Way) (Uses Terminal 94614)